

# Dell Precision™ Workstation 490

## Quick Reference Guide

**Model DCTA**

[www.dell.com](http://www.dell.com) | [support.dell.com](http://support.dell.com)

## Notes, Notices, and Cautions



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



**NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



**CAUTION:** A CAUTION indicates a potential for property damage, personal injury, or death.

## Abbreviations and Acronyms

For a complete list of abbreviations and acronyms, see the Glossary in your *User's Guide*.

If you purchased a Dell™ n Series computer, any references in this document to Microsoft® Windows® operating systems are not applicable.

---

Information in this document is subject to change without notice.

© 2006 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo and *Dell Precision* are trademarks of Dell Inc.; *Intel*, *Xeon*, and *Pentium* are registered trademarks of Intel Corporation; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model DCTA

January 2006

P/N PD055

Rev. A00

# Contents

<b>Finding Information</b> . . . . .	<b>5</b>
<b>Setting Up Your Computer (Tower Orientation)</b> . . . . .	<b>9</b>
<b>Setting Up Your Computer (Desktop Orientation)</b> . . . . .	<b>14</b>
<b>About Your Computer</b> . . . . .	<b>19</b>
Front View (Tower Orientation) . . . . .	19
Back View (Tower Orientation) . . . . .	21
Back Panel Connectors . . . . .	22
Front View (Desktop Orientation) . . . . .	24
Back View (Desktop Orientation) . . . . .	25
Inside View . . . . .	26
Inside View – Hard Drive Bay Rotated Out . . . . .	27
System Board Components . . . . .	28
Cable Colors . . . . .	29
<b>Locating Your User's Guide</b> . . . . .	<b>29</b>
<b>Removing the Computer Cover</b> . . . . .	<b>30</b>
<b>Caring for Your Computer</b> . . . . .	<b>32</b>
<b>Solving Problems</b> . . . . .	<b>32</b>
Troubleshooting Tips . . . . .	32
Resolving Software and Hardware Incompatibilities . . . . .	32
Using Microsoft® Windows® XP System Restore . . . . .	33
Using the Last Known Good Configuration . . . . .	34
Dell Diagnostics . . . . .	35
Before You Start Testing . . . . .	36
<b>Beep Codes</b> . . . . .	<b>36</b>
Error Messages . . . . .	38
<b>Diagnostic Lights</b> . . . . .	<b>38</b>
Diagnostic Light Codes Before POST . . . . .	38
Diagnostic Light Codes During POST . . . . .	40
<b>Frequently Asked Questions</b> . . . . .	<b>43</b>
<b>Index</b> . . . . .	<b>45</b>



# Finding Information



**NOTE:** Some features or media may be optional and may not ship with your computer. Some features or media may not be available in certain countries.



**NOTE:** Additional information may ship with your computer.

What Are You Looking For?	Find It Here
<ul style="list-style-type: none"><li>• A diagnostic program for my computer</li><li>• Drivers for my computer</li><li>• My computer documentation</li><li>• My device documentation</li><li>• Desktop System Software (DSS)</li></ul>	<p><b>Drivers and Utilities CD (also known as Resource CD)</b></p>  <p>Documentation and drivers are already installed on your computer. You can use the CD to reinstall drivers, run the Dell Diagnostics, or access your documentation. Readme files may be included on your CD to provide last-minute updates about technical changes to your computer or advanced technical-reference material for technicians or experienced users.</p> <p><b>NOTE:</b> Drivers and documentation updates can be found at <a href="http://support.dell.com">support.dell.com</a>.</p>
<ul style="list-style-type: none"><li>• How to set up my computer</li><li>• How to care for my computer</li><li>• Basic troubleshooting information</li><li>• How to run the Dell Diagnostics</li><li>• Error codes and diagnostic lights</li><li>• How to remove and install parts</li><li>• How to open my computer cover</li></ul>	<p><b>Quick Reference Guide</b></p>  <p><b>NOTE:</b> This document is available as a PDF at <a href="http://support.dell.com">support.dell.com</a>.</p>

What Are You Looking For?	Find It Here
<ul style="list-style-type: none"> <li>• Warranty information</li> <li>• Terms and Conditions (U.S. only)</li> <li>• Safety instructions</li> <li>• Regulatory information</li> <li>• Ergonomics information</li> <li>• End User License Agreement</li> </ul>	<b>Dell™ Product Information Guide</b>
	
<ul style="list-style-type: none"> <li>• How to remove and replace parts</li> <li>• Specifications</li> <li>• How to configure system settings</li> <li>• How to troubleshoot and solve problems</li> </ul>	<b>User's Guide</b>
<ul style="list-style-type: none"> <li>• Service Tag and Express Service Code</li> <li>• Microsoft Windows License Label</li> </ul>	<i>Microsoft® Windows® XP Help and Support Center</i>
	<p><b>1</b> Click the Start button and click <b>Help and Support</b>  <b>2</b> Click <b>User's and system guides</b> and click <b>User's Guide</b></p>
	<p>The <i>User's Guide</i> is also available on the <i>Drivers and Utilities</i> CD.</p>
	<b>Service Tag and Microsoft® Windows® License</b>
	<p>These labels are located on your computer.</p>
	<ul style="list-style-type: none"> <li>• Use the Service Tag to identify your computer when you use <a href="http://support.dell.com">support.dell.com</a> or contact technical support.</li> <li>• Enter the Express Service Code to direct your call when contacting technical support.</li> </ul>  

What Are You Looking For?	Find It Here
<ul style="list-style-type: none"> <li>• Solutions — Troubleshooting hints and tips, articles from technicians, and online courses, frequently asked questions</li> <li>• Community — Online discussion with other Dell customers</li> <li>• Upgrades — Upgrade information for components, such as memory, the hard drive, and the operating system</li> <li>• Customer Care — Contact information, service call and order status, warranty, and repair information</li> <li>• Service and support — Service call status and support history, service contract, online discussions with technical support</li> <li>• Reference — Computer documentation, details on my computer configuration, product specifications, and white papers</li> <li>• Downloads — Certified drivers, patches, and software updates</li> <li>• Desktop System Software (DSS) — If you reinstall the operating system for your computer, you should reinstall the DSS utility prior to installing any of the drivers. DSS provides critical updates for your operating system and support for Dell™ 3.5-inch USB floppy drives, optical drives, and USB devices. DSS is necessary for correct operation of your Dell computer. The software automatically detects your computer and operating system and installs the updates appropriate for your configuration.</li> <li>• How to use Windows XP</li> <li>• How to work with programs and files</li> <li>• Documentation for devices (such as modem)</li> </ul>	<p><b>Dell Support Website — <a href="http://support.dell.com">support.dell.com</a></b></p> <p><b>NOTE:</b> Select your region or business segment to view the appropriate support site.</p> <p><b>NOTE:</b> Corporate, government, and education customers can also use the customized Dell Premier support website at <a href="http://premier.support.dell.com">premier.support.dell.com</a>. The website may not be available in all regions.</p> <p><b>Windows Help and Support Center</b></p> <ol style="list-style-type: none"> <li>1 Click the Start button and click Help and Support.</li> <li>2 Type a word or phrase that describes your problem and click the arrow icon.</li> <li>3 Click the topic that describes your problem.</li> <li>4 Follow the instructions on the screen.</li> </ol>

What Are You Looking For?	Find It Here
<ul style="list-style-type: none"> <li>• How to reinstall my operating system</li> </ul>	<b>Operating System CD</b>
	<p>The operating system is already installed on your computer. To reinstall your operating system, use the <i>Operating System CD</i>. See your <i>User's Guide</i> for instructions. After you reinstall your operating system, use the <i>Drivers and Utilities CD (Resource CD)</i> to reinstall drivers for the devices that came with your computer. Your operating system product key label is located on your computer.</p>

**NOTE:** The color of your CD varies based on the operating system you ordered.

**NOTE:** The *Operating System CD* may be optional and may not ship with your computer.

**Dell Supported Linux Sites**

- [Linux.dell.com](http://Linux.dell.com)
- [Lists.us.dell.com/mailman/listinfo/linux-precision](http://Lists.us.dell.com/mailman/listinfo/linux-precision)


# Setting Up Your Computer (Tower Orientation)

**!** **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

You must complete all steps to properly set up your computer.

1

Connect the keyboard and the mouse.

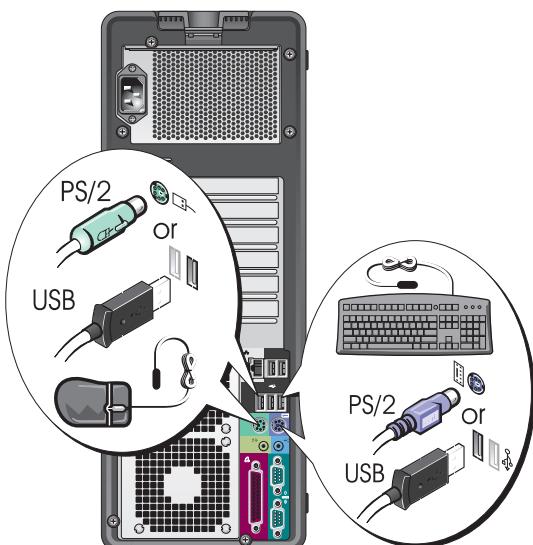

2


Connect the modem or the network cable.



**NOTICE:** Do not connect a modem cable to the network adapter. Voltage from telephone communications can damage the network adapter.



**NOTE:** If your computer has a network card installed, connect the network cable to the card.

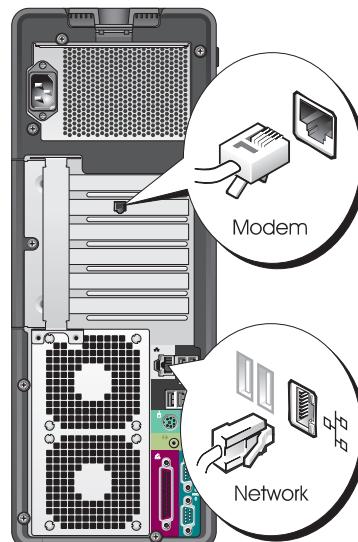


3

Connect the monitor.

Depending on your graphics card, you can connect your monitor in various ways.



**NOTE:** You may need to use the provided adapter or cable to connect your monitor to the computer.

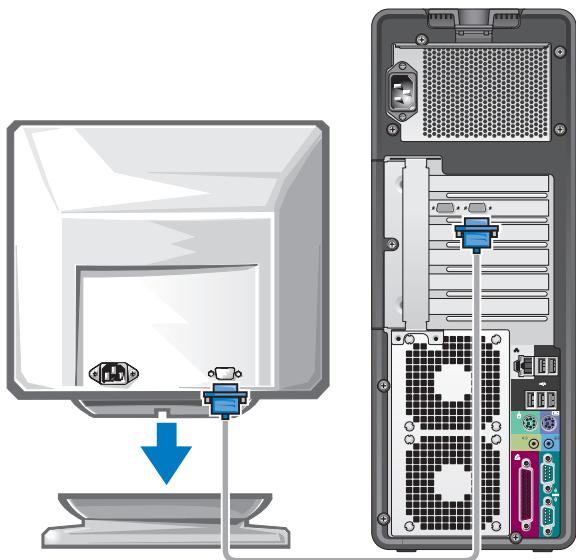


---

**For single- and dual-monitor capable cards with a single connector**


---

One VGA adapter:

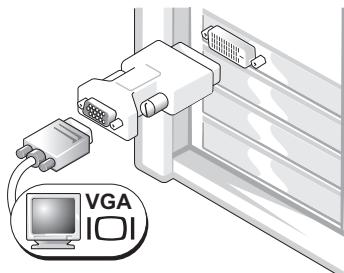


Use the VGA adapter when you have a single-monitor graphics card and you want to connect your computer to a VGA monitor.

Dual VGA Y cable adapter:

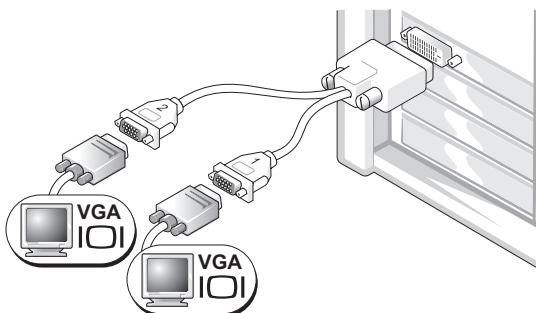

Use the appropriate Y cable when your graphics card has a single connector and you want to connect your computer to one or two VGA monitors.

Dual DVI Y cable adapter:

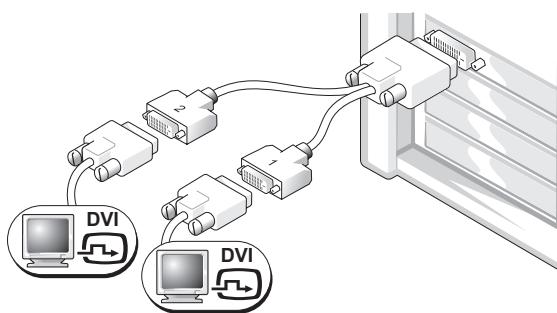

Use the appropriate Y cable when your graphics card has a single connector and you want to connect your computer to one or two DVI monitors.

---


The dual-monitor cable is color-coded; the blue connector is for the primary monitor, and the black connector is for the second monitor. To enable dual-monitor support, both monitors must be attached to the computer when you start the computer.

---


#### **For dual-monitor capable cards with one DVI connector and one VGA connector**

---

One DVI connector and one VGA connector:

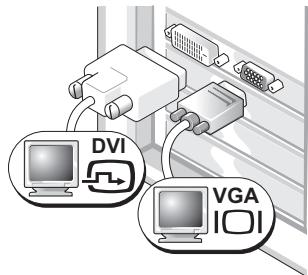

Two VGA connectors with one VGA adapter:

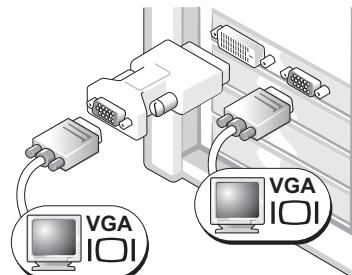

Use the appropriate connector(s) when you want to connect your computer to one or two monitors.

Use the VGA adapter when you want to connect your computer to two VGA monitors.


---

---


#### **For dual-monitor capable cards with two DVI connectors**

---


Two DVI connectors:

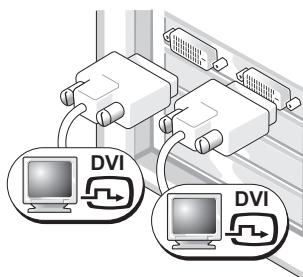

Two DVI connectors with one VGA adapter:

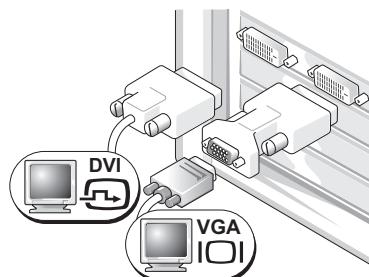

Two DVI connectors with two VGA adapters:

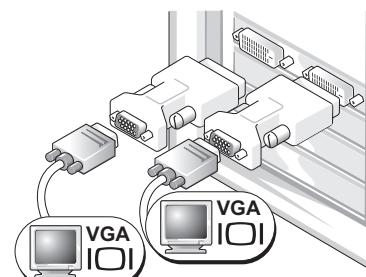

Use the DVI connectors to connect your computer to one or two DVI monitors.

Use the VGA adapter to connect a VGA monitor to one of the DVI connectors on your computer

Use two VGA adapters to connect two VGA monitors to the DVI connectors on your computer.


---

4

Connect the speakers.




**NOTE:** If your computer has a sound card installed, connect the speakers to the card.

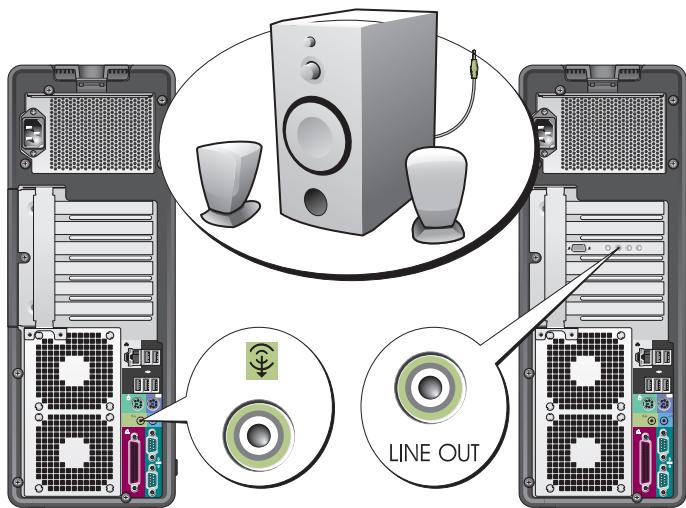

5

Connect the power cables and turn on the computer and monitor.

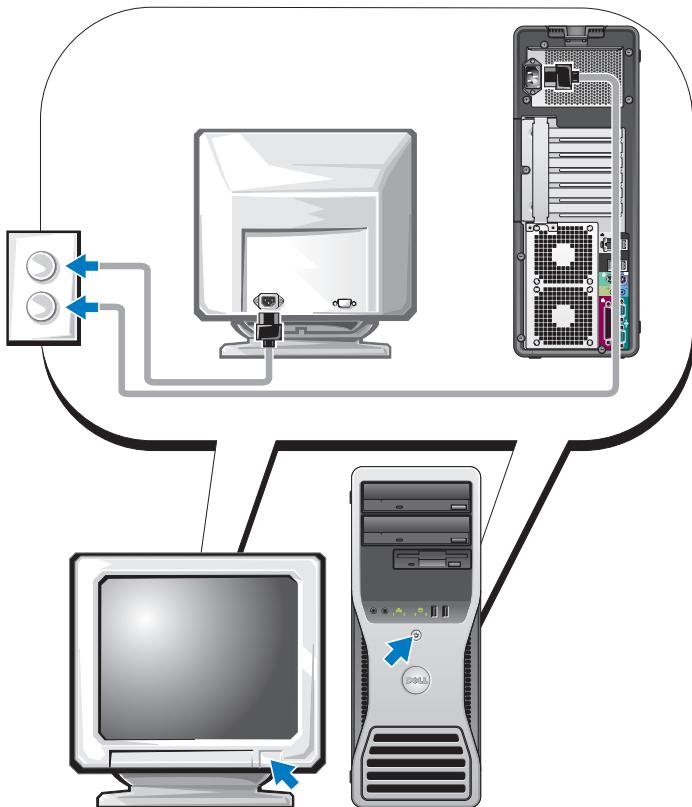

## 6

Install additional software or devices.

Before you install any devices or software that did not come with your computer, read the documentation that came with the software or device or contact the vendor to verify that the software or device is compatible with your computer and operating system.

You have now completed the setup for your tower computer.

## Setting Up Your Computer (Desktop Orientation)


**!** **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

You must complete all steps to properly set up your computer.

## 1

Connect the keyboard and the mouse.

**» NOTICE:** Do not connect a modem cable to the network adapter. Voltage from telephone communications can damage the network adapter.

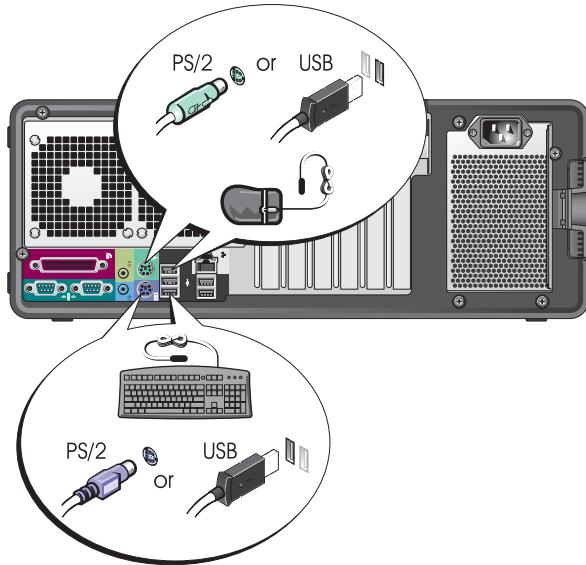


2

Connect the modem or the network cable.



**NOTE:** If your computer has a network card installed, connect the network cable to the card.

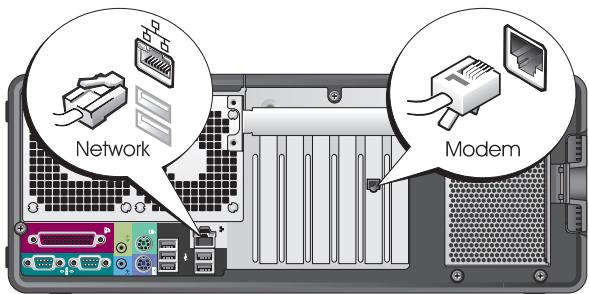


3

Connect the monitor.

Depending on your graphics card, you can connect your monitor in various ways.



**NOTE:** You may need to use the provided adapter or cable to connect your monitor to the computer.

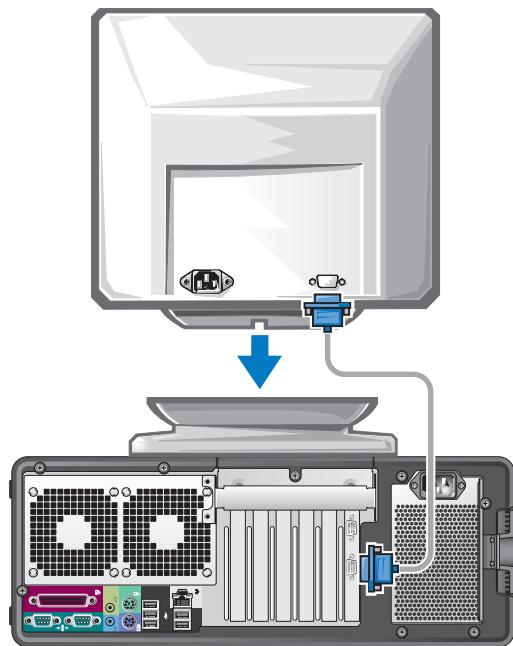


---

**For single- and dual-monitor capable cards with a single connector**


---

VGA adapter:

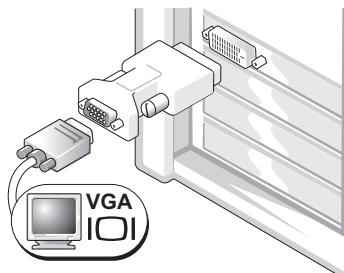


Use the VGA adapter when you have a single monitor graphics card and you want to connect your computer to a VGA monitor.

Dual VGA Y cable adapter:

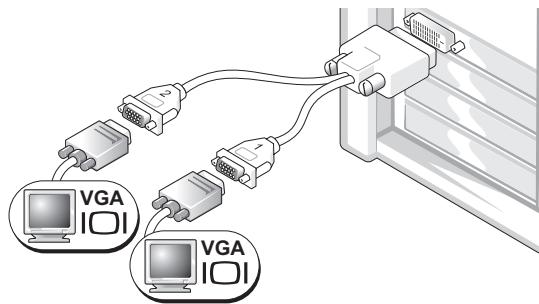

Use the appropriate Y cable when your graphics card has a single connector and you want to connect your computer to one or two VGA monitors.

Dual DVI Y cable adapter:

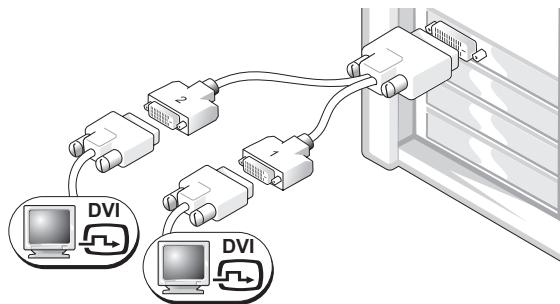

Use the appropriate Y cable when your graphics card has a single connector and you want to connect your computer to one or two DVI monitors.

---


The dual-monitor cable is color-coded; the blue connector is for the primary monitor, and the black connector is for the second monitor. To enable dual-monitor support, both monitors must be attached to the computer when you start your computer.

---

#### **For dual-monitor capable cards with one DVI connector and one VGA connector**


---

One DVI connector and one VGA connector:

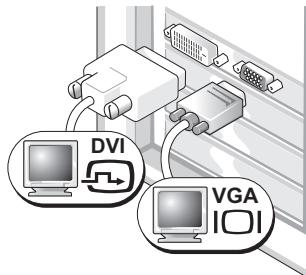

Use the appropriate connector(s) when you want to connect your computer to one or two monitors.

Two VGA connectors with one VGA adapter:

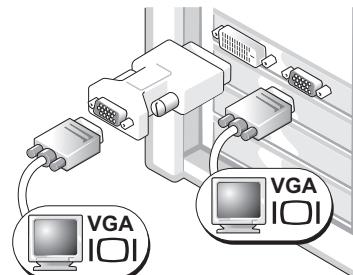

Use the VGA adapter when you want to connect your computer to two VGA monitors.


---

---

#### **For dual-monitor capable cards with two DVI connectors**


---

Two DVI connectors:

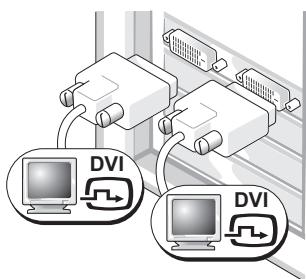


Use the DVI connector(s) to connect your computer to one or two DVI monitors.

Two DVI connectors with one VGA adapter:

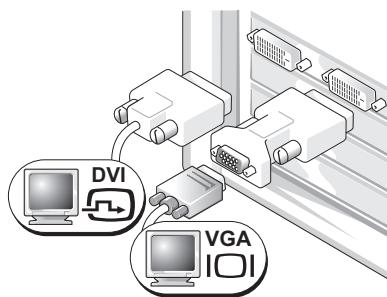

Use the VGA adapter to connect a VGA monitor to one of the DVI connectors on your computer.

Two DVI connectors with two VGA adapters:

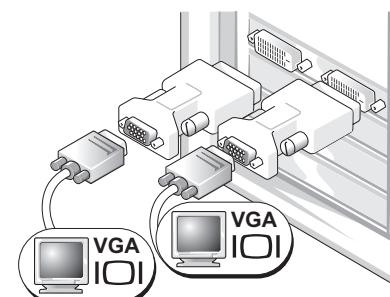


Use two VGA adapters to connect two VGA monitors to the DVI connectors on your computer.

---

4


Connect the speakers.

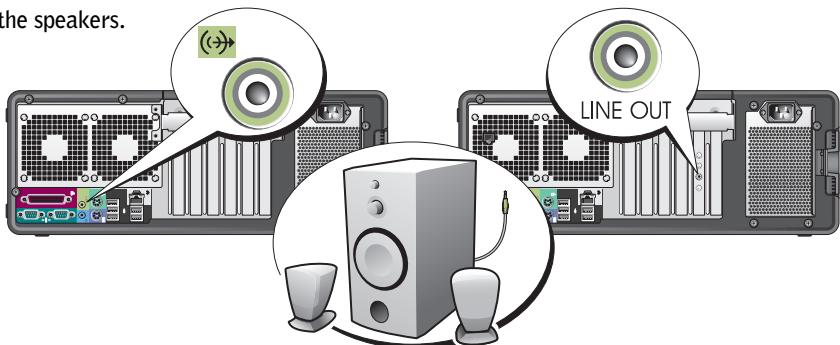

**NOTE:** If your computer has a sound card installed, connect the speakers to the card.

5

Connect the power cables and turn on the computer and monitor.

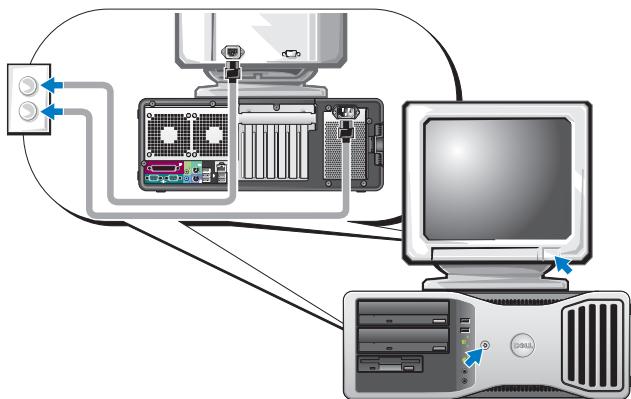

6


Install additional software or devices.

Before you install any devices or software that did not come with your computer, read the documentation that came with the software or device or contact the vendor to verify that the software or device is compatible with your computer and operating system.

You have now completed the setup for your desktop computer.

# About Your Computer


## Front View (Tower Orientation)

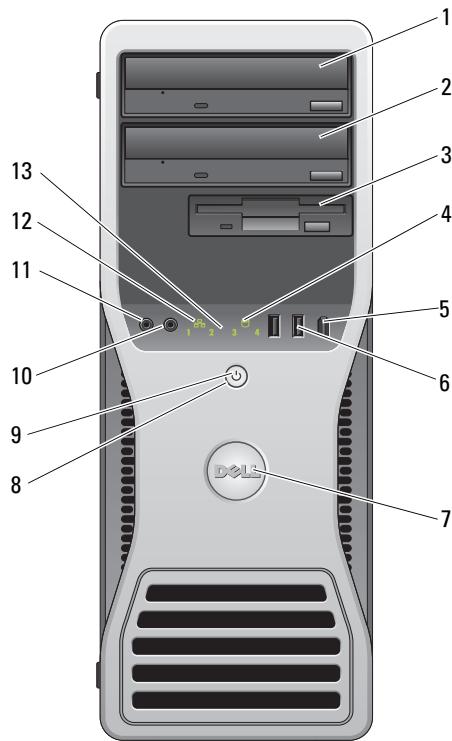

1	upper 5.25-inch drive bay	Holds a CD/DVD drive.
2	lower 5.25-inch drive bay	You can use this bay for an optional CD/DVD drive.
3	FlexBay	You can use this bay for an optional third hard drive (SATA or SAS), a floppy drive or Media Card Reader.
4	hard-drive activity light	The hard drive light is on when the computer reads data from or writes data to the hard drive. The light might also be on when a device such as your CD player is operating.
5	IEEE 1394 connector (optional)	Use the optional IEEE 1394 connector for high-speed data devices such as digital video cameras and external storage devices.


6	USB 2.0 connectors (2)	Use the front USB connectors for devices that you connect occasionally, such as flash memory keys or cameras, or for bootable USB devices (see "System Setup" in your <i>User's Guide</i> for more information on booting to a USB device).  It is recommended that you use the back USB connectors for devices that typically remain connected, such as printers and keyboards.
7	Dell™ rotatable badge	To rotate the Dell badge for tower-to-desktop conversion; remove the front panel, turn it over, and rotate the plastic handle behind the badge.
8	power button	Press to turn on the computer. <b>NOTICE:</b> To avoid losing data, do not use the power button to turn off the computer. Instead, perform an operating system shutdown. <b>NOTE:</b> The power button can also be used to wake the system or to place it into a power-saving state. See "Power Management" in your <i>User's Guide</i> for more information.
9	power light	The power light illuminates and blinks or remains solid to indicate different states: <ul style="list-style-type: none"><li>• No light — The computer is turned off.</li><li>• Steady green — The computer is in a normal operating state.</li><li>• Blinking green — The computer is in a power-saving state.</li><li>• Blinking or solid amber — See "Power Problems" in your <i>User's Guide</i>.</li></ul> To exit from a power-saving state, press the power button or use the keyboard or the mouse if it is configured as a wake device in the Windows Device Manager. For more information about sleep states and exiting from a power-saving state, see your <i>User's Guide</i> .  See "Diagnostic Lights" on page 38 for a description of light codes that can help you troubleshoot problems with your computer.
10	headphone connector	Use the headphone connector to attach headphones.
11	microphone connector	Use the microphone connector to attach a personal computer microphone for voice or musical input into a sound or telephony program.
12	network link light	The network link light is on when a good connection exists between a 10-Mbps, 100-Mbps, or 1000-Mbps (or 1-Gbps) network and the computer.
13	diagnostic lights (4)	Use these lights to help you troubleshoot a computer problem based on the diagnostic code. For more information, see "Diagnostic Lights" on page 38.

## Back View (Tower Orientation)

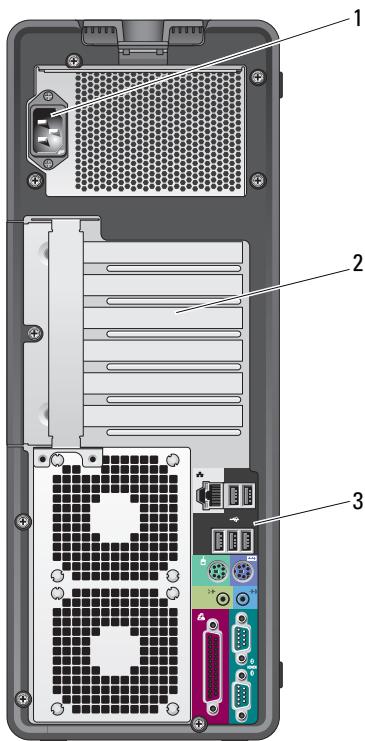

1	power connector	Insert the power cable.
2	card slots	Access connectors for any installed PCI, PCI-X, or PCI Express cards. <b>NOTE:</b> The center four slots support full-length cards: one PCI-X slot, one PCI Express x8 slot (wired as x4), one PCI Express x16 slot, and one PCI slot; and the top and bottom slots support half-length cards: one PCI-X slot and one PCI Express x8 slot (wired as x4).
3	back panel connectors	Plug serial, USB, and other devices into the appropriate connectors.

## Back Panel Connectors

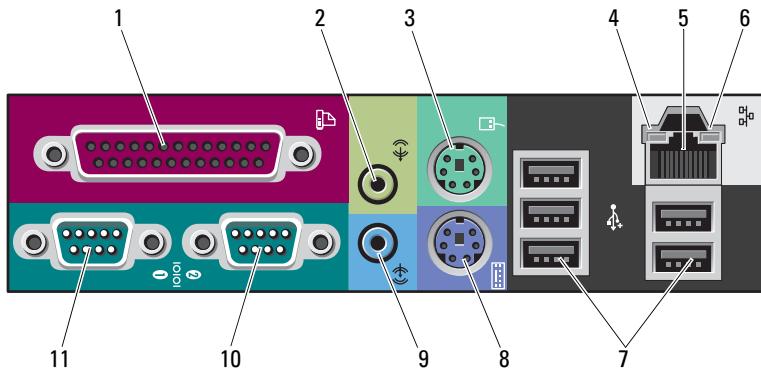

---

1	parallel connector	Connect a parallel device, such as a printer, to the parallel connector. If you have a USB printer, plug it into a USB connector. <b>NOTE:</b> The integrated parallel connector is automatically disabled if the computer detects an installed card containing a parallel connector configured to the same address. For more information, see your <i>User's Guide</i> .
2	line-out/ headphone connector	Use the green line-out connector to attach headphones and most speakers with integrated amplifiers.  On computers with a sound card, use the connector on the card.
3	PS/2 mouse connector	Plug a standard mouse into the green mouse connector. Turn off the computer and any attached devices before you connect a mouse to the computer. If you have a USB mouse, plug it into a USB connector.  If your computer is running the Microsoft® Windows® XP operating system, the necessary mouse drivers have been installed on your hard drive.
4	link integrity light	<ul style="list-style-type: none"><li>• Green — A good connection exists between a 10-Mbps network and the computer.</li><li>• Orange — A good connection exists between a 100-Mbps network and the computer.</li><li>• Yellow — A good connection exists between a 1000-Mbps (or 1-Gbps) network and the computer.</li><li>• Off — The computer is not detecting a physical connection to the network.</li></ul>


---

---

5	network adapter connector	To attach your computer to a network or broadband device, connect one end of a network cable to either a network jack or your network or broadband device. Connect the other end of the network cable to the network adapter connector on your computer. A click indicates that the network cable has been securely attached. <b>NOTE:</b> Do not plug a telephone cable into the network connector.
		On computers with an additional network connector card, use the connectors on the card and on the back of the computer when setting up multiple network connections (such as a separate intra- and extranet). It is recommended that you use Category 5 wiring and connectors for your network. If you must use Category 3 wiring, force the network speed to 10 Mbps to ensure reliable operation.
6	network activity light	Flashes a yellow light when the computer is transmitting or receiving network data. A high volume of network traffic may make this light appear to be in a steady "on" state.
7	USB 2.0 connectors (5)	It is recommended that you use the front USB connectors for devices that you connect occasionally, such as flash memory keys or cameras, or for bootable USB devices. Use the back USB connectors for devices that typically remain connected, such as printers and keyboards.
8	PS/2 keyboard connector	If you have a standard keyboard, plug it into the purple keyboard connector. If you have a USB keyboard, plug it into a USB connector.
9	line-in connector	Use the blue line-in connector to attach a record/playback device such as a cassette player, CD player, or VCR. On computers with a sound card, use the connector on the card.
10	serial connector	Connect a serial device, such as a handheld device, to the serial port. If necessary, the address for this port can be modified through system setup. See your <i>User's Guide</i> for more information.
11	serial connector	Connect a serial device, such as a handheld device, to the serial port. If necessary, the address for this port can be modified through system setup. See your <i>User's Guide</i> for more information.

---

## Front View (Desktop Orientation)

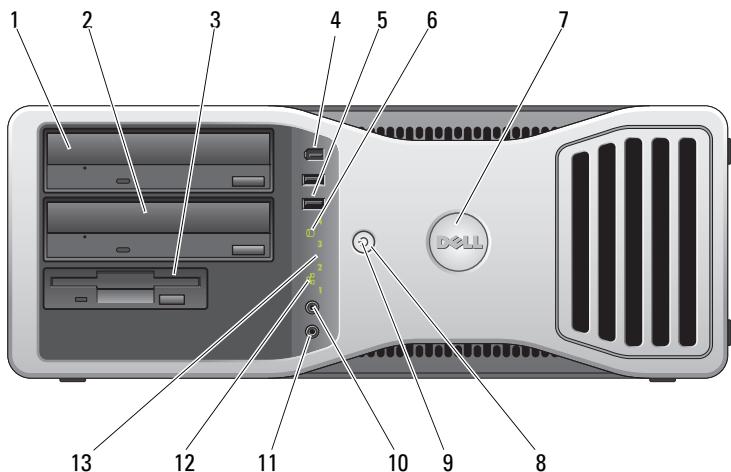


1	upper 5.25-inch drive bay	Holds a CD/DVD drive.
2	lower 5.25-inch drive bay	You can use the bay for an optional CD/DVD drive, or a SATA hard drive.
3	FlexBay	You can use the bay for a floppy drive, or a Media Card Reader.
4	IEEE 1394 connector (optional)	Use the optional IEEE 1394 connector for high-speed data devices such as digital video cameras and external storage devices.
5	USB 2.0 connectors (2)	<p>Use the front USB connectors for devices that you connect occasionally, such as flash memory keys or cameras, or for bootable USB devices (see "System Setup" in your <i>User's Guide</i> for more information on booting to a USB device).</p> <p>It is recommended that you use the back USB connectors for devices that typically remain connected, such as printers and keyboards.</p>
6	hard-drive activity light	The hard drive light is on when the computer reads data from or writes data to the hard drive. The light might also be on when a device such as your CD player is operating.
7	Dell™ rotatable badge	To rotate the Dell badge for tower-to-desktop conversion; remove the front panel, turn it over, and rotate the plastic handle behind the badge.
8	power button	<p>Press to turn on the computer.</p> <p><b>NOTICE:</b> To avoid losing data, do not use the power button to turn off the computer. Instead, perform an operating system shutdown.</p> <p><b>NOTE:</b> The power button can also be used to wake the system or to place it into a power-saving state. See your <i>User's Guide</i> for more information.</p>

---

9	power light	The power light illuminates and blinks or remains solid to indicate different states: <ul style="list-style-type: none"> <li>• No light — The computer is turned off.</li> <li>• Steady green — The computer is in a normal operating state.</li> <li>• Blinking green — The computer is in a power-saving state.</li> <li>• Blinking or solid amber — See "Power Problems" in your <i>User's Guide</i>.</li> </ul> To exit from a power-saving state, press the power button or use the keyboard or the mouse if it is configured as a wake device in the Windows Device Manager. For more information about sleep states and exiting from a power-saving state, see your <i>User's Guide</i> .
10	headphone connector	Use the headphone connector to attach headphones.
11	microphone connector	Use the microphone connector to attach a personal computer microphone for voice or musical input into a sound or telephony program.
12	network link light	The network link light is on when a good connection exists between a 10-Mbps, 100-Mbps, or 1000-Mbps (or 1-Gbps) network and the computer.
13	diagnostic lights (4)	Use these lights to help you troubleshoot a computer problem based on the diagnostic code. For more information, see "Diagnostic Lights" on page 38.

---

## Back View (Desktop Orientation)

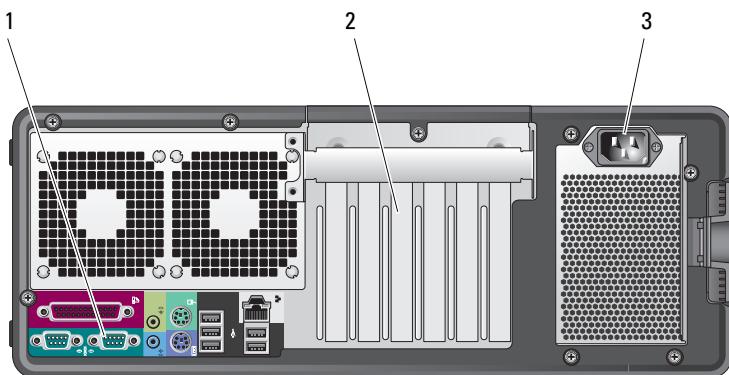



---

1	back panel connectors	Plug serial, USB, and other devices into the appropriate connector.
2	card slots	Access connectors for any installed PCI, PCI-X, or PCI Express cards. <b>NOTE:</b> The slot farthest to the left and the two slots on the right support half-length cards: one PCI Express x8 slot (wired as x4) and two PCI-X slots. The center three slots support full-length cards: one PCI Express x16 slot, one PCI Express x8 slot (wired as x4) and one PCI slot.
3	power connector	Insert the power cable.


---

## Inside View

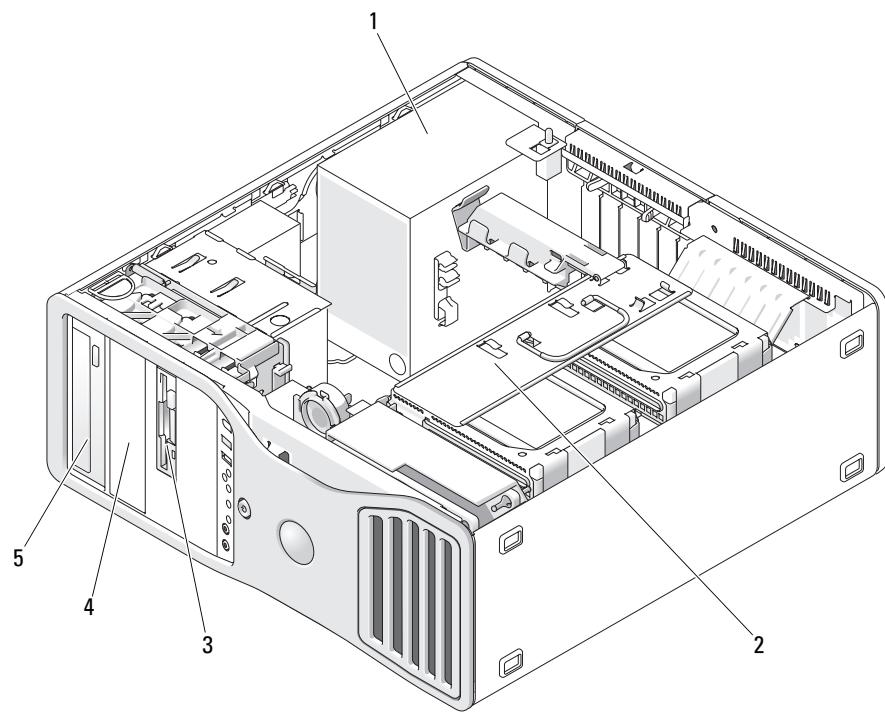

- |   |                           |   |                           |   |         |
|---|---------------------------|---|---------------------------|---|---------|
| 1 | power supply              | 2 | rotatable hard drive bay  | 3 | FlexBay |
| 4 | lower 5.25-inch drive bay | 5 | upper 5.25-inch drive bay |   |         |

## Inside View – Hard Drive Bay Rotated Out

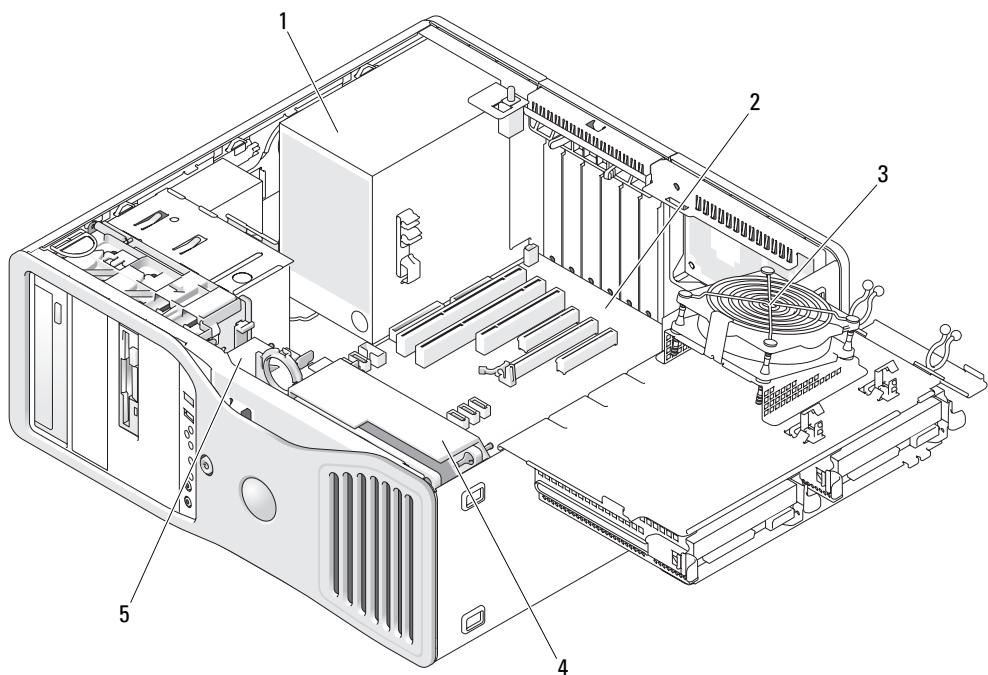


1 power supply  
4 front fan

2 system board  
5 card fan

3 memory fan

## System Board Components

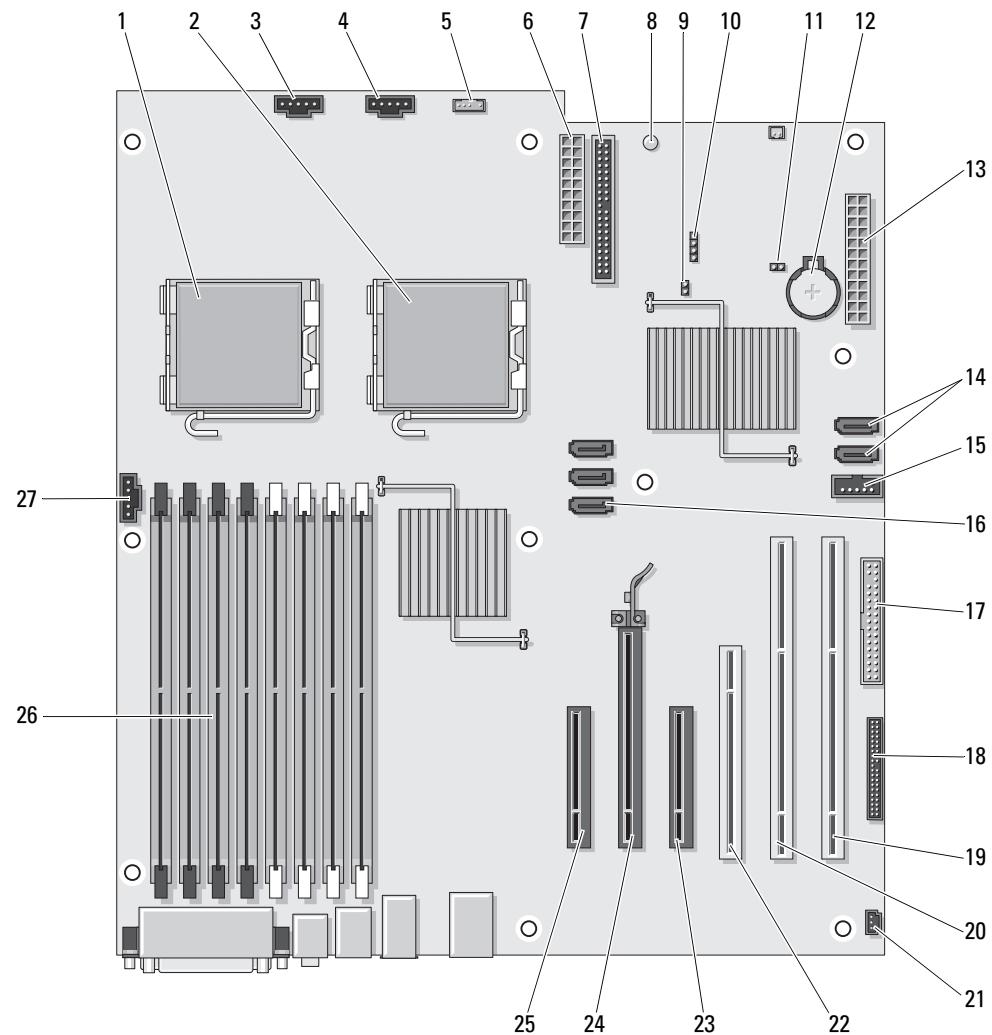

1	primary processor connector (CPU_0)	15	Flexbay connector (USB)
2	secondary processor connector (CPU_1)	16	SATA connectors (SATA_2, SATA_1, SATA_0)
3	front fan connector (FAN_FRONT)	17	floppy drive (DSKT)
4	card cage fan (FAN_CCAG)	18	front panel connector (FRONTPANEL)
5	internal speaker connector (INT_SPKR)	19	PCI-X card slot (SLOT6_PCIX)
6	power connector (POWER2)	20	PCI-X card slot (SLOT5_PCIX)
7	IDE drive connector (IDE)	21	chassis intrusion header (INTRUDER)
8	standby power light (AUX_PWR)	22	PCI card slot (SLOT4_PCI)
9	password jumper (PSWD)	23	PCI-Express x8 card slot, wired as x4 (SLOT3_PCIE)
10	auxiliary hard-drive LED connector (AUX_LED)	24	PCI-Express x16 card slot (SLOT2_PCIE)
11	RTC reset jumper (RTCRST)	25	PCI-Express x8 card slot, wired as x4 (SLOT1_PCIE)
12	battery socket (BATTERY)	26	memory module connectors (DIMM_1-8)
13	main power connector (POWER1)	27	memory fan connector (FAN_MEM)
14	SATA connectors (SATA_4, SATA_3)		

## Cable Colors

Device	Color
SATA Hard drive	blue cable
Floppy drive	black pull-tab
CD/DVD drive	orange pull-tab
front panel	yellow pull-tab

## Locating Your User's Guide

Your *User's Guide* contains additional information about your computer such as:

- Technical specifications
- Information for changing the orientation of your computer from a desktop to a tower
- Front and back views of your computer, including all of the available connectors
- Inside views of your computer, including a detailed graphic of the system board and the connectors
- Instructions for cleaning your computer
- Information on software features, such as Legacy Select Technology control, using a password, and system setup options

- Tips and information for using the Microsoft Windows XP operating system
- Instructions for removing and installing parts, including memory, cards, drives, the microprocessor, and the battery
- Information for troubleshooting various computer problems
- Instructions for using the Dell Diagnostics and reinstalling drivers
- Information on how to contact Dell

You can access the *User's Guide* from your hard drive or the Dell Support website at [support.dell.com](http://support.dell.com).

## Removing the Computer Cover

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

 **CAUTION:** To guard against electrical shock, always unplug your computer from the electrical outlet before removing the cover.

 **NOTICE:** To prevent static damage to components inside your computer, discharge static electricity from your body before you touch any of your computer's electronic components. You can do so by touching an unpainted metal surface on the computer.

**1** Follow the procedures in "Before You Begin" in your *User's Guide*.

 **NOTICE:** Opening the computer cover while the computer is running could result in a shutdown without warning and a loss of data in open programs. The computer cooling system cannot function properly while the cover is removed.

**2** If you have installed a security cable, remove it from the security cable slot.


 **NOTICE:** Ensure that sufficient space exists to support the removed cover—at least 30 cm (1 ft) of desk top space.

 **NOTICE:** Ensure that you are working on a level, protected surface to avoid scratching either the computer or the surface on which it is resting.

**3** Lay your computer on a flat surface with the cover facing up.

- 4 Pull back the cover latch release.

 **NOTE:** The computer in the following images is configured as a tower computer. See "Changing Between Tower and Desktop Modes" in your *User's Guide* for information regarding computer orientation.

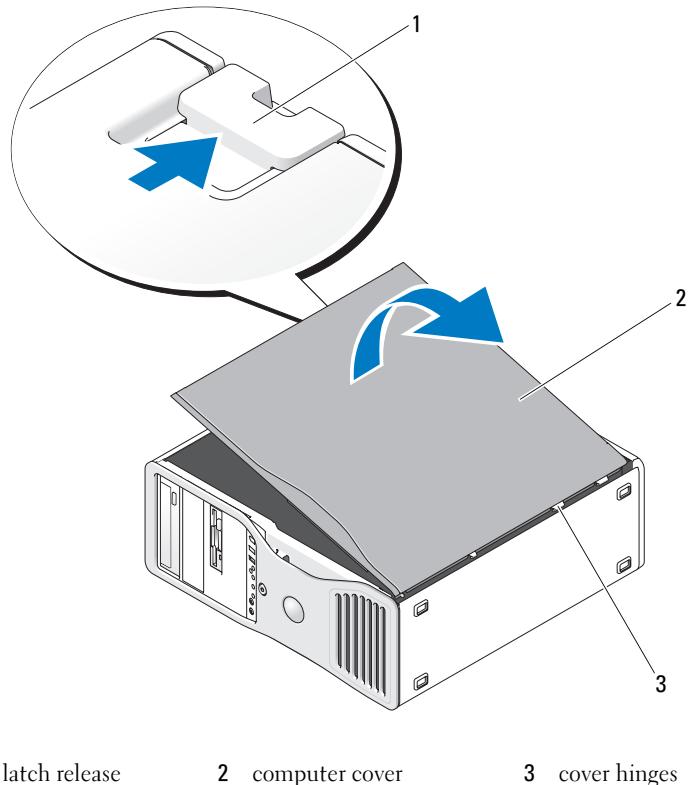

1 cover latch release

2 computer cover

3 cover hinges

- 5 Locate the three hinge tabs on the edge of the computer.
- 6 Grip the sides of the computer cover and pivot the cover up, using the hinges as leverage points.
- 7 Release the cover from the hinge tabs and set it aside in a secure location.

 **NOTICE:** The computer cooling system cannot function properly while the computer cover is not installed. Do not attempt to boot the computer before replacing the computer cover.

## Caring for Your Computer

To help maintain your computer, follow these suggestions:

- To avoid losing or corrupting data, never turn off your computer when the hard drive light is on.
- Schedule regular virus scans using virus software.
- Manage hard drive space by periodically deleting unnecessary files and defragmenting the drive.
- Back up files on a regular basis.
- Periodically clean your monitor screen, mouse, and keyboard (see your *User's Guide* for more information).

## Solving Problems

### Troubleshooting Tips

Perform the following checks when you troubleshoot your computer:

- If you added or removed a part before the problem started, review the installation procedures and ensure that the part is correctly installed.
- If a peripheral device does not work, ensure that the device is properly connected.
- If an error message appears on the screen, write down the exact message. The message may help technical support personnel diagnose and fix the problem(s).
- If an error message occurs in a program, see the program's documentation.
- If the recommended action in the troubleshooting section is to see a section in your *User's Guide*, go to [support.dell.com](http://support.dell.com) (on another computer if necessary) to access your *User's Guide*.

### Resolving Software and Hardware Incompatibilities

If a device is either not detected during the operating system setup or is detected but incorrectly configured, you can use the Hardware Troubleshooter to resolve the incompatibility.

To resolve incompatibilities using the Hardware Troubleshooter:

- 1 Click the **Start** button and click **Help and Support**.
- 2 Type **hardware troubleshooter** in the **Search** field and click the arrow to start the search.
- 3 Click **Hardware Troubleshooter** in the **Search Results** list.
- 4 In the **Hardware Troubleshooter** list, click **I need to resolve a hardware conflict on my computer**, and click **Next**.

## Using Microsoft® Windows® XP System Restore

The Microsoft Windows XP operating system provides System Restore to allow you to return your computer to an earlier operating state (without affecting data files) if changes to the hardware, software, or other system settings have left the computer in an undesirable operating state. See the Windows Help and Support Center for information about using System Restore (see "Finding Information" on page 5 for information about accessing the Windows Help and Support Center).

 **NOTICE:** Make regular backups of your data files. System Restore does not monitor your data files or recover them.

### Creating a Restore Point

- 1 Click the Start button and click Help and Support.
- 2 Click System Restore.
- 3 Follow the instructions on the screen.

### Restoring the Computer to an Earlier Operating State

 **NOTICE:** Before you restore the computer to an earlier operating state, save and close any open files and exit any open programs. Do not alter, open, or delete any files or programs until the system restoration is complete.

- 1 Click the Start button, point to All Programs→Accessories→System Tools, and then click System Restore.
- 2 Ensure that **Restore my computer to an earlier time** is selected and click Next.
- 3 Click a calendar date to which you want to restore your computer.

The **Select a Restore Point** screen provides a calendar that allows you to see and select restore points. All calendar dates with available restore points appear in boldface type.

- 4 Select a restore point and click Next.  
If a calendar date has only one restore point, then that restore point is automatically selected.  
If two or more restore points are available, click the restore point that you prefer.

- 5 Click Next.

The **Restoration Complete** screen appears after System Restore finishes collecting data and then the computer restarts.

- 6 After the computer restarts, click OK.

To change the restore point, you can either repeat the steps using a different restore point, or you can undo the restoration.

## **Undoing the Last System Restore**

► **NOTICE:** Before you undo the last system restore, save and close all open files and exit any open programs. Do not alter, open, or delete any files or programs until the system restoration is complete.

- 1 Click the Start button, point to All Programs→Accessories→System Tools, and then click System Restore.
  - 2 Click Undo my last restoration and click Next.
  - 3 Click Next.
- The System Restore screen appears and the computer restarts.
- 4 After the computer restarts, click OK.

## **Enabling System Restore**

If you reinstall Windows XP with less than 200 MB of free hard-disk space available, System Restore is automatically disabled. To see if System Restore is enabled:

- 1 Click the Start button and click Control Panel.
- 2 Click Performance and Maintenance.
- 3 Click System.
- 4 Click the System Restore tab.
- 5 Ensure that Turn off System Restore is unchecked.

## **Using the Last Known Good Configuration**

- 1 Restart your computer and press <F8> when the message Please select the operating system to start appears.
- 2 Highlight Last Known Good Configuration, press <Enter>, press <l>, and then select your operating system when prompted.

## **Other Options to Help Resolve Additional Device or Software Conflicts**

► **NOTICE:** The following processes erase all of the information on your hard drive.

- Reinstall your operating system using the operating system installation guide and *Operating System CD*. During the operating system reinstallation, you can select to delete the existing partitions and reformat your hard drive.
- Reinstall all drivers, beginning with the chipset, using the *Drivers and Utilities CD*.

## Dell Diagnostics

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

### When to Use the Dell Diagnostics

If you experience a problem with your computer, perform the checks in "Solving Problems" on page 32 and run the Dell Diagnostics before you contact Dell for technical assistance.

It is recommended that you print these procedures before you begin.

 **NOTICE:** The Dell Diagnostics works only on Dell™ computers. Using this program with other computers can cause incorrect computer responses or result in error messages.

The Dell Diagnostics allow you to:

- Perform quick checks or extensive tests on one or all devices
- Choose how many times a test is run
- Display or print test results or save them in a file
- Suspend testing if an error is detected or terminate testing if a certain number of errors occur
- Access online Help screens that describe the tests and how to run them
- Read status messages that tell you whether tests completed successfully
- Receive error messages if problems are detected

### Starting the Dell Diagnostics From Your Hard Drive

- 1 Turn on (or restart) your computer.
- 2 When the DELL™ logo appears, press <F12> immediately.

 **NOTE:** If you see a message stating that no diagnostics utility partition has been found, see "Starting the Dell Diagnostics From the Drivers and Utilities CD" in your *User's Guide*

If you wait too long and the operating system logo appears, continue to wait until you see the Microsoft Windows desktop. Then shut down your computer and try again. For more information on shutting down your computer, see your *User's Guide*.

- 3 When the boot device list appears, highlight **Boot to Utility Partition** and press <Enter>.
- 4 When the Dell Diagnostics **Main Menu** appears, select the test you want to run. For more information on the tests, see your *User's Guide*.

## **Starting the Dell Diagnostics From the Drivers and Utilities CD**

- 1** Insert the *Drivers and Utilities* CD.
- 2** Shut down and restart the computer.

When the DELL logo appears, press <F12> immediately.

If you wait too long and the Windows logo appears, continue to wait until you see the Windows desktop. Then shut down your computer and try again.

 **NOTE:** The next steps change the boot sequence for one time only. On the next start-up, the computer boots according to the devices specified in the system setup program.

- 3** When the boot device list appears, highlight Onboard or USB CD-ROM Drive and press <Enter>.
- 4** Select the Boot from CD-ROM option from the menu that appears and press <Enter>.
- 5** Type 1 to start the menu and press <Enter> to proceed.
- 6** Select **Run the 32 Bit Dell Diagnostics** from the numbered list. If multiple versions are listed, select the version appropriate for your computer.
- 7** When the Dell Diagnostics Main Menu appears, select the test you want to run.

## **Before You Start Testing**

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

- Turn on your printer if one is attached.
- Enter system setup, review your computer's configuration information, and enable all of your computer's components and devices, such as connectors.

## **Beep Codes**

Your computer might emit a series of beeps during start-up if the monitor cannot display errors or problems. This series of beeps, called a beep code, identifies a problem. One possible beep code (code 1-3-1) consists of one beep, a burst of three beeps, and then one beep. This beep code tells you that the computer encountered a memory problem.

If your computer beeps during start-up:

- 1** Write down the beep code on the "Diagnostics Checklist" in your *User's Guide*.
- 2** Run the Dell Diagnostics to identify a more serious cause.
- 3** Contact Dell for technical assistance.

<b>Code</b>	<b>Cause</b>
1-1-2	Microprocessor register failure
1-1-3	NVRAM read/write failure
1-1-4	ROM BIOS checksum failure
1-2-1	Programmable interval timer failure
1-2-2	DMA initialization failure
1-2-3	DMA page register read/write failure
1-3	Video Memory Test failure
1-3-1 through 2-4-4	Memory not being properly identified or used
1-3-2	Memory problem
3-1-1	Slave DMA register failure
3-1-2	Master DMA register failure
3-1-3	Master interrupt mask register failure
3-1-4	Slave interrupt mask register failure
3-2-2	Interrupt vector loading failure
3-2-4	Keyboard Controller Test failure
3-3-1	NVRAM power loss
3-3-2	Invalid NVRAM configuration
3-3-4	Video Memory Test failure
3-4-1	Screen initialization failure
3-4-2	Screen retrace failure
3-4-3	Search for video ROM failure
4-2-1	No timer tick
4-2-2	Shutdown failure
4-2-3	Gate A20 failure
4-2-4	Unexpected interrupt in protected mode
4-3-1	Memory failure above address 0FFFFh
4-3-3	Timer-chip counter 2 failure
4-3-4	Time-of-day clock stopped
4-4-1	Serial or parallel port test failure
4-4-2	Failure to decompress code to shadowed memory
4-4-3	Math-coprocessor test failure
4-4-4	Cache test failure

## Error Messages

 **NOTE:** If the message is not listed, see the documentation for either the operating system or the program that was running when the message appeared.

If an error occurs during start-up, a message may be displayed on the monitor identifying the problem. See "Error Messages" in your *User's Guide* for suggestions on resolving any problems.

## Diagnostic Lights

 **CAUTION:** Before you begin any of the procedures in this section, follow the safety instructions in the *Product Information Guide*.

To help you troubleshoot a problem, your computer has four lights labeled "1," "2," "3," and "4" on the front. The lights can be "off" or green. When the computer starts normally, the lights flash. If the computer malfunctions, the pattern of the lights and also that of the power button help to identify the problem. These lights also indicate sleep states.

### Diagnostic Light Codes Before POST

Diagnostic Lights	Power Light	Problem Description	Suggested Resolution
	off	No electrical power is supplied to the computer.	Connect the computer to an electrical outlet. Ensure that the front-panel power light is on. If the power light is off, ensure that the computer is connected to a working electrical outlet and then press the power button.  If the problem is still not resolved, contact Dell for technical assistance.
	off	The computer is in a normal off condition; the computer is connected to an electrical outlet.	Press the power button to turn the computer on. If the computer does not turn on, ensure that the front-panel power light is on. If the power light is off, ensure that the computer is connected to a working electrical outlet and then press the power button.  If the problem is still not resolved, contact Dell for technical assistance.

<b>Diagnostic Lights</b>	<b>Power Light</b>	<b>Problem Description</b>	<b>Suggested Resolution</b>
	blinking green	The computer is in a reduced power or "sleep" state.	<p>Use one of the appropriate methods to "wake up" the computer. See "Advanced Features" in your <i>User's Guide</i>.</p> <p>If the problem is not resolved and you are trying to wake the computer with a USB mouse or keyboard, substitute the mouse or keyboard with a working PS/2 mouse or keyboard and then try to wake the computer.</p>
	blinking green	The computer is in a reduced power or "sleep" state.	<p>Use one of the appropriate methods to "wake up" the computer. See "Advanced Features" in your <i>User's Guide</i>.</p> <p>If the problem is not resolved and you are trying to wake the computer with a USB mouse or keyboard, substitute the mouse or keyboard with a working PS/2 mouse or keyboard and then try to wake the computer.</p>
	amber (blinking)	The BIOS is not executing.	<p>Ensure that the processor is seated correctly and restart the computer. See "Processor" in your <i>User's Guide</i>.</p> <p>If the problem is still not resolved, contact Dell for technical assistance.</p>
	blinking amber (blinking)	A possible power supply or power cable failure has occurred.	<p>Perform the procedure in "Power Problems" in your <i>User's Guide</i>.</p> <p>If the problem is still not resolved, contact Dell for technical assistance.</p>
	amber (blinking)	A possible system board failure has occurred.	Contact Dell for technical assistance.
	amber (blinking)	A processor mismatch exists.	Perform the procedure in "Processor Problems" in your <i>User's Guide</i> .

<b>Diagnostic Lights</b>	<b>Power Light</b>	<b>Problem Description</b>	<b>Suggested Resolution</b>
	amber  (blinking)	A possible failure has been detected in a plug-in component such as a graphics riser card or memory riser card.	Verify that any required power cables are connected to the memory and graphics riser cards.  Perform the procedure in "Power Problems" in your <i>User's Guide</i> .
	amber  (blinking)	A possible power supply failure has occurred.	Verify that both power supply cables are plugged in to the motherboard.

## Diagnostic Light Codes During POST

The power light displays a solid green for diagnostic light codes during POST.

<b>Light Pattern</b>	<b>Problem Description</b>	<b>Suggested Resolution</b>
	A possible processor failure has occurred.	Reinstall the processor and restart the computer.
	A possible expansion card failure has occurred.	<p><b>1</b> Determine if a conflict exists by removing a card (not the graphics card) and then restarting the computer.</p> <p><b>2</b> If the problem persists, reinstall the card that you removed, remove a different card, and then restart the computer.</p> <p><b>3</b> Repeat this process for each card. If the computer starts normally, troubleshoot the last card removed from the computer for resource conflicts (see "Resolving Software and Hardware Incompatibilities" on page 32).</p> <p><b>4</b> If the problem persists, contact Dell.</p>
	A possible graphics card failure has occurred.	<p><b>1</b> If the computer has a graphics card, remove the card, reinstall it, and then restart the computer.</p> <p><b>2</b> If the problem still exists, install a graphics card that you know works and restart the computer.</p> <p><b>3</b> If the problem persists or the computer has integrated graphics, contact Dell.</p>
	A possible floppy or hard drive failure has occurred.	Reseat all power and data cables and restart the computer.

Light Pattern	Problem Description	Suggested Resolution
	A possible USB failure has occurred.	Reinstall all USB devices, check cable connections, and then restart the computer.
	No memory modules are detected.	<p><b>1</b> Reseat the memory modules to ensure that your computer is successfully communicating with the memory.</p> <p><b>2</b> Restart the computer.</p> <p><b>3</b> If the problem still exists, remove all the memory modules and install one memory module in memory module connector DIMM_1.</p> <p><b>4</b> Restart the computer.</p> <p>A message appears stating that because your memory is not paired, the system will operate with reduced performance and reduced error-correction capability</p> <p><b>5</b> Press &lt;F1&gt; to boot to the operating system.</p> <p><b>6</b> Run the Dell Diagnostics. See your <i>User's Guide</i> for more information.</p> <p><b>7</b> If the memory module passes, shut down the computer, remove the memory module, and then repeat the process with the remaining memory modules until a memory error occurs during start-up or diagnostic testing.</p> <p>If the first memory module tested is defective, repeat the process with the remaining modules to ensure that the remaining modules are not defective.</p> <p><b>8</b> When the defective memory module is identified, contact Dell for a replacement.</p>
	No memory modules are detected.	<ul style="list-style-type: none"> <li>• If you have one memory module installed, reinstall it and restart the computer.</li> <li>• If you have two or more memory modules installed, remove the modules, reinstall one module, and then restart the computer). If the computer starts normally, reinstall an additional module. Continue until you have identified a faulty module or reinstalled all modules without error.</li> <li>• If available, install properly working memory of the same type into your computer.</li> <li>• If the problem persists, contact Dell.</li> </ul>
	System board failure has occurred.	Contact Dell for technical assistance.

Light Pattern	Problem Description	Suggested Resolution
	Memory modules are detected, but a memory configuration or compatibility error exists.	<ul style="list-style-type: none"> <li>• Ensure that no special memory module/memory connector placement requirements exist.</li> <li>• Verify that the memory modules that you are installing are compatible with your computer.</li> <li>• Reinstall the memory modules and restart the computer.</li> <li>• If the problem persists, contact Dell.</li> </ul>
	Routine system activity preceding video initialization.	Watch your monitor for on-screen messages.
	A possible expansion card failure has occurred.	<ol style="list-style-type: none"> <li>1 Determine if a conflict exists by removing a card (not a graphics card) and restarting the computer.</li> <li>2 If the problem persists, reinstall the card that you removed, remove a different card, and then restart the computer.</li> <li>3 Repeat this process for each card. If the computer starts normally, troubleshoot the last card removed from the computer for resource conflicts (see "Resolving Software and Hardware Incompatibilities" on page 32).</li> <li>4 If the problem persists, contact Dell.</li> </ol>
	Routine system activity preceding video initialization.	Watch your monitor for on-screen messages.
	The computer is in a normal operating condition after POST.	None.
	<b>NOTE:</b> The diagnostic lights flicker briefly; they are turned off after the computer successfully boots to the operating system.	

## Frequently Asked Questions

How Do I...	Solution	Where to Find Additional Information
Set up my computer to use two monitors?	If your computer has the required graphics card to support dual-monitor setup, then look in your shipping box for a Y-cable. The Y-cable has a single connector on one end (plug this connector into the back panel) and branches into two connectors (plug these connectors into the monitor cables).	See "Setting Up Your Computer (Tower Orientation)" on page 9 or "Setting Up Your Computer (Desktop Orientation)" on page 14 for information on connecting dual monitors to your computer.
Connect my monitor when the monitor cable connector doesn't seem to fit the connector on the back of my computer?	If your graphics card has a DVI connector but your monitor has a VGA connector, then you need to use an adapter. An adapter should be included in the shipping box.	See "Setting Up Your Computer (Tower Orientation)" on page 9 or "Setting Up Your Computer (Desktop Orientation)" on page 14 for information on connecting monitors to your computer. For more information, contact Dell. For information on contacting Dell, see your <i>User's Guide</i> .

<b>How Do I...</b>	<b>Solution</b>	<b>Where to Find Additional Information</b>
Connect my speakers?	If you have a sound card installed, connect the speakers to the connectors on the card. "Setting Up Your Computer (Tower Orientation)" on page 9 or "Setting Up Your Computer (Desktop Orientation)" on page 14.	See the documentation that came with your speakers for more information.
Find the right connectors for my USB or IEEE 1394 devices?	<p>Your tower computer has eight USB connectors (two on the front, one internal, and five on the back) and an optional front IEEE 1394 connector.</p> <p>Your desktop computer has eight USB connectors (two on the front, one internal, and five on the back) and an optional front IEEE 1394 connector. This connector is only available if you purchased an IEEE 1394 card. To purchase a card, contact Dell. For more information on the IEEE 1394 card, see your <i>User's Guide</i>.</p>	<p>See "About Your Computer" on page 19 for illustrations of the front and back views of your computer.</p> <p>For help locating your <i>User's Guide</i>, see "Finding Information" on page 5.</p>
Locate information about the hardware and other technical specifications for my computer?	Your <i>User's Guide</i> has a specifications table that provides more detailed information about your computer and the hardware. To locate your <i>User's Guide</i> , see "Finding Information" on page 5.	Go to the Dell Support website at <a href="http://support.dell.com">support.dell.com</a> and use one of the following support tools: read white papers on the latest technology or communicate with other Dell users at the Dell forum chat room.
Find documentation for my computer?	<p>The following documentation is available for your computer:</p> <ul style="list-style-type: none"> <li>• <i>User's Guide</i></li> <li>• <i>Product Information Guide</i></li> <li>• <i>System Information Label</i></li> </ul>	If you lose your documentation, it is available on the Dell Support website at <a href="http://support.dell.com">support.dell.com</a> .
	To locate these documents, see "Finding Information" on page 5.	

# Index

## B

beep codes, 36

## C

cards

  slots, 21, 25

CDs

  operating system, 8

computer

  beep codes, 36

  restore to previous state, 33

conflicts

  software and hardware

    incompatibilities, 32

connectors

  headphone, 20, 25

  keyboard, 23

  line-in, 23

  line-out, 22

  mouse, 22

  network adapter, 23

  parallel, 22

  power, 21, 25

  serial, 23

  sound, 22-23

  USB, 20, 23-24

## D

Dell

  support site, 7

Dell Diagnostics, 35

Dell Premier Support  
  website, 6

diagnostics

  beep codes, 36

  Dell, 35

  lights, 20, 25, 38

documentation

  End User License  
    Agreement, 6

  ergonomics, 6

  online, 7

  Product Information Guide, 6

  Quick Reference, 5

  regulatory, 6

  safety, 6

  User's Guide, 6

  warranty, 6

## E

End User License  
  Agreement, 6

ergonomics information, 6

error messages

  beep codes, 36

  diagnostic lights, 38

## H

hard drive

  activity light, 19-20, 24-25

hardware

  beep codes, 36

  conflicts, 32

  Dell Diagnostics, 35

Hardware Troubleshooter, 32

headphone

  connector, 20, 25

Help and Support Center, 7

help file

  Windows Help and  
    Support Center, 7

## I

IRQ conflicts, 32

## K

keyboard

  connector, 23

## L

labels

  Microsoft Windows, 6

  Service Tag, 6

**lights**  
back of computer, 38  
diagnostic, 20, 25, 38  
hard drive activity,  
    19-20, 24-25  
link integrity, 22  
network, 22-23  
network activity, 23  
power, 20, 25

**M**  
Microsoft Windows label, 6  
mouse  
    connector, 22

**N**  
network  
    connector, 23

**O**  
operating system  
    CD, 8  
    reinstalling, 8

**P**  
power  
    button, 20, 24  
    connector, 21, 25  
    light, 20, 25

**problems**  
beep codes, 36  
conflicts, 32  
Dell Diagnostics, 35  
diagnostic lights, 38  
restore to previous state, 33  
**Product Information Guide**, 6

**R**  
regulatory information, 6  
**ResourceCD**  
    Dell Diagnostics, 35

**S**  
safety instructions, 6  
**Service Tag**, 6  
software  
    conflicts, 32  
sound connectors  
    line-in, 23  
    line-out, 22  
support website, 7  
System Restore, 33

**T**  
**troubleshooting**  
    conflicts, 32  
    Dell Diagnostics, 35  
    diagnostic lights, 38  
    Hardware Troubleshooter, 32  
    Help and Support Center, 7  
    restore to previous state, 33

**U**  
**USB**  
    connector, 23  
    connectors, 20, 24  
**User's Guide**, 6

**W**  
**warranty information**, 6  
**Windows XP**  
    Hardware Troubleshooter, 32  
    Help and Support Center, 7  
    reinstalling, 8  
    System Restore, 33

Dell Precision Workstation 490

# 快速参考指南

型号: DCTA

[www.dell.com](http://www.dell.com) | [support.dell.com](http://support.dell.com)

## 注、注意和警告

 **注：**注表示可以帮助您更好地使用计算机的重要信息。

 **注意：**注意表示可能会损坏硬件或导致数据丢失，并告诉您如何避免此类问题。

 **警告：**警告表示可能会导致财产损失、人身伤害甚至死亡。

## 缩写词和缩略词

有关缩写词和缩略词的完整列表，请参阅《用户指南》中的“词汇表”。

如果您购买的是 Dell n Series 计算机，则本说明文件中有关 Microsoft® Windows® 操作系统的所有参考信息均不适用。

---

本说明文件中的信息如有更改，恕不另行通知。

© 2006 Dell Inc. 版权所有，翻印必究。

未经 Dell Inc. 书面许可，严禁以任何形式进行复制。

本文中使用的商标：*Dell*、DELL 徽标和 *Dell Precision* 是 Dell Inc. 的商标；*Intel*、*Xeon* 和 *Pentium* 是 Intel Corporation 的注册商标；*Microsoft* 和 *Windows* 是 Microsoft Corporation 的注册商标。

本文件中述及的其它商标和产品名称是指拥有相应商标和名称的公司或其制造的产品。Dell Inc. 对本公司的商标和产品名称之外的其它商标和产品名称不拥有任何专有权。

型号：DCTA

# 目录

<b>查找信息</b>	<b>51</b>
<b>安装计算机 (塔式机箱方向)</b>	<b>55</b>
<b>安装计算机 (台式机箱方向)</b>	<b>60</b>
<b>关于计算机</b>	<b>65</b>
正面视图 (塔式机箱方向)	65
背面视图 (塔式机箱方向)	67
背面板连接器	68
正面视图 (台式机箱方向)	70
背面视图 (台式机箱方向)	71
内部视图	72
内部视图 — 已旋出硬盘驱动器托架	73
系统板组件	74
电缆颜色	75
<b>查找《用户指南》</b>	<b>76</b>
<b>卸下主机盖</b>	<b>76</b>
<b>维护计算机</b>	<b>78</b>
<b>解决问题</b>	<b>78</b>
故障排除提示	78
解决软件与硬件不兼容的问题	78
使用 Microsoft® Windows® XP 系统还原	79
使用最后一次正确的配置	80
Dell 诊断程序	81
开始检测之前	82
<b>哔声代码</b>	<b>82</b>
错误信息	84
<b>诊断指示灯</b>	<b>84</b>
开机自测 (POST) 之前的诊断指示灯代码	84
开机自测 (POST) 期间的诊断指示灯代码	86
<b>常见问题解答</b>	<b>88</b>
<b>索引</b>	<b>91</b>



# 查找信息

 **注：**某些功能部件或介质可能是可选的，并未随您的计算机一起提供。某些国家或地区可能并未提供某些功能部件或介质。


 **注：**此外，您的计算机还可能附带了其它信息。

您查找的内容	可以找到的位置
<ul style="list-style-type: none"><li>适用于计算机的诊断程序</li><li>适用于计算机的驱动程序</li><li>计算机说明文件</li><li>设备说明文件</li><li>桌面系统软件 (DSS)</li></ul>	<p><b>Drivers and Utilities CD (也称为 Resource CD)</b></p>  <p>您的计算机中已经安装了说明文件和驱动程序。您可以使用此 CD 重新安装驱动程序、运行 Dell 诊断程序或查看说明文件。CD 中可能包含自述文件，介绍了有关计算机技术更改的最新更新信息，或者为技术人员或有经验的用户提供了高级技术参考资料。</p> <p><b>注：</b>在 support.dell.com 上可以找到更新的驱动程序和说明文件。</p>
<ul style="list-style-type: none"><li>如何安装计算机</li><li>如何维护计算机</li><li>基本故障排除信息</li><li>如何运行 Dell 诊断程序</li><li>错误代码和诊断指示灯</li><li>如何卸下和安装部件</li><li>如何打开主机盖</li></ul>	<p><b>快速参考指南</b></p>  <p>注：在 support.dell.com 上可获得以 PDF 格式提供的此说明文件。</p>

您查找的内容	可以找到的位置
<ul style="list-style-type: none"> <li>• 保修信息</li> <li>• 条款和条件（仅限于美国）</li> <li>• 安全说明</li> <li>• 管制信息</li> <li>• 人机工程学信息</li> <li>• 最终用户许可协议</li> </ul>	<b>Dell 产品信息指南</b>
	
<ul style="list-style-type: none"> <li>• 如何卸下和装回部件</li> <li>• 规格</li> <li>• 如何配置系统设置</li> <li>• 如何排除故障并解决问题</li> </ul>	<b>用户指南</b>
<ul style="list-style-type: none"> <li>• 服务标签和快速服务代码</li> <li>• Microsoft Windows 许可证标签</li> </ul>	<p><b>Microsoft®Windows® XP 帮助和支持中心</b></p> <p><b>1</b> 单击 Start (开始) 按钮，然后单击 Help and Support (帮助和支持)</p> <p><b>2</b> 单击 Users and system guides (用户和系统指南)，并单击 User's Guide (用户指南)</p> <p>《用户指南》还可以在 Drivers and Utilities CD 上获得。</p> <p><b>服务标签和 Microsoft® Windows® 许可证</b></p> <p>这些标签均位于计算机上。</p> <ul style="list-style-type: none"> <li>• 当您使用 support.dell.com 或与技术支持人员联系时，技术支持人员将使用此服务标签来识别您的计算机。</li> <li>• 与技术支持人员联系时，请输入快速服务代码以转接您的电话。</li> </ul>

您查找的内容	可以找到的位置
• 解决方案 — 故障排除提示和技巧、技术人员发表的文章以及在线课程、常见问题解答	<b>Dell 支持 Web 站点 — support.dell.com</b> <b>注：</b> 选择您所在地区或您的业务领域以查看相应的支持站点。
• 团体 — 与其他 Dell 客户进行在线讨论	
• 升级 — 内存、硬盘驱动器和操作系统等组件的升级信息	<b>注：</b> 公司、政府和教育机构客户还可以使用定制的 Dell 客户特选支持 Web 站点 premier.support.dell.com。并非所有地区均可访问此 Web 站点。
• 客户服务 — 联系信息、服务请求和订单状态、保修以及维修信息	
• 服务和支持 — 服务请求状态和支持历史记录、服务合同、与技术支持人员在线讨论	
• 参考资料 — 计算机说明文件、关于计算机配置的详情、产品规格和白皮书	
• 下载 — 认证的驱动程序、补丁和软件更新	
• 桌面系统软件 (DSS) — 如果您为计算机重新安装了操作系统，在安装任何驱动程序之前，应重新安装 DSS 公用程序。DSS 为操作系统提供了关键更新，并为 Dell 3.5 英寸 USB 软盘驱动器、光盘驱动器以及 USB 设备提供支持。要使 Dell 计算机正常，DSS 是必不可少的。该软件自动检测您的计算机和操作系统，并安装与配置相对应的更新。	
• 如何使用 Windows XP	<b>Windows 帮助和支持中心</b>
• 如何使用程序和文件	1 单击 Start (开始) 按钮，并单击 Help and Support (帮助和支持)。
• 设备说明文件 (如调制解调器)	2 键入说明问题的字词，然后单击箭头图标。
	3 单击说明问题的主题。
	4 并按照屏幕上的说明进行操作。

您查找的内容	可以找到的位置
• 如何重新安装操作系统	操作系统 CD
<ul style="list-style-type: none"> <li>• 如何使用 Linux</li> <li>• 通过电子邮件与 Dell Precision 产品和 Linux 操作系统的用户进行讨论</li> <li>• 有关 Linux 和 Dell Precision 计算机的其它信息</li> </ul>	<p><b>Dell 支持的 Linux 站点</b></p> <ul style="list-style-type: none"> <li>• <a href="http://Linux.dell.com">Linux.dell.com</a></li> <li>• <a href="http://Lists.us.dell.com/mailman/listinfo/linux-precision">Lists.us.dell.com/mailman/listinfo/linux-precision</a></li> </ul>

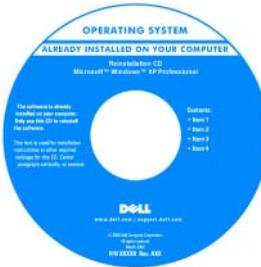

您的计算机已经安装了操作系统。要重新安装操作系统，请使用操作系统 CD。有关说明，请参阅《用户指南》。重新安装操作系统之后，请使用 *Drivers and Utilities CD (Resource CD)* 为计算机附带的设备重新安装驱动程序。操作系统产品密钥标签位于计算机上。

**注：**CD 的颜色视订购的操作系统不同而有所不同。

**注：**操作系统 CD 可能是可选的，并未随您的计算机一起提供。


## 安装计算机（塔式机箱方向）

**！ 警告：**在开始本节中的任何过程之前，请先参阅《产品信息指南》中的安全说明。

为了正确安装计算机，请务必完成所有步骤。

1

连接键盘和鼠标。

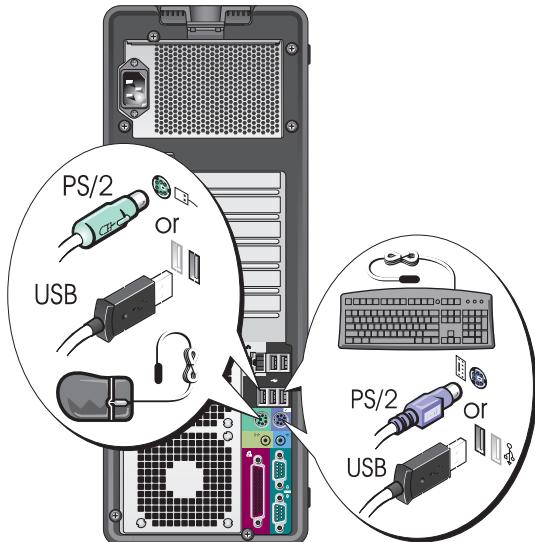


2

连接调制解调器或网络电缆。

**→ 注意：**请勿将调制解调器电缆连接至网络适配器。电话通信产生的电压可能会损坏网络适配器。

**注：**如果您的计算机已安装网卡，请将网络电缆连接至此卡。

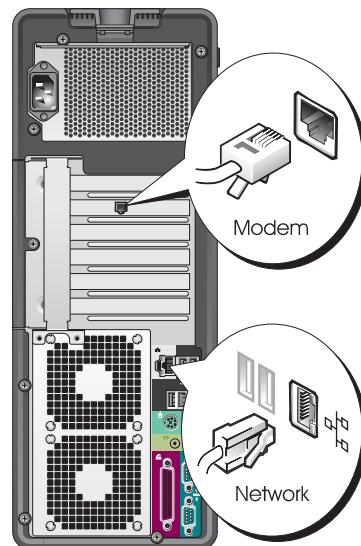


### 3

连接显示器。

您可以采用不同方式连接显示器，视您的图形卡而定。

 **注：**您可能需要使用附带的适配器或电缆，才能将显示器连接至计算机。

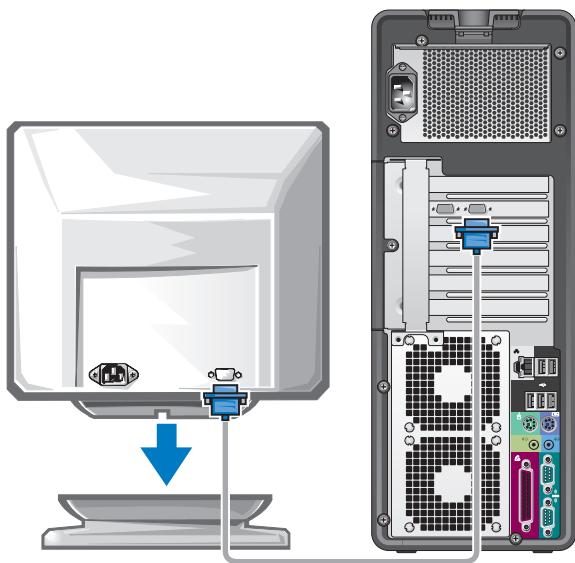


---

## 配备单个连接器并支持单显示器和双显示器的插卡

---


一个 VGA 适配器：

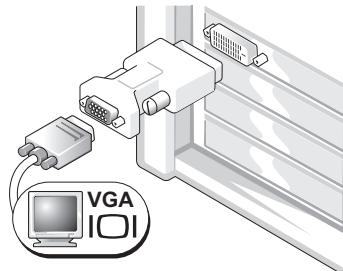

如果您具有单显示器图形卡，并且想将计算机连接至一台 VGA 显示器，请使用 VGA 适配器。

---


双 VGA Y 型电缆适配器：

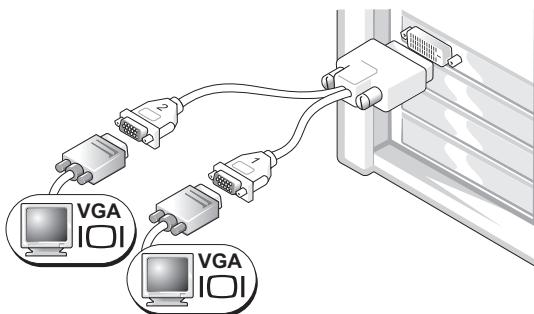

如果您的图形卡只有一个连接器，而您想将计算机连接至一台或两台 VGA 显示器，请使用适当的 Y 型电缆。

---

双 DVI Y 型电缆适配器：

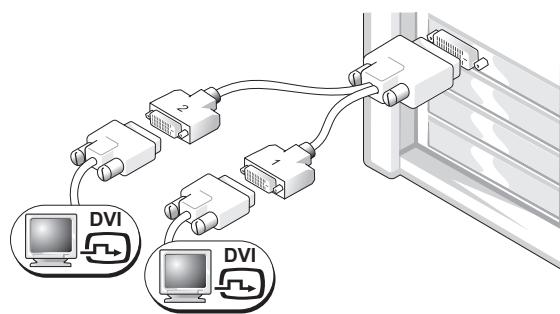

如果您的图形卡只有一个连接器，而您想将计算机连接至一台或两台 DVI 显示器，请使用适当的 Y 型电缆。

---


双显示器电缆具有彩色编码，蓝色的连接器用于主显示器，黑色的连接器用于次显示器。要启用双显示器支持功能，当您启动计算机时，两台显示器必须已连接至计算机。

---

### 配备1个DVI连接器和1个VGA连接器并支持双显示器的插卡


---

一个DVI连接器和一个VGA连接器:

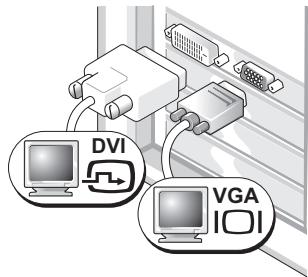

要将计算机连接至一台或两台显示器，请使用适当的连接器。

配备一个VGA适配器的两个VGA连接器:

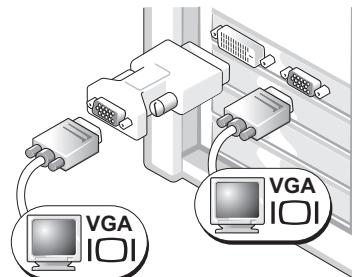

要将计算机连接至两台VGA显示器，请使用VGA适配器。


---

---

### 配备2个DVI连接器并支持双显示器的插卡


---

两个DVI连接器:

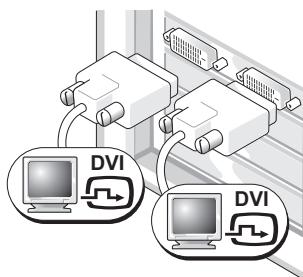


使用DVI连接器将计算机连接至一台或两台DVI显示器。

配备一个VGA适配器的两个DVI连接器:

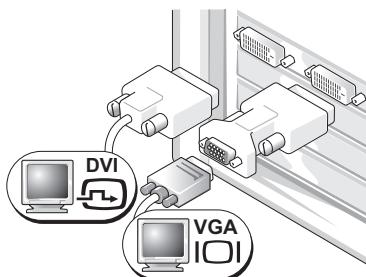

使用VGA适配器将VGA显示器连接至计算机上的一个DVI连接器

配备两个VGA适配器的两个DVI连接器:

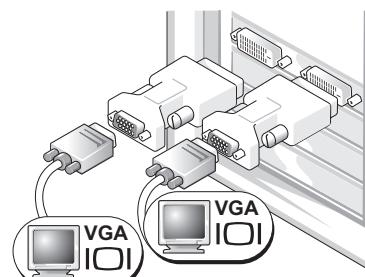

使用两个VGA适配器将两台VGA显示器连接至计算机上的DVI连接器。


---

4

连接扬声器。




注：如果您的计算机已安装声卡，请将扬声器连接至此卡。

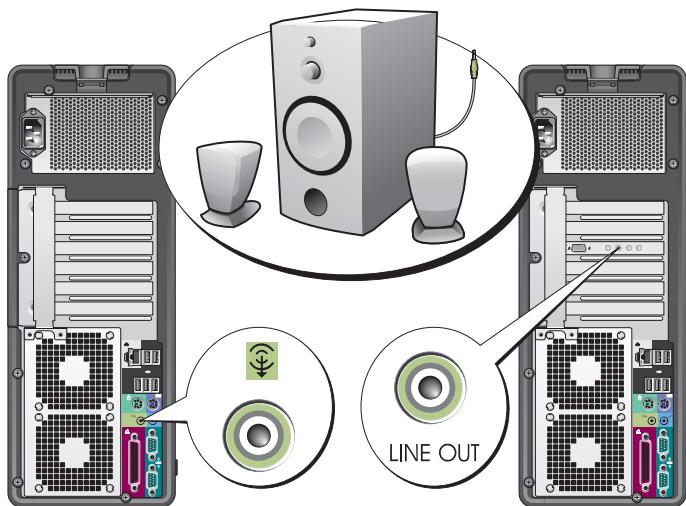

5

连接电源电缆并打开计算机和显示器。

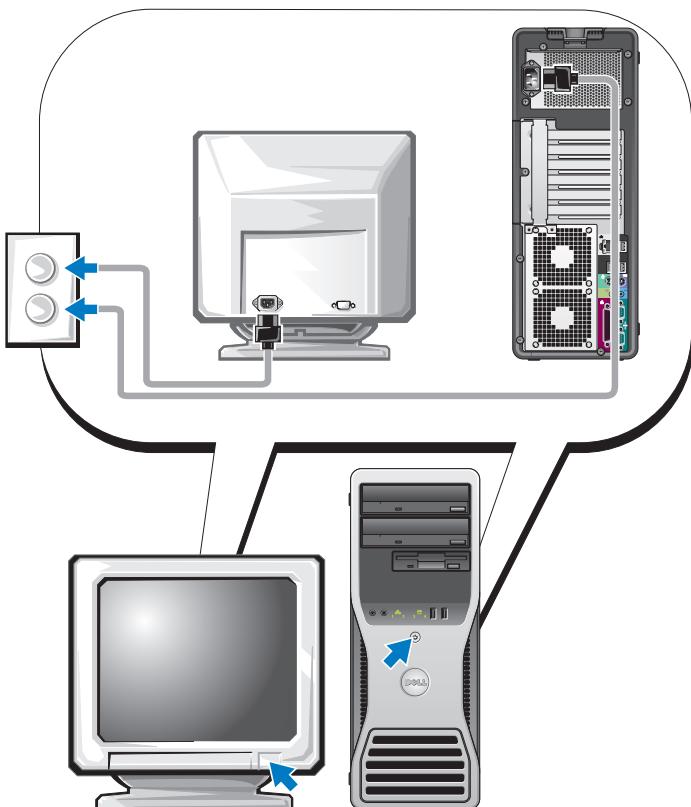

## 6

安装附加软件或设备。

安装并非计算机附带的任何设备或软件之前，请先阅读随该软件或设备附带的说明文件或与制造商联系，确认软件或设备是否与您的计算机和操作系统兼容。

现在，塔式计算机的安装已完成。

## 安装计算机（台式机箱方向）


**！ 警告：**在开始本节中的任何过程之前，请先参阅《产品信息指南》中的安全说明。

为了正确安装计算机，请务必完成所有步骤。

## 1

连接键盘和鼠标。

**→ 注意：**请勿将调制解调器电缆连接至网络适配器。电话通信产生的电压可能会损坏网络适配器。

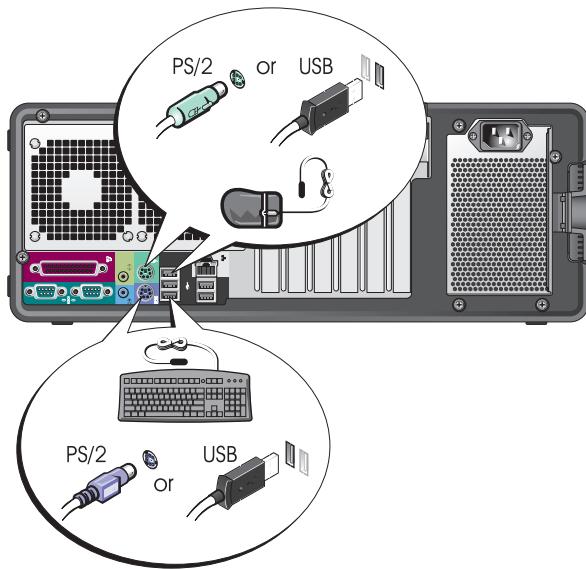


2

连接调制解调器或网络电缆。



**注:** 如果您的计算机已安装网卡, 请将网络电缆连接至此卡。

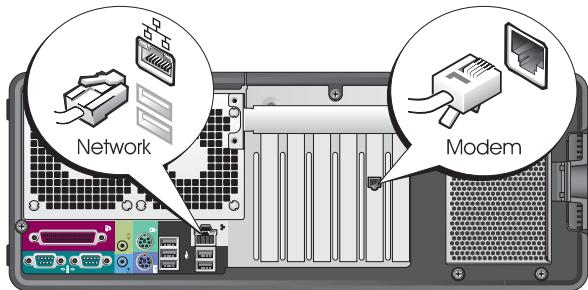


3

连接显示器。

您可以采用不同方式连接显示器, 视您的图形卡而定。



**注:** 您可能需要使用附带的适配器或电缆, 才能将显示器连接至计算机。

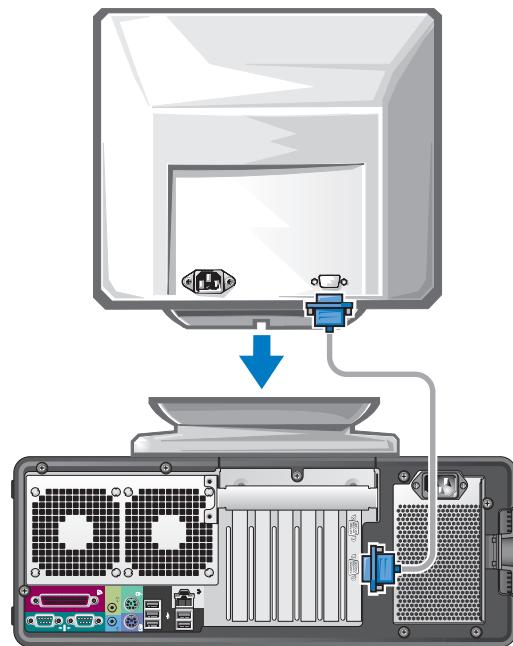


---

## 配备单个连接器并支持单显示器和双显示器的插卡


---

VGA 适配器：

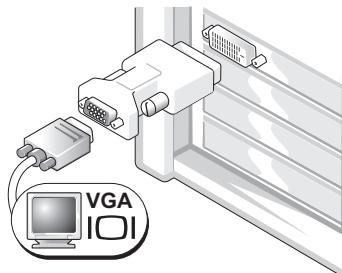


如果您具有单显示器图形卡，并且想将计算机连接至 VGA 显示器，请使用 VGA 适配器。

双 VGA Y 型电缆适配器：

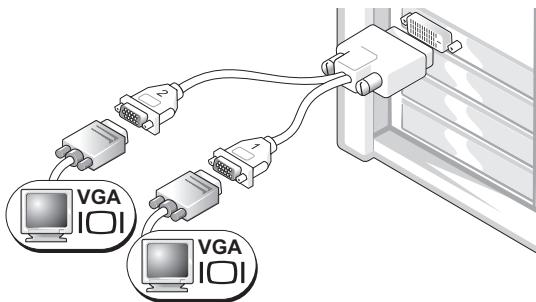

如果您的图形卡只有一个连接器，而您想将计算机连接至一台或两台 VGA 显示器，请使用适当的 Y 型电缆。

双 DVI Y 型电缆适配器：

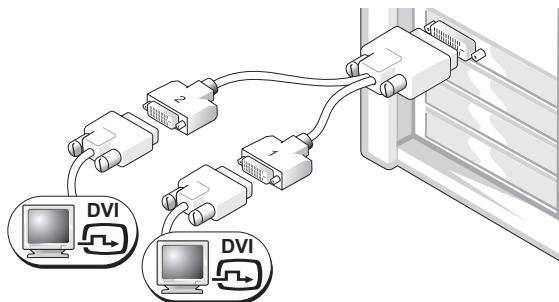

如果您的图形卡只有一个连接器，而您想将计算机连接至一台或两台 DVI 显示器，请使用适当的 Y 型电缆。


双显示器电缆具有彩色编码，蓝色的连接器用于主显示器，黑色的连接器用于次显示器。要启用双显示器支持功能，当您启动计算机时，两台显示器必须已连接至计算机。

---

### 配备1个DVI连接器和1个VGA连接器并支持双显示器的插卡


---

一个DVI连接器和一个VGA连接器:

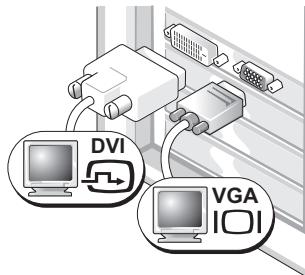

要将计算机连接至一台或两台显示器，请使用适当的连接器。

配备一个VGA适配器的两个VGA连接器:

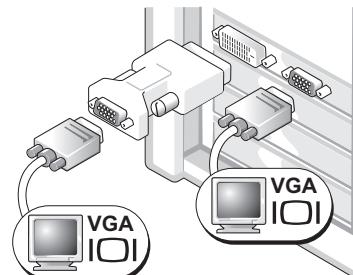


要将计算机连接至两台VGA显示器，请使用VGA适配器。

---

### 配备2个DVI连接器并支持双显示器的插卡


---

两个DVI连接器:

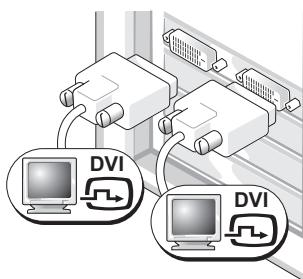


使用DVI连接器将计算机连接至一台或两台DVI显示器。

配备一个VGA适配器的两个DVI连接器:

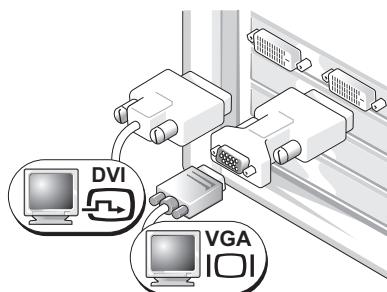

使用VGA适配器将VGA显示器连接至计算机上的一个DVI连接器。

配备两个VGA适配器的两个DVI连接器:

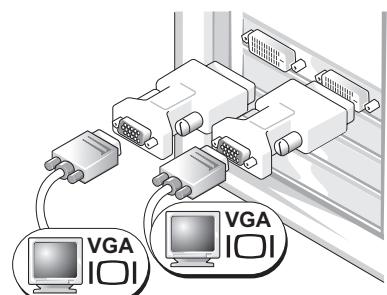


使用两个VGA适配器将两台VGA显示器连接至计算机上的DVI连接器。

---

4


连接扬声器。

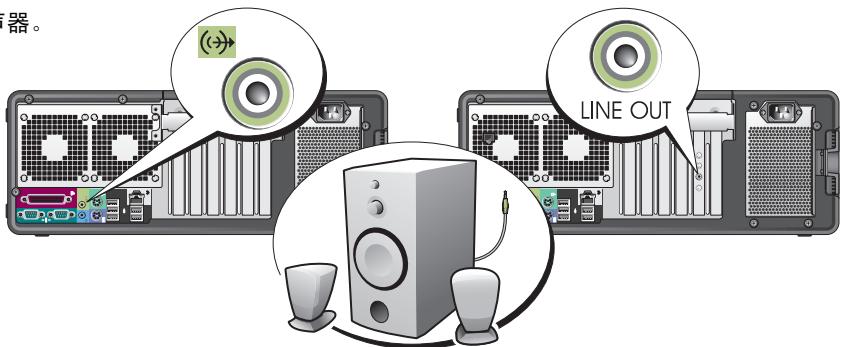

注：如果您的计算机已安装声卡，请将扬声器连接至此卡。

5

连接电源电缆并打开计算  
机和显示器。

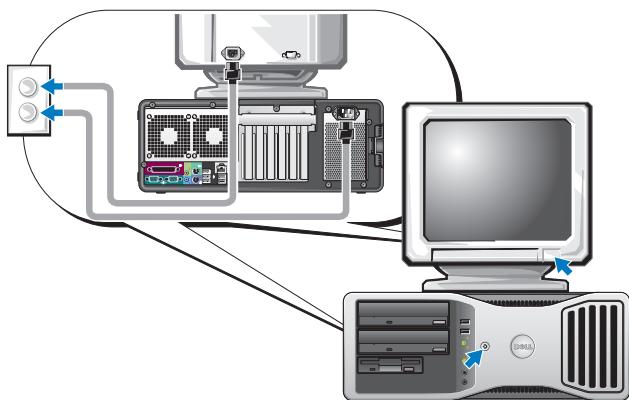

6


安装附加软件或设备。

安装并非计算机附带的任何设备或软件之前，请先阅读随该软件或设备附带的说明文件或与制造商联系，确认软件或设备是否与您的计算机和操作系统兼容。

现在，台式计算机安装已完成。

# 关于计算机


## 正面视图（塔式机箱方向）

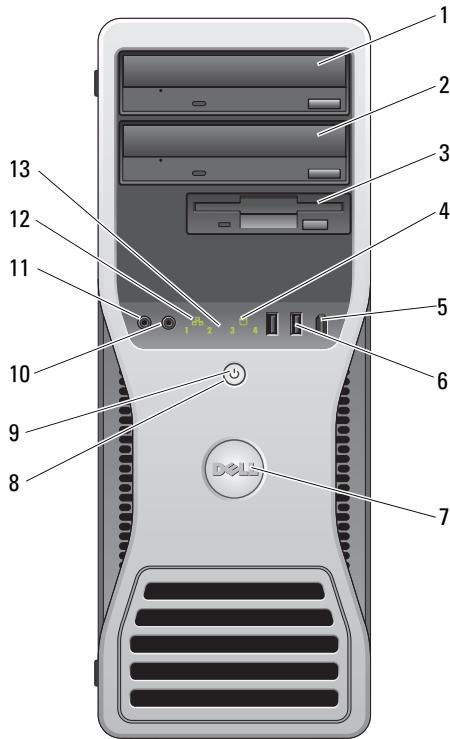

1	上部 5.25 英寸驱动器托架	容纳 CD/DVD 驱动器。
2	下部 5.25 英寸驱动器托架	使用此托架可以安装可选 CD/DVD 驱动器。
3	灵活托架	可以使用该托架安装可选的第三块硬盘驱动器（SATA 或 SAS）、软盘驱动器或介质卡阅读器。
4	硬盘驱动器活动指示灯	硬盘驱动器指示灯在计算机从硬盘驱动器读取数据或向其写入数据时亮起。CD 播放器等设备运行时，该指示灯也会亮起。
5	IEEE 1394 连接器 (可选)	可选的 IEEE 1394 连接器用于连接高速数据设备，如数码摄像机和外部存储设备。


6	USB 2.0 连接器 (2)	正面的 USB 连接器用于不经常连接的设备（如闪存钥匙或照相机）或可引导的 USB 设备（有关引导至 USB 设备的详情，请参阅《用户指南》中的“系统设置程序”）。 对于通常保持连接的设备（例如打印机和键盘），建议您使用背面的 USB 连接器。
7	Dell 可旋转徽章	要在将计算机从塔式转换至台式时旋转 Dell 徽章，请卸下前面板，并将其翻转，然后旋转徽章后面的塑料手柄。
8	电源按钮	按下此按钮可以打开计算机。 <b>注意：</b> 为避免丢失数据，请勿使用电源按钮关闭计算机，而应执行关闭操作系统操作。 <b>注：</b> 电源按钮还可以用于唤醒系统或使系统处于节能状态。有关详情，请参阅《用户指南》中的“电源管理”。
9	电源指示灯	电源指示灯通过亮起、闪烁或稳定不变来表示不同的状态： <ul style="list-style-type: none"><li>• 不亮 — 表示计算机已关闭。</li><li>• 呈绿色稳定亮起 — 计算机处于正常运行状态。</li><li>• 呈绿色闪烁 — 计算机处于节能状态。</li><li>• 呈琥珀色闪烁或呈琥珀色稳定亮起 — 请参阅《用户指南》中的“电源问题”。</li></ul> 要退出节能状态，请按电源按钮，或者使用键盘或鼠标（如果该设备已在 Windows 设备管理器中配置为唤醒设备）。有关休眠状态和退出节能状态的详情，请参阅《用户指南》。 有关可帮助您排除计算机故障的指示灯代码的说明，请参阅第 84 页的“诊断指示灯”。
10	耳机连接器	此耳机连接器用于连接耳机。
11	麦克风连接器	此麦克风连接器用于连接个人计算机麦克风，将语音或音乐输入至声音或电话程序。
12	网络链路指示灯	当计算机与 10 Mbps、100 Mbps 或 1000 Mbps（或 1 Gbps）网络之间连接良好时，网络链路指示灯亮起。
13	诊断指示灯 (4)	使用这些指示灯可以帮助您根据诊断代码排除计算机的故障。有关详情，请参阅第 84 页的“诊断指示灯”。

## 背面视图（塔式机箱方向）

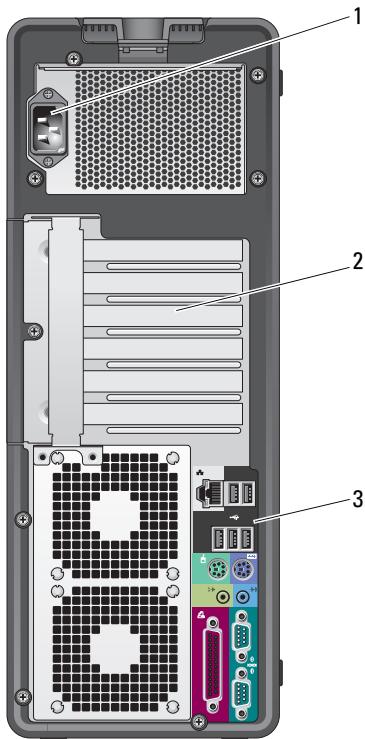

1 电源连接器	用于连接电源电缆。
2 卡插槽	用于操作任何已安装的 PCI 卡、PCI-X 卡或 PCI Express 卡的连接器。 <b>注：</b> 中间的四个插槽支持全长插卡：一个 PCI-X 插槽、一个 PCI Express x8 插槽（按 x4 方式接线）、一个 PCI Express x16 插槽和一个 PCI 插槽；顶部和底部的插槽支持半长插卡：一个 PCI-X 插槽和一个 PCI Express x8 插槽（按 x4 方式接线）。
3 背面板连接器	用于将串行设备、USB 设备和其它设备连接至相应的连接器。

## 背面板连接器

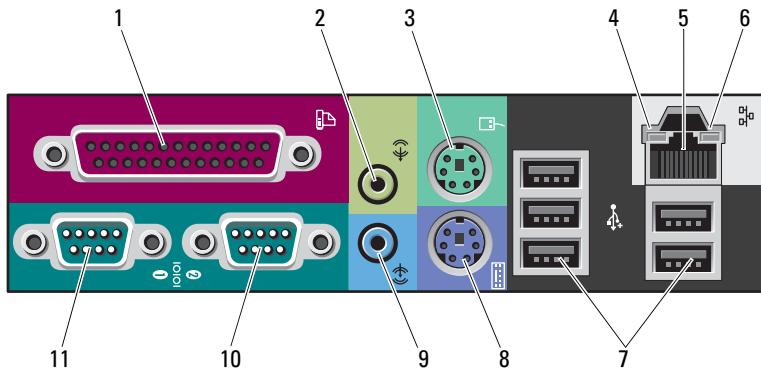

**1 并行连接器** 此并行连接器用于连接并行设备（例如打印机）。如果您使用 USB 打印机，请将其插入 USB 连接器。

**注：**如果计算机检测到已安装的插卡包含配置为相同地址的并行连接器，则计算机将自动禁用集成并行连接器。有关详情，请参阅《用户指南》。

**2 输出 / 耳机连接器** 此绿色输出连接器用于连接耳机和大多数带有集成放大器的扬声器。

对于配有声卡的计算机，请使用声卡上的连接器。

**3 PS/2 鼠标连接器** 绿色鼠标连接器用于连接标准鼠标。将鼠标连接至计算机之前，请关闭计算机和所有连接的设备。如果您使用 USB 鼠标，请将其插入 USB 连接器。

如果计算机运行的是 Microsoft® Windows® XP 操作系统，则硬盘驱动器上已安装了所需的鼠标驱动程序。

**4 链路完整性指示灯** • 绿色 — 计算机与 10 Mbps 网络连接良好。

• 橙色 — 计算机与 100 Mbps 网络连接良好。

• 黄色 — 计算机与 1000 Mbps（或 1 Gbps）网络连接良好。


• 不亮 — 计算机未检测到与网络的物理连接。

---

5 网络适配器连接器	要将计算机连接至网络或宽带设备，请将网络电缆的一端连接至网络插孔、网络设备或宽带设备。将网络电缆的另一端连接至计算机上的网络适配器连接器。听到咔嗒声表示网络电缆已连接稳固。 <b>注：</b> 切勿将电话线插入网络连接器。
	对于配有其它网络连接器卡的计算机，在设置多个网络连接（如独立的内部网和外部网）时，请使用该卡上以及计算机背面的连接器。
	建议在您的网络中使用 5 类电缆和连接器。如果必须使用 3 类电缆，请将网络速率强行设置为 10 Mbps 以确保运行可靠。
6 网络活动指示灯	黄色指示灯，当计算机在传输或接收网络数据时闪烁。网络通信量较大时，此指示灯可能会处于稳定“亮起”状态。
7 USB 2.0 连接器 (5)	对于不经常连接的设备（例如闪存钥匙或照相机）或可引导的 USB 设备，建议您使用正面的 USB 连接器。 背面的 USB 连接器用于通常保持连接的设备（例如打印机和键盘）。
8 PS/2 键盘连接器	如果使用的是标准键盘，请将其连接至紫色的键盘连接器。如果您使用 USB 键盘，请将其插入 USB 连接器。
9 输入连接器	此蓝色输入连接器用于连接录音 / 播放设备，例如磁带播放机、CD 播放器或 VCR。 对于配有声卡的计算机，请使用声卡上的连接器。
10 串行连接器	用于将串行设备（例如掌上设备）连接至串行端口。如果需要，可以通过系统设置程序修改该端口的地址。有关详情，请参阅《用户指南》。
11 串行连接器	用于将串行设备（例如掌上设备）连接至串行端口。如果需要，可以通过系统设置程序修改该端口的地址。有关详情，请参阅《用户指南》。

---

## 正面视图（台式机箱方向）

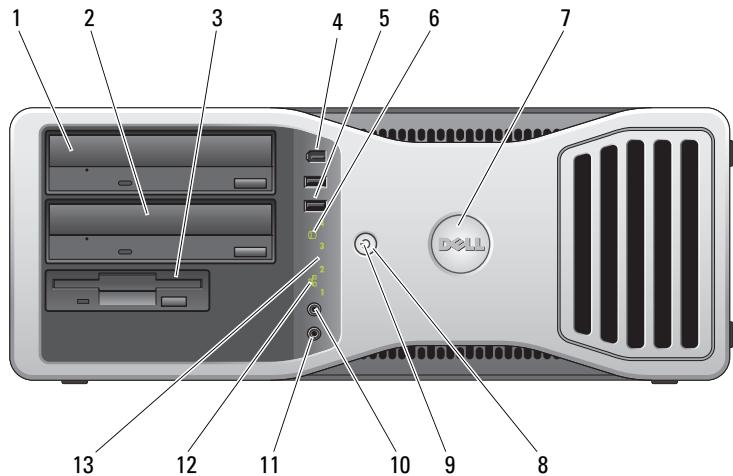


1 上部 5.25 英寸驱动器托架	容纳 CD/DVD 驱动器。
2 下部 5.25 英寸驱动器托架	使用此托架可以安装可选 CD/DVD 驱动器或 SATA 硬盘驱动器。
3 灵活托架	可以使用该托架安装软盘驱动器或介质卡阅读器。
4 IEEE 1394 连接器（可选）	可选的 IEEE 1394 连接器用于连接高速数据设备，如数码摄像机和外部存储设备。
5 USB 2.0 连接器 (2)	正面的 USB 连接器用于不经常连接的设备（例如闪存钥匙或照相机）或可引导的 USB 设备（有关引导至 USB 设备的详情，请参阅《用户指南》中的“系统设置程序”）。 对于通常保持连接的设备（例如打印机和键盘），建议您使用背面的 USB 连接器。
6 硬盘驱动器活动指示灯	硬盘驱动器指示灯在计算机从硬盘驱动器读取数据或向其写入数据时亮起。CD 播放器等设备运行时，该指示灯也会亮起。
7 Dell 可旋转徽章	要在将计算机从塔式转换至台式时旋转 Dell 徽章，请卸下前面板，并将其翻转，然后旋转徽章后面的塑料手柄。
8 电源按钮	按下此按钮可以打开计算机。 <b>注意：</b> 为避免丢失数据，请勿使用电源按钮关闭计算机，而应执行关闭操作系统操作。 <b>注：</b> 电源按钮还可以用于唤醒系统或使系统处于节能状态。有关详情，请参阅《用户指南》。

---

9	电源指示灯	电源指示灯通过亮起、闪烁或稳定不变来表示不同的状态： <ul style="list-style-type: none"><li>不亮 — 表示计算机已关闭。</li><li>呈绿色稳定亮起 — 计算机处于正常运行状态。</li><li>呈绿色闪烁 — 计算机处于节能状态。</li><li>呈琥珀色闪烁或呈琥珀色稳定亮起 — 请参阅《用户指南》中的“电源问题”。</li></ul>
		要退出节能状态，请按电源按钮，或者使用键盘或鼠标（如果该设备已在 Windows 设备管理器中配置为唤醒设备）。有关休眠状态和退出节能状态的详情，请参阅《用户指南》。
		有关可帮助您排除计算机故障的指示灯代码的说明，请参阅第 84 页的“诊断指示灯”。
10	耳机连接器	此耳机连接器用于连接耳机。
11	麦克风连接器	此麦克风连接器用于连接个人计算机麦克风，将语音或音乐输入至声音或电话程序。
12	网络链路指示灯	当计算机与 10 Mbps、100 Mbps 或 1000 Mbps（或 1 Gbps）网络之间连接良好时，网络链路指示灯亮起。
13	诊断指示灯 (4)	使用这些指示灯可以帮助您根据诊断代码排除计算机的故障。有关详情，请参阅第 84 页的“诊断指示灯”。

---

## 背面视图（台式机箱方向）

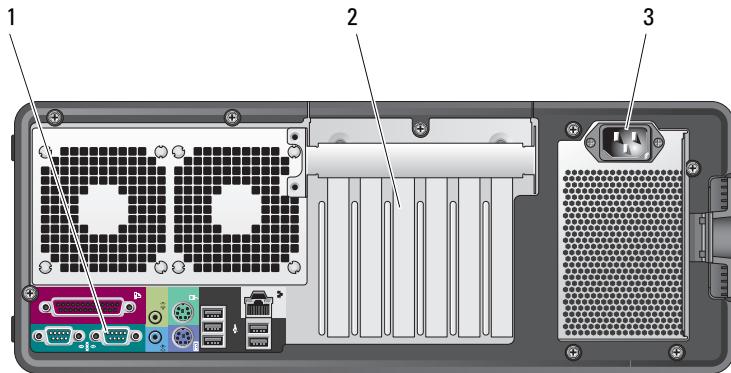



---

1	背面板连接器	用于将串行设备、USB 设备和其它设备连接至相应的连接器。
2	卡插槽	用于操作任何已安装的 PCI 卡、PCI-X 卡或 PCI Express 卡的连接器。 <b>注：</b> 最左边的插槽和右边的两个插槽支持半长插卡：一个 PCI Express x8 插槽（按 x4 方式接线）和两个 PCI-X 插槽。中间的三个插槽支持全长插卡：一个 PCI Express x16 插槽、一个 PCI Express x8 插槽（按 x4 方式接线）和一个 PCI 插槽。
3	电源连接器	用于连接电源电缆。


---

## 内部视图

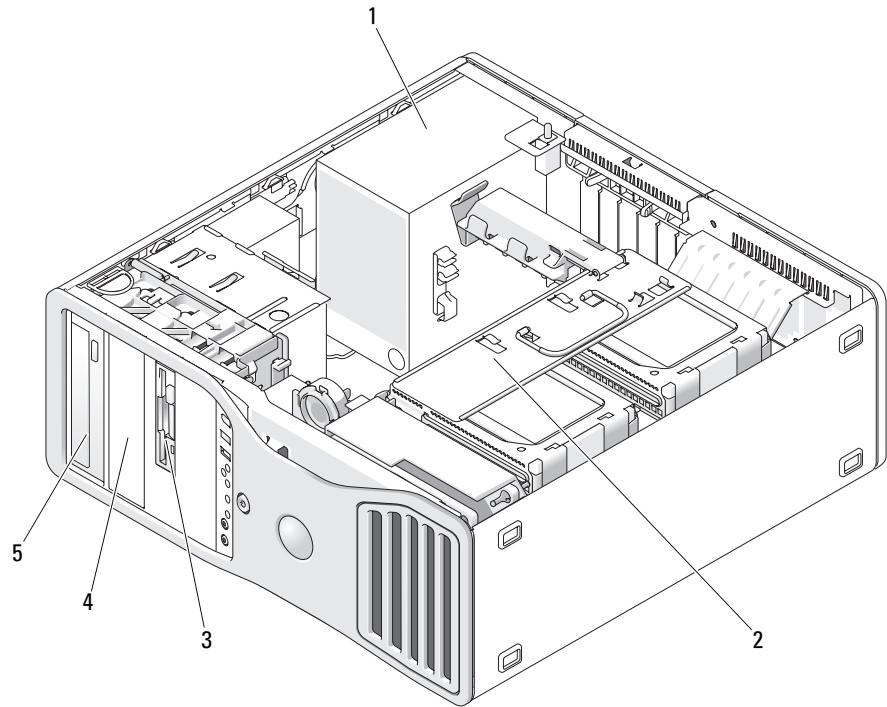

- |                   |                   |        |
|-------------------|-------------------|--------|
| 1 电源设备            | 2 可旋转的硬盘驱动器托架     | 3 灵活托架 |
| 4 下部 5.25 英寸驱动器托架 | 5 上部 5.25 英寸驱动器托架 |        |

## 内部视图 — 已旋出硬盘驱动器托架

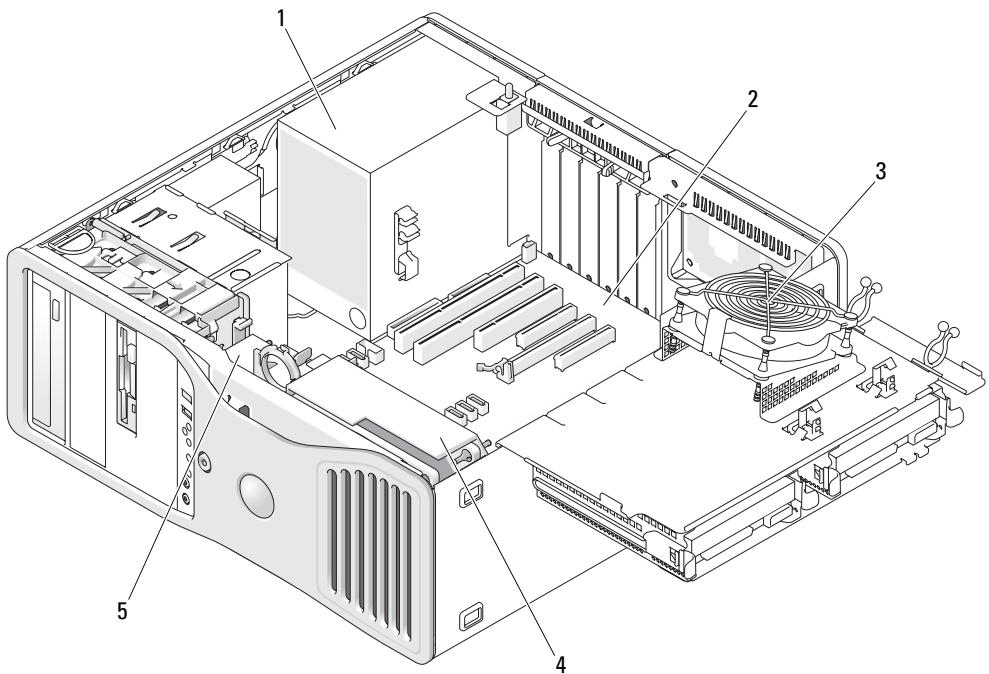


- 1 电源设备  
4 前面风扇

- 2 系统板  
5 卡风扇

- 3 内存风扇

## 系统板组件

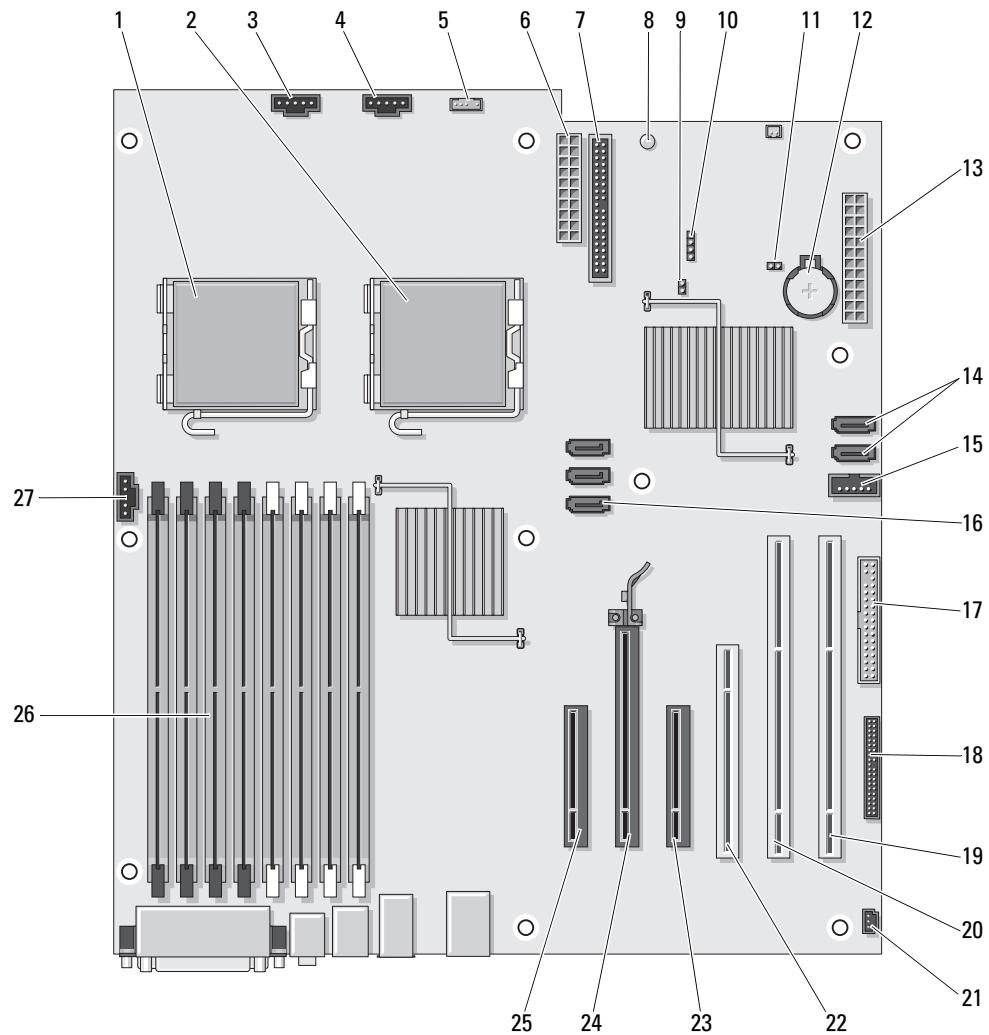

- |    |                           |    |   |
|----|---------------------------|----|---|
| 1  | 主处理器连接器 (CPU_0)           | 15 | 灵活托架连接器 (USB)                                 |
| 2  | 次处理器连接器 (CPU_1)           | 16 | SATA 连接器 (SATA_2、SATA_1、SATA_0)               |
| 3  | 前面风扇连接器 (FAN_FRONT)       | 17 | 软盘驱动器 (DSKT)                                  |
| 4  | 插卡固定框架风扇 (FAN_CCAG)       | 18 | 前面板连接器 (FRONTPANEL)                           |
| 5  | 内部扬声器连接器 (INT_SPKR)       | 19 | PCI-X 卡插槽 (SLOT6_PCIX)                        |
| 6  | 电源连接器 (POWER2)            | 20 | PCI-X 卡插槽 (SLOT5_PCIX)                        |
| 7  | IDE 驱动器连接器 (IDE)          | 21 | 机箱防盗接头 (INTRUDER)                             |
| 8  | 备用电源指示灯 (AUX_PWR)         | 22 | PCI 卡插槽 (SLOT4_PCI)                           |
| 9  | 密码跳线 (PSWD)               | 23 | PCI-Express x8 卡插槽, 按 x4 方式接线<br>(SLOT3_PCIE) |
| 10 | 辅助硬盘驱动器 LED 连接器 (AUX_LED) | 24 | PCI-Express x16 卡插槽 (SLOT2_PCIE)              |
| 11 | RTC 重设跳线 (RTCRST)         | 25 | PCI-Express x8 卡插槽, 按 x4 方式接线<br>(SLOT1_PCIE) |
| 12 | 电池槽 (BATTERY)             | 26 | 内存模块连接器 (DIMM_1-8)                            |
| 13 | 主电源连接器 (POWER1)           | 27 | 内存风扇连接器 (FAN_MEM)                             |
| 14 | SATA 连接器 (SATA_4、SATA_3)  |    |   |

## 电缆颜色

设备	颜色
SATA 硬盘驱动器	蓝色电缆
软盘驱动器	黑色拉舌
CD/DVD 驱动器	橙色拉舌
前面板	黄色拉舌

## 查找《用户指南》

《用户指南》中包含有关计算机的以下附加信息：

- 技术规格
- 有关将计算机方向从台式更改至塔式的信息
- 计算机正面和背面视图，包括所有可用连接器
- 计算机内部视图，包括系统板和连接器的详细图形
- 计算机清洁说明
- 关于软件功能的信息，如 Legacy Select Technology（传统选择技术）控制、密码使用以及系统设置选项
- 有关使用 Microsoft Windows XP 操作系统的提示和信息
- 卸下和安装部件的说明，包括内存、插卡、驱动器、微处理器和电池
- 排除各种计算机故障的信息
- 使用 Dell 诊断程序和重新安装驱动程序的说明
- 有关如何与 Dell 联系的信息

可以从硬盘驱动器或 Dell 支持 Web 站点 [support.dell.com](http://support.dell.com) 上访问《用户指南》。

## 卸下主机盖



**警告：**在开始本节中的任何过程之前，请先参阅《产品信息指南》中的安全说明。



**警告：**为防止触电，请始终在卸下主机盖之前断开计算机与电源插座的连接。



**注意：**为防止静电损害计算机内部组件，请在触摸计算机的任何电子组件之前，先导去身上的静电。您可以通过触摸计算机上未上漆的金属表面来导去身上的静电。

1 按照《用户指南》中“开始之前”部分的过程操作。



**注意：**在计算机运行时打开主机盖可能会导致系统不发出警告而关闭，并导致已打开程序中的数据丢失。如果卸下主机盖，计算机冷却系统将无法正常工作。

2 如果您已经安装了安全缆线，请将其从安全缆线插槽中卸下。



**注意：**确保有足够的空间来容纳卸下的主机盖—即桌面顶部至少要有 30 厘米（1 英尺）的空间。




**注意：**请确保在受保护的水平表面上操作，以避免刮伤计算机或放置计算机的表面。

3 将计算机放置在平坦的平面上，使主机盖朝上。

**4** 向后拉动主机盖释放闩锁。

 **注:** 以下图像中的计算机配置为塔式计算机。有关计算机方向的信息,请参阅《用户指南》中的“更改塔式模式与台式模式”。

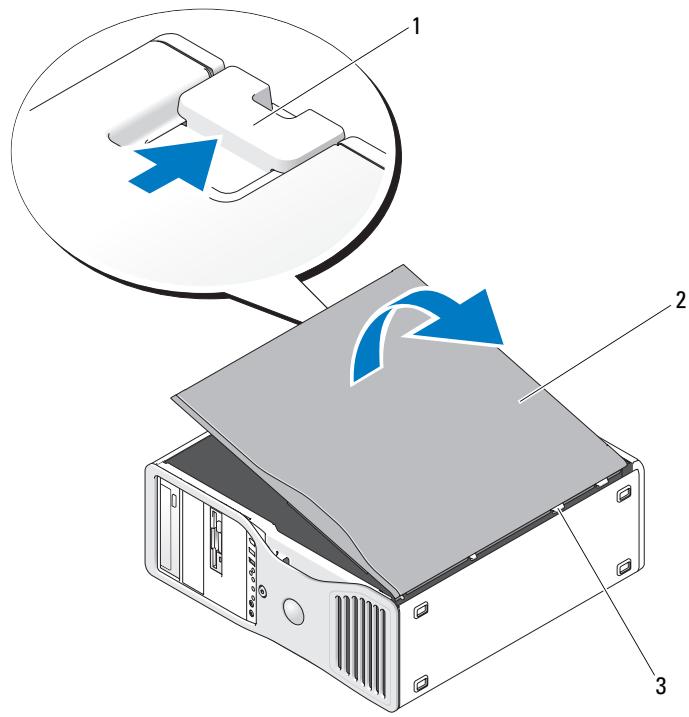

1 主机盖释放闩锁

2 主机盖

3 主机盖铰链

**5** 找到计算机边缘的三个铰接卡舌。

**6** 抓住主机盖的两侧,并以铰链作为杠杆支点向上转动主机盖。

**7** 从铰接卡舌中松开主机盖,并将主机盖保存在安全的地方。

 **注意:** 如果未安装主机盖,计算机冷却系统将无法正常工作。在放回主机盖之前,请勿尝试引导计算机。

# 维护计算机

为帮助维护计算机，请遵循以下建议：

- 为避免丢失或损坏数据，切勿在硬盘驱动器指示灯仍然亮起时关闭计算机。
- 定期使用防病毒软件扫描病毒。
- 定期删除不需要的文件并清理驱动器碎片，管理好硬盘驱动器空间。
- 定期备份文件。
- 定期清洁显示器屏幕、鼠标和键盘（有关详情，请参阅《用户指南》）。

# 解决问题

## 故障排除提示

在排除计算机故障时，请执行以下检查：

- 如果您在问题出现之前添加或卸下了计算机部件，请复查安装过程并确保已正确地安装了该部件。
- 如果外围设备无法工作，请确保该设备已正确地连接。
- 如果屏幕上显示错误信息，请准确无误地将其记下。此信息可以帮助技术支持人员诊断和解决问题。
- 如果程序中显示错误信息，请参阅程序的说明文件。
- 如果故障排除部分中建议的措施涉及到《用户指南》中的章节，则转到 [support.dell.com](http://support.dell.com)（如果需要，可以使用另一台计算机），以便访问《用户指南》。

## 解决软件与硬件不兼容的问题

如果在操作系统安装过程中未检测到某个设备，或者虽已检测到该设备但配置不正确，则可以使用 Hardware Troubleshooter（硬件疑难解答）来解决不兼容的问题。

要使用硬件疑难解答来解决不兼容问题，请：

- 1 单击 Start（开始）按钮，并单击 Help and Support（帮助和支持）。
- 2 在 Search（搜索）字段中键入 hardware troubleshooter（硬件疑难解答），然后单击箭头开始搜索。
- 3 在 Search Results（搜索结果）列表中，单击 hardware troubleshooter（硬件疑难解答）。
- 4 在 hardware troubleshooter（硬件疑难解答）列表中，单击 I need to resolve a hardware conflict on my computer（我需要解决计算机上的硬件冲突），然后单击 Next（下一步）。

## 使用 Microsoft® Windows® XP 系统还原

Microsoft Windows XP 操作系统提供了系统还原功能。如果在更改计算机硬件、软件或其它系统设置后计算机进入不希望出现的运行状态，则该功能使您可以将计算机恢复至先前的运行状态（不影响数据文件）。有关使用系统还原的信息，请参阅 Windows 帮助和支持中心（有关访问 Windows 帮助和支持中心的信息，请参阅第 51 页的“查找信息”）。

► **注意：**请定期备份数据文件。系统还原功能不会监控或恢复数据文件。

### 创建还原点

- 1 单击 Start (开始) 按钮，并单击 Help and Support (帮助和支持)。
- 2 单击 System Restore (系统还原)。
- 3 并按照屏幕上的说明进行操作。

### 将计算机还原为较早的操作状态

► **注意：**将计算机还原至先前的运行状态之前，请保存并关闭所有打开的文件，退出所有打开的程序。完成系统还原之前，请勿更改、打开或删除任何文件或程序。

- 1 单击 Start (开始) 按钮，指向 All Programs (所有程序) → Accessories (附件) → System Tools (系统工具)，然后单击 System Restore (系统还原)。
- 2 确保已选定 Restore my computer to an earlier time (恢复我的计算机到一个较早的时间)，然后单击 Next (下一步)。
- 3 要将计算机还原到某个日期，请在日历中单击该日期。

Select a Restore Point (选择一个还原点) 屏幕提供了一个日历，以便您查看和选择还原点。所有包含可用还原点的日历日期均以粗体显示。

- 4 选择一个还原点并单击 Next (下一步)。

如果日历日期只有一个还原点，则会自动选择该还原点。如果提供了两个或更多还原点，请单击需要的还原点。

- 5 单击 Next (下一步)。

系统还原完成数据收集后，系统将显示 Restoration Complete (还原完成) 屏幕，然后计算机将重新启动。

- 6 计算机重新启动后，请单击 OK (确定)。

要更改还原点，您可以使用不同的还原点重复以上步骤，也可撤消还原。

## 撤消上次系统还原

► **注意：**在撤消上次系统还原之前，请保存并关闭所有打开的文件，退出所有打开的程序。完成系统还原之前，请勿更改、打开或删除任何文件或程序。

- 1 单击 Start (开始) 按钮，指向 All Programs (所有程序) → Accessories (附件) → System Tools (系统工具)，然后单击 System Restore (系统还原)。
- 2 单击 Undo my last restoration (撤销我上次的还原) 并单击 Next (下一步)。
- 3 单击 Next (下一步)。  
系统将显示 System Restore (系统还原) 屏幕，然后计算机重新启动。
- 4 计算机重新启动后，请单击 OK (确定)。

## 启用系统还原

如果您重新安装 Windows XP 时的可用硬盘空间小于 200 MB，系统还原将自动被禁用。要查看是否已启用系统还原，请：

- 1 单击 Start (开始) 按钮并单击 Control Panel (控制面板)。
- 2 单击 Performance and Maintenance (性能和维护)。
- 3 单击 System (系统)。
- 4 单击 System Restore (系统还原) 选项卡。
- 5 确保未选取 Turn off System Restore (在所有驱动器上关闭系统还原)。

## 使用最后一次正确的配置

- 1 重新启动计算机，并在显示 Please select the operating system to start (请选择要启动的操作系统) 信息时按 <F8> 键。
- 2 高亮度显示 Last Known Good Setting (最后一次正确的配置)，按 <Enter> 键，接着按 <l>，然后在出现提示时选择操作系统。

## 有助于解决附加设备或软件冲突的其它选项

► **注意：**以下过程将清除硬盘驱动器上的所有信息。

- 使用操作系统安装指南和操作系统 CD 重新安装您的操作系统。  
在重新安装操作系统期间，可以选择删除现有分区并重新格式化硬盘驱动器。
- 使用 Drivers and Utilities CD，从芯片集的驱动程序开始，重新安装所有驱动程序。

## Dell 诊断程序

 **警告：**在开始本节中的任何过程之前，请先参阅《产品信息指南》中的安全说明。

### 何时使用 Dell 诊断程序

如果计算机出现问题，请在与 Dell 联系寻求技术帮助之前，先执行第 78 页的“解决问题”中的检查并运行 Dell 诊断程序。

建议您在开始之前先打印这些过程。

 **注意：**Dell 诊断程序仅适用于 Dell™ 计算机。如果在其它类型的计算机上使用此程序，会导致计算机回应不正确或产生错误信息。

Dell 诊断程序允许您执行以下操作：

- 快速或全面检测一个或全部设备
- 选择运行多少次检测程序
- 显示或打印检测结果，或者将检测结果存入文件
- 在检测到错误时暂停检测，或者在出现一定数量的错误时停止检测
- 访问联机 Help（帮助）屏幕，其中介绍了检测程序及其运行方法
- 读取状态信息，了解已成功完成哪些检测程序
- 在检测到问题时接收错误信息

### 通过硬盘驱动器启动 Dell 诊断程序

- 1 打开（或重新启动）计算机。
- 2 系统显示 DELL 徽标时，立即按 <F12> 键。



**注：**如果您看到表明未找到诊断公用程序分区的信息，请参阅《用户指南》中的“从 Drivers and Utilities CD 启动 Dell 诊断程序”

如果您等待太长，并且屏幕上已显示操作系统徽标，请继续等待，直至看到 Microsoft Windows 桌面。然后，关闭计算机并再试一次。有关关闭计算机的详情，请参阅《用户指南》。

- 3 当系统显示引导设备列表时，请高亮度显示 **Boot to Utility Partition**（引导至公用程序分区）并按 <Enter> 键。
- 4 当系统显示 Dell 诊断程序 **Main Menu**（主菜单）时，选择要运行的检测程序。有关检测程序的详情，请参阅《用户指南》。

## 通过 Drivers and Utilities CD 启动 Dell 诊断程序

1 插入 *Drivers and Utilities* CD。

2 关闭并重新启动计算机。

系统显示 DELL 徽标时，立即按 <F12> 键。

如果您等待的时间太长，并且屏幕上显示了 Windows 徽标，请继续等待直至显示 Windows 桌面。关闭计算机，然后再试一次。

 **注：**以下步骤只更改当次启动的引导顺序。下一次启动时，计算机将按照系统设置程序中指定的设备进行引导。

3 当系统显示引导设备列表时，高亮度显示 **Onboard or USB CD-ROM Drive**（机载或 USB CD 驱动器）并按 <Enter> 键。

4 从系统显示的菜单中选择 **Boot from CD-ROM**（从 CD-ROM 引导）选项，然后按 <Enter> 键。

5 键入 1 以启动菜单，然后按 <Enter> 键继续。

6 从编号列表中选择 **Run the 32 Bit Dell Diagnostics**（运行 32 位 Dell 诊断程序）。如果列出了多个版本，请选择适用于您的计算机的版本。

7 当系统显示 Dell 诊断程序 **Main Menu**（主菜单）时，选择要运行的检测程序。

## 开始检测之前

 **警告：**在开始本节中的任何过程之前，请先参阅《产品信息指南》中的安全说明。

- 如果连接了打印机，请将其打开。
- 进入系统设置程序，查阅计算机的配置信息，然后启用所有计算机组件和设备（如连接器）。

## 哔声代码

如果无法在显示器上显示错误或问题，则计算机可能会在启动期间发出一连串哔声。这一连串哔声称为哔声代码，用于标识问题。例如，某哔声代码（代码 1-3-1）为：一声哔声、接着连续三声哔声，然后又是一声哔声。它表示计算机出现内存故障。

如果计算机在启动期间发出哔声，请：

- 1 在《用户指南》的“诊断程序核对表”中记下哔声代码。
- 2 运行 Dell 诊断程序以确定更严重的原因。
- 3 与 Dell 联系寻求技术帮助。

代码	原因
1-1-2	微处理器寄存器出现故障
1-1-3	NVRAM 读 / 写失败
1-1-4	ROM BIOS 校验和失败
1-2-1	可编程间隔计时器出现故障
1-2-2	DMA 初始化失败
1-2-3	DMA 页面寄存器读 / 写失败
1-3	视频内存检测程序失败
1-3-1 至 2-4-4	未正确识别或使用内存
1-3-2	内存问题
3-1-1	从 DMA 寄存器出现故障
3-1-2	主 DMA 寄存器出现故障
3-1-3	主中断屏蔽寄存器出现故障
3-1-4	从中断屏蔽寄存器出现故障
3-2-2	中断向量载入失败
3-2-4	键盘控制器检测程序失败
3-3-1	NVRAM 断电
3-3-2	无效的 NVRAM 配置
3-3-4	视频内存检测程序失败
3-4-1	屏幕初始化失败
3-4-2	屏幕回扫失败
3-4-3	搜索视频 ROM 失败
4-2-1	无计时器嘀嗒信号
4-2-2	关闭系统失败
4-2-3	A20 门电路出现故障
4-2-4	保护模式中出现意外中断
4-3-1	0FFFFh 以上地址出现内存故障
4-3-3	计时器芯片计数器 2 出现故障
4-3-4	计时时钟停止
4-4-1	串行或并行端口检测失败
4-4-2	无法将代码解压缩至阴影内存
4-4-3	数学协处理器检测失败
4-4-4	高速缓存检测失败

## 错误信息



**注：**如果信息未在其中列出，请参阅显示该信息时所运行操作系统或程序的说明文件。

如果计算机在启动期间出现错误，显示器屏幕将会显示一则说明问题的信息。有关解决任何问题的建议，请参阅《用户指南》中的“错误信息”。

## 诊断指示灯

**警告：**在开始本节中的任何过程之前，请先参阅《产品信息指南》中的安全说明。

为帮助您排除故障，计算机前面板配备了四个指示灯，分别标有“1”、“2”、“3”和“4”。这些指示灯可能处于“熄灭”状态或呈绿色。计算机正常启动时，这些指示灯将闪烁。如果计算机出现故障，可以根据指示灯及电源按钮的模式帮助确定问题所在。这些指示灯还可以指示休眠状态。

### 开机自测(POST)之前的诊断指示灯代码

诊断指示灯	电源指示灯	问题说明	建议的解决方案
   	熄灭	计算机未接通电源。	将计算机连接至电源插座。确保前面板上的电源指示灯亮起。如果电源指示灯不亮，请确保计算机已连接至可正常工作的电源插座，然后按电源按钮。 如果仍未解决问题，请与 Dell 联系获得技术帮助。
   	熄灭	计算机处于正常关机状态，并且已连接至电源插座。	按电源按钮即可打开计算机。 如果计算机无法打开，请确认前面板的电源指示灯是否已亮起。如果电源指示灯熄灭，请确保将计算机连接至可以正常供电的电源插座，然后按下电源按钮。 如果仍未解决问题，请与 Dell 联系获得技术帮助。
   	呈绿色闪烁	计算机处于节能或“休眠”状态。	使用其中一种合适的方法来“唤醒”计算机。请参阅《用户指南》中的“高级功能”。 如果仍未解决问题，并且您尝试使用 USB 鼠标或键盘来唤醒计算机，请将鼠标或键盘替换为可以正常工作的 PS/2 鼠标或键盘，然后尝试唤醒计算机。
   	呈绿色闪烁	计算机处于节能或“休眠”状态。	使用其中一种合适的方法来“唤醒”计算机。请参阅《用户指南》中的“高级功能”。 如果仍未解决问题，并且您尝试使用 USB 鼠标或键盘来唤醒计算机，请将鼠标或键盘替换为可以正常工作的 PS/2 鼠标或键盘，然后尝试唤醒计算机。

诊断指示灯	电源指示灯	问题说明	建议的解决方案
	呈琥珀色 亮起  (闪烁)	BIOS 无法运行。	请确保处理器已正确放置到位，然后重新启动计算机。请参阅《用户指南》中的“处理器”。  如果仍未解决问题，请与 Dell 联系获得技术帮助。
	呈琥珀色 闪烁  (闪烁)	电源设备或电源电缆可能出现故障。	请执行《用户指南》的“电源问题”中所述的过程。  如果仍未解决问题，请与 Dell 联系获得技术帮助。
	呈琥珀色 亮起  (闪烁)	系统板可能出现故障。	请与 Dell 联系获得技术帮助。
	呈琥珀色 亮起  (闪烁)	处理器不匹配。	请执行《用户指南》的“处理器问题”中所述的过程。
	呈琥珀色 亮起  (闪烁)	可能检测到插件部件的故障，如图形提升卡或内存提升卡。	验证所需的电源电缆是否已连接至内存提升卡或图形提升卡。  请执行《用户指南》的“电源问题”中所述的过程。
	呈琥珀色 亮起  (闪烁)	可能出现电源故障。	验证是否已将电源电缆插入母板。

## 开机自测 (POST) 期间的诊断指示灯代码

电源指示灯在开机自测 (POST) 期间呈绿色稳定亮起，以显示诊断指示灯代码。

指示灯模式	问题说明	建议的解决方案
	可能是处理器出现故障。	重新安装处理器并重新启动计算机。
	可能出现扩充卡故障。	<ol style="list-style-type: none"><li>1 卸下某个插卡（不是图形卡）并重新启动计算机，确定是否存在冲突。</li><li>2 如果问题仍然存在，请重新安装您卸下的插卡并卸下另一个插卡，然后重新启动计算机。</li><li>3 对每一个插卡重复此过程。如果计算机正常启动，可以确定最后从计算机中卸下的插卡是造成资源冲突的原因（请参阅第 78 页的“解决软件与硬件不兼容的问题”）。</li><li>4 如果问题仍然存在，请与 Dell 联系。</li></ol>
	可能出现图形卡故障。	<ol style="list-style-type: none"><li>1 如果计算机配备了图形卡，请卸下并重新安装图形卡，然后重新启动计算机。</li><li>2 如果问题仍然存在，请安装已知能够正常工作的图形卡并重新启动计算机。</li><li>3 如果问题仍然存在，或者计算机配备了集成图形，请与 Dell 联系。</li></ol>
	可能出现软盘驱动器或硬盘驱动器故障。	重新安装所有电源电缆和数据电缆并重新启动计算机。
	可能出现 USB 故障。	重新安装所有 USB 设备，检查电缆连接，然后重新启动计算机。

指示灯模式	问题说明	建议的解决方案
<b>1 2 3 4</b>	未检测到内存模块。	<p><b>1</b> 重置内存模块以确保计算机可以成功地与内存进行通信。</p> <p><b>2</b> 重新启动计算机。</p> <p><b>3</b> 如果问题仍然存在, 请卸下所有内存模块, 然后在内存连接器 DIMM_1 中安装一个内存模块。</p> <p><b>4</b> 重新启动计算机。</p> <p>屏幕将显示一则信息, 表示因为内存未成对, 系统将会降低性能并降低纠错功能</p> <p><b>5</b> 请按 &lt;F1&gt; 键引导操作系统。</p> <p><b>6</b> 运行 Dell 诊断程序。有关详情, 请参阅《用户指南》。</p> <p><b>7</b> 如果内存模块通过检测, 则关闭计算机并卸下该内存模块, 然后对剩下的内存模块重复执行此过程, 直至在启动期间或诊断检测期间出现内存错误。</p> <p>如果检测的第一个内存模块就存在缺陷, 请对剩下的模块重复此过程, 确保这些模块没有缺陷。</p> <p><b>8</b> 找出存在缺陷的内存模块后, 请与 Dell 联系要求更换。</p>
<b>1 2 3 4</b>	未检测到内存模块。	<ul style="list-style-type: none"> <li>• 如果系统中安装了一个内存模块, 请重新安装此内存模块并重新启动计算机。</li> <li>• 如果系统中安装了两个或多个内存模块, 请卸下这些内存模块, 并重新安装一个模块, 然后重新启动计算机。如果计算机启动正常, 请重新安装其它模块。继续该步骤直至您找到出现故障的模块, 或者重新安装所有模块都未发现故障。</li> <li>• 请在计算机中安装类型相同且能够正常工作的内存(如果有)。</li> <li>• 如果问题仍然存在, 请与 Dell 联系。</li> </ul>
<b>1 2 3 4</b>	系统板出现故障。	与 Dell 联系寻求技术帮助。
<b>1 2 3 4</b>	检测到内存模块, 但是存在内存配置或兼容性错误。	<ul style="list-style-type: none"> <li>• 确保内存模块 / 内存连接器无特殊安装要求。</li> <li>• 验证您要安装的内存模块与计算机兼容。</li> <li>• 重新安装内存模块并重新启动计算机。</li> <li>• 如果问题仍然存在, 请与 Dell 联系。</li> </ul>
<b>1 2 3 4</b>	视频初始化之前的例行系统活动。	查看显示器屏幕是否显示信息。

指示灯模式	问题说明	建议的解决方案
<b>①②③④</b>	可能出现扩充卡故障。	<p><b>1</b> 卸下某个插卡（不是图形卡）并重新启动计算机，以确定是否存在冲突。</p> <p><b>2</b> 如果问题仍然存在，请重新安装您卸下的插卡并卸下另一个插卡，然后重新启动计算机。</p> <p><b>3</b> 对每一个插卡重复此过程。如果计算机正常启动，可以确定最后从计算机中卸下的插卡是造成资源冲突的原因（请参阅第 78 页的“解决软件与硬件不兼容的问题”）。</p> <p><b>4</b> 如果问题仍然存在，请与 Dell 联系。</p>
<b>①②③④</b>	视频初始化之前的例行系统活动。	查看显示器屏幕是否显示信息。
<b>①②③④</b>	计算机在 POST 后进入正常操作状态。	无。
<b>①②③④</b>	注：诊断指示灯快速闪烁；当计算机成功引导至操作系统之后，指示灯关闭。	

## 常见问题解答

如何才能 ...	解决方法	在何处查找其它信息
将计算机安装为使用两台显示器？	如果计算机配备了支持双显示器设置所需的图形卡，请在包装箱中找到 Y 型电缆。Y 型电缆的一端是一个连接器（将此连接器插入背面板），另一端分支为两个连接器（将这两个连接器插入显示器电缆）。	有关将两台显示器连接至计算机的信息，请参阅第 55 页的“安装计算机（塔式机箱方向）”或第 60 页的“安装计算机（台式机箱方向）”。
在显示器电缆连接器无法插入计算机背面的连接器时连接显示器？	如果图形卡使用 DVI 连接器，而显示器使用的是 VGA 连接器，则必须使用适配器。包装箱中应该附带了适配器。	有关将显示器连接至计算机的信息，请参阅第 55 页的“安装计算机（塔式机箱方向）”或第 60 页的“安装计算机（台式机箱方向）”。有关详情，请与 Dell 联系。有关与 Dell 联系的详情，请参阅《用户指南》。
连接扬声器？	如果您已安装声卡，请将扬声器连接至插卡上的连接器。请参阅第 55 页的“安装计算机（塔式机箱方向）”或第 60 页的“安装计算机（台式机箱方向）”。	有关详情，请参阅随扬声器附带的说明文件。

如何才能 ...	解决方法	在何处查找其它信息
找到适用于 USB 或 IEEE 1394 设备的正确连接器？	<p>塔式计算机具有八个 USB 连接器（两个在前面，一个在内部，五个在背面）和一个可选的前面 IEEE 1394 连接器。</p> <p>台式计算机具有八个 USB 连接器（两个在前面，一个在内部，五个在背面）和一个可选的前面 IEEE 1394 连接器。</p> <p>仅当您购买了 IEEE 1394 卡，才可使用该连接器。要购买该卡，请与 Dell 联系。有关 IEEE 1394 卡的详情，请参阅《用户指南》。</p>	有关计算机正面视图和背面视图的图示，请参阅第 65 页的“关于计算机”。
找到用于计算机的硬件相关信息和其它技术规格？	《用户指南》中包含规格表，其中提供了有关计算机和硬件的更为详细的信息。要查找《用户指南》，请参阅第 51 页的“查找信息”。	转至 Dell 支持 Web 站点 <a href="http://support.dell.com">support.dell.com</a> ，然后使用以下一种支持工具：阅读有关最新技术的白皮书，或者在 Dell 论坛聊天室内与其他 Dell 用户进行交流。
查找适用于计算机的说明文件？	<p>以下说明文件可用于您的计算机：</p> <ul style="list-style-type: none"><li>• 用户指南</li><li>• 产品信息指南</li><li>• 系统信息标签</li></ul>	如果您丢失了说明文件，可以在 Dell 支持 Web 站点 <a href="http://support.dell.com">support.dell.com</a> 上找到它们。



# 索引

## A

安全说明 , 52

## B

帮助和支持中心 , 53

帮助文件

    Windows 帮助和支持中心 , 53

保修信息 , 52

哔声代码 , 82

标签

    服务标签 , 52

    Microsoft Windows, 52

## C

CD

    操作系统 , 54

操作系统

    CD, 54

    重新安装 , 54

操作系统 CD, 54

插卡

    插槽 , 67, 71

产品信息指南 , 52

冲突

    软件与硬件不兼容的问题 , 78

## 错误信息

    哔声代码 , 82

    诊断指示灯 , 84

## D

Dell

    支持站点 , 53

Dell 客户特选支持 Web

    站点 , 52

Dell 诊断程序 , 81

电源

    按钮 , 66, 70

    连接器 , 67, 71

    指示灯 , 66, 71

## E

耳机

    连接器 , 66, 71

## F

服务标签 , 52

## G

故障排除

    帮助和支持中心 , 53

    冲突 , 78

    Dell 诊断程序 , 81

## 故障排除 (续)

    恢复为先前的状态 , 79

    硬件疑难解答 , 78

    诊断指示灯 , 84

管制信息 , 52

## J

IRQ 冲突 , 78

计算机

    哔声代码 , 82

    恢复为先前的状态 , 79

键盘

    连接器 , 69

## L

连接器

    并行 , 68

    串行 , 69

    电源 , 67, 71

    耳机 , 66, 71

    键盘 , 69

    声音 , 68-69

    鼠标 , 68

    输出 , 68

    输入 , 69

    USB, 66, 69-70

    网络适配器 , 69

## M

Microsoft Windows 标签 , 52

## R

ResourceCD

Dell 诊断程序 , 81

人机工程学信息 , 52

软件

冲突 , 78

## S

声音连接器

输出 , 68

输入 , 69

鼠标

连接器 , 68

说明文件

安全 , 52

保修 , 52

产品信息指南 , 52

管制 , 52

快速参考 , 51

联机 , 53

人机工程学 , 52

用户指南 , 52

最终用户许可协议 , 52

## W

Windows XP

帮助和支持中心 , 53

系统还原 , 79

硬件疑难解答 , 78

重新安装 , 54

## USB

连接器 , 66, 69-70

## 网络

连接器 , 69

## 问题

哔声代码 , 82

冲突 , 78

Dell 诊断程序 , 81

恢复为先前的状态 , 79

诊断指示灯 , 84

## Z

诊断程序

哔声代码 , 82

Dell , 81

指示灯 , 66, 71, 84

诊断指示灯 , 84

支持 Web 站点 , 53

## 指示灯

电源 , 66, 71

计算机背面 , 84

链路完整性指示灯 , 68

网络 , 68-69

网络活动 , 69

硬盘驱动器活动 ,  
65-66, 70-71

诊断 , 66, 71, 84

最终用户许可协议 , 52

## X

系统还原 , 79

## Y

## 硬件

哔声代码 , 82

冲突 , 78

Dell 诊断程序 , 81

硬件疑难解答 , 78

## 硬盘驱动器

活动指示灯 , 65-66, 70-71

用户指南 , 52

# Dell Precision™ Workstation 490

## クイッククリファレンスガイド

モデル DCTA

[www.dell.com](http://www.dell.com) | [support.dell.com](http://support.dell.com)

## メモ、注意、警告

-  **メモ**：コンピュータを使いやすくするための重要な情報を説明しています。
-  **注意**：ハードウェアの損傷やデータの損失の可能性を示し、その危険を回避するための方法を説明しています。
-  **注意**：物的損害、けが、または死亡の原因となる可能性があることを示します。

## 略語について

略語の説明は、『ユーザーズガイド』の「用語集」を参照してください。

Dell™ n シリーズコンピュータをご購入された場合、このマニュアル内の Microsoft® Windows® オペレーティングシステムに関する記述は適用されません。

---

本書の内容は予告なく変更されることがあります。  
© 2006 すべての著作権は Dell Inc. にあります。

Dell Inc. の書面による許可のない複写は、いかなる形態においても厳重に禁じられています。

本書で使用されている商標について : Dell、DELL ロゴ、および Dell Precision は Dell Inc. の商標です。Intel、Xeon、および Pentium は Intel Corporation の登録商標です。Microsoft および Windows は Microsoft Corporation の登録商標です。

本書では、必要に応じて上記以外の商標や会社名が使用されている場合がありますが、これらの商標や会社名は、一切 Dell Inc. に帰属するものではありません。

モデル DCTA

2006 年 1 月      P/N PD055      Rev. A00

# 目次

情報の検索 . . . . .	97
コンピュータのセットアップ (タワー型) . . . . .	101
コンピュータのセットアップ (デスクトップ型) . . . . .	106
コンピュータについて . . . . .	111
コンピュータの正面 (タワー型) . . . . .	111
コンピュータの背面 (タワー型) . . . . .	113
背面パネルコネクタ . . . . .	114
コンピュータの正面 (デスクトップ型) . . . . .	116
コンピュータの背面 (デスクトップ型) . . . . .	118
内部 . . . . .	119
コンピュータの内部—ハードドライブベイを 外側に回転させた状態 . . . . .	120
システム基板のコンポーネント . . . . .	121
ケーブルの色 . . . . .	122
ユーザーズガイドを見つけるには . . . . .	122
コンピュータカバーの取り外し . . . . .	123
コンピュータのメンテナンス . . . . .	125
問題の解決 . . . . .	125
トラブルシューティングのヒント . . . . .	125
ソフトウェアとハードウェアの非互換性の解決 . . . . .	125
Microsoft® Windows® XP システムの復元の使い方 . . . . .	126
前回正常起動時の構成機能の使い方 . . . . .	127
Dell Diagnostics (診断) プログラム . . . . .	128
テストを始める前に . . . . .	129
ビープコード . . . . .	129
エラーメッセージ . . . . .	131
診断ライト . . . . .	131
POST 前の診断用ライト . . . . .	131
POST 実行中の診断用ライトコード . . . . .	133
よくある質問 . . . . .	136
索引 . . . . .	139



# 情報の検索

 **メモ：**一部の機能やメディアはオプションであり、同梱されていないコンピュータもあります。  
一部の機能やメディアは、国によってはご利用になれない場合があります。

 **メモ：**追加情報がコンピュータに同梱されている場合があります。

## 何をお探しですか？

- ・コンピュータの診断プログラム
- ・コンピュータのドライバ
- ・コンピュータのマニュアル
- ・デバイスのマニュアル
- ・Desktop System Software (DSS)

## こちらをご覧ください

『Drivers and Utilities CD』  
(『Resource CD』とも呼ばれます)



マニュアルおよびドライバは、コンピュータにプリインストールされています。この CD は、ドライバの再インストール、Dell Diagnostics (診断) の実行、またはマニュアルのアクセスに使用します。CD に収録されている Readme ファイルには、マニュアルの作成後にシステムに追加された変更や、技術者や専門知識をお持ちのユーザーを対象とするテクニカルリファレンスなどが記載されています。

**メモ：**ドライバとマニュアルのアップデートに関しては、[support.jp.dell.com](http://support.jp.dell.com)をご覧ください。

- ・コンピュータのセットアップ方法
- ・コンピュータのメンテナンス方法
- ・基本的なトラブルシューティング情報
- ・Dell Diagnostics (診断) プログラムの実行方法
- ・エラーコードと診断ライト
- ・部品の取り外しおよび取り付け方法
- ・コンピュータカバーの開き方

## クリックリファレンスガイド




**メモ：**このマニュアルは [support.jp.dell.com](http://support.jp.dell.com) から PDF 形式で入手できます。

## 何をお探しですか？

- ・保証に関する情報
- ・契約条項（米国内のみ）
- ・安全にお使いいただくために
- ・認可機関の情報
- ・快適な使い方
- ・エンドユーザー ライセンス契約

## こちらをご覧ください

### Dell™ 『製品情報ガイド』

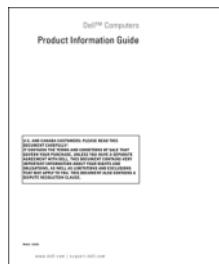

- ・部品の取り外しおよび取り付け方法
- ・仕様
- ・システムの設定方法
- ・トラブルシューティングおよび問題解決の方法
- ・サービスタグとエクスプレスサービスコード
- ・Microsoft Windows ライセンスラベル

### ユーザーズガイド

*Microsoft® Windows® XP* のヘルプとサポートセンター

- 1 スタートボタンをクリックして、ヘルプとサポートをクリックします。
- 2 ユーザーズガイドおよびシステムガイドをクリックし、『ユーザーズガイド』をクリックします。

『ユーザーズガイド』は、『Drivers and Utilities CD』にも含まれています。

サービスタグと *Microsoft® Windows®* ライセンスラベルはお使いのコンピュータに貼付されています。

- ・サービスタグは、**support.jp.dell.com** のデルサポートサイトを利用する際やテクニカルサポートへのお問い合わせの際に、お使いのコンピュータを識別するために使います。
- ・テクニカルサポートに連絡したときにエクスプレスサービスコードを入力すると、通話が直接接続されます。



何をお探しですか？	こちらをご覧ください
<ul style="list-style-type: none"> <li>• 技術情報 — Q &amp; A 検索、トラブル解消ナビ、Diagnostics (診断) プログラム、インストールガイド、お問い合わせの多い質問</li> <li>• アップグレード — メモリ、ハードドライブ、またはオペレーティングシステムなどのコンポーネントに関するアップグレード情報</li> <li>• 各種サービスのご案内 — サービスプラン、登録内容変更申込、リサイクル販取サービス、引き取り修理状況確認など</li> <li>• サービスおよびサポート — サービスコールの状況とサービス履歴、サービス契約</li> <li>• 参照資料 — マニュアル、コンピュータの設定に関する詳細情報、製品仕様、ホワイトペーパーなど</li> <li>• ダウンロード — 認定ドライバ、パッチ、ソフトウェアのアップデート</li> <li>• デスクトップシステムソフトウェア (DSS) — コンピュータにオペレーティングシステムを再インストールする場合、DSS ユーティリティも再インストールする必要があります。DSS は、オペレーティングシステムの重要なアップデート、Dell™ 3.5 インチ USB フロッピードライブ、オプティカルドライブ、および USB デバイスに関するサポートを提供します。DSS は、Dell コンピュータが正しく動作するために必要です。このソフトウェアは、お使いのコンピュータとオペレーティングシステムを自動的に判別し、構成に合わせて適切なアップデート分をインストールします。</li> <li>• Windows XP の使い方</li> <li>• プログラムとファイルの使い方</li> <li>• モデムなどのデバイスのマニュアル</li> </ul>	<p><b>デルサポートサイト — <a href="http://support.jp.dell.com">support.jp.dell.com</a></b></p> <p><b>メモ：</b>お住まいの地域または事業区分を選択し、お近くのサポートサイトを表示します。</p> <p><b>メモ：</b>企業、政府および教育関係のユーザーには、カスタマイズされた Dell Premier サポートウェブサイト <a href="http://premier.dell.co.jp/premier">premier.dell.co.jp/premier</a> もご利用いただけます。</p> <p><b>Windows ヘルプとサポートセンター</b></p> <ol style="list-style-type: none"> <li>1 スタート ボタンをクリックして、ヘルプとサポートをクリックします。</li> <li>2 問題に関連する用語やフレーズを検索 ボックスに入力して、矢印アイコンをクリックします。</li> <li>3 問題に関連するトピックをクリックします。</li> <li>4 画面の指示に従います。</li> </ol>

---

## 何をお探しですか？

- オペレーティングシステムの再インストール方法

## こちらをご覧ください

### 『オペレーティングシステム CD』



オペレーティングシステムは、コンピュータにプリインストールされています。オペレーティングシステムを再インストールするには、『オペレーティングシステム CD』を使います。操作手順は、『ユーザーズガイド』を参照してください。オペレーティングシステムを再インストールした後、『Drivers and Utilities CD』（『ResourceCD』）を使用して、コンピュータに付属しているデバイス用のドライバを再インストールします。オペレーティングシステムのプロダクトキー ラベルは、コンピュータに貼付されています。

**メモ：**CDの色はご注文になったオペレーティングシステムによって異なります。

**メモ：**『オペレーティングシステム CD』はオプションなので、同梱されていないコンピュータもあります。

### デルがサポートする Linux サイト（英語）

- [Linux.dell.com](http://Linux.dell.com)
- [Lists.us.dell.com/mailman/listinfo/linux-precision](http://Lists.us.dell.com/mailman/listinfo/linux-precision)

- Linux の使用方法
- Dell Precision™ 製品および Linux オペレーティングシステムのユーザーとの E メールディスカッション
- Dell Precision および Linux に関するその他の情報


## コンピュータのセットアップ（タワー型）

⚠ 警告：『製品情報ガイド』の「安全にお使いいただくために」の注意事項に従い、本項の手順を開始してください。

コンピュータを適切にセットアップするには、すべての手順を完了する必要があります。

1

キーボードとマウスを接続します。

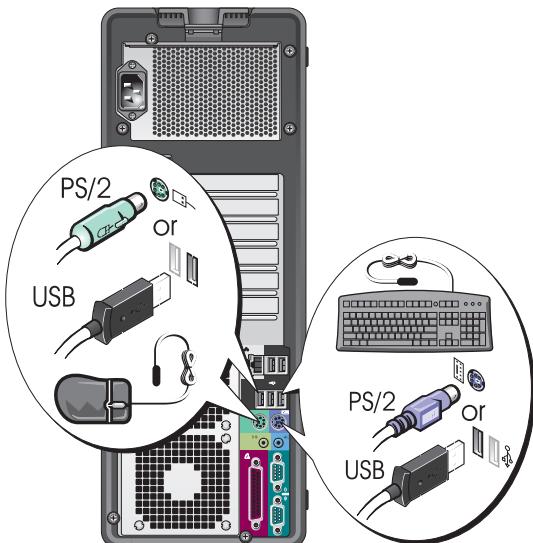

2


モデムまたはネットワークケーブルを接続します。



**注意：**モデムケーブルを誤ってネットワークアダプタに接続しないでください。モデムの通信回路で発生する電圧はネットワークアダプタを損傷する原因となります。



**メモ：**コンピュータにネットワークカードが装着されている場合は、ネットワークケーブルはカードに接続してください。

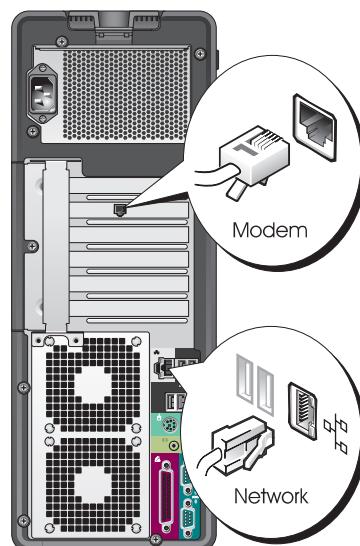


3

モニターを接続します。

モニターの接続方法はお使いのグラフィックカードによって異なります。



**メモ:** お使いのモニターによっては、コンピュータへの接続に付属のモニターケーブルまたはアダプタが必要になることがあります。

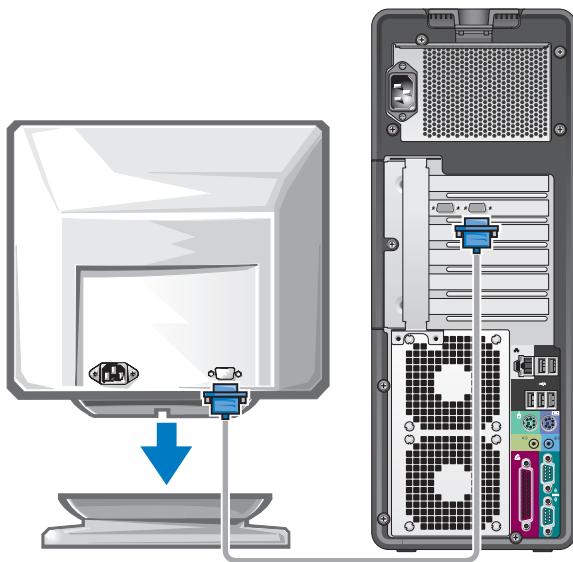


---

## シングルコネクタ付きシングルモニターおよびデュアルモニター対応カード


---

VGA アダプタ 1 個

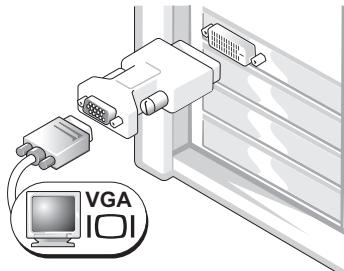


シングルモニターグラフィックカードを装着したコンピュータに 1 台の VGA モニターを接続するには、VGA アダプタを使います。

デュアル VGA Y ケーブルアダプタ

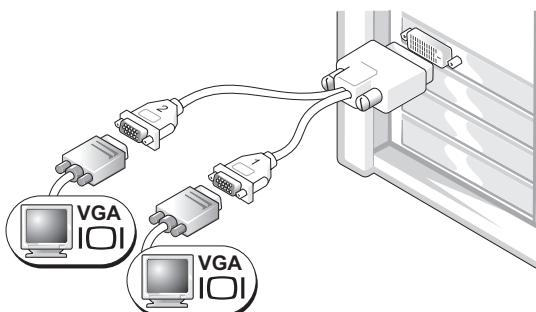

シングルコネクタ付きのグラフィックカードを装着したコンピュータに、1 台または 2 台の VGA モニターを接続するには、適切な Y ケーブルアダプタを使います。

デュアル DVI Y ケーブルアダプタ

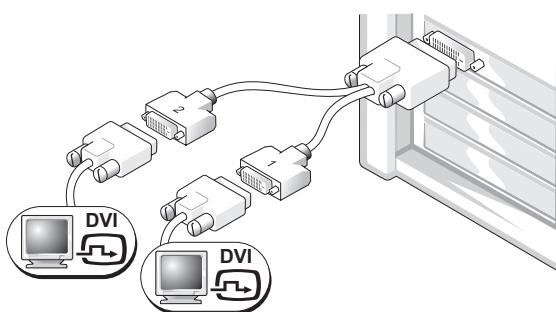

シングルコネクタ付きのグラフィックカードを装着したコンピュータに、1 台または 2 台の DVI モニターを接続するには、適切な Y ケーブルアダプタを使います。


デュアルモニターケーブルは色分けされています。青いコネクタはプライマリモニター用で、黒いコネクタはセカンドモニター用です。デュアルモニターサポートを有効にするには、コンピュータの起動前にモニターを両方とも接続しておく必要があります。

---

### DVI コネクタ 1 個と VGA コネクタ 1 個が付いたデュアルモニター対応カード


---

DVI コネクタ 1 個と VGA コネクタ 1 個

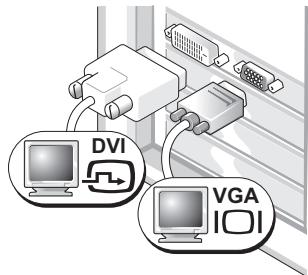

コンピュータに 1 台または 2 台のモニターを接続するには、それぞれ対応する適切なコネクタを使います。

VGA コネクタ 2 個と VGA アダプタ 1 個

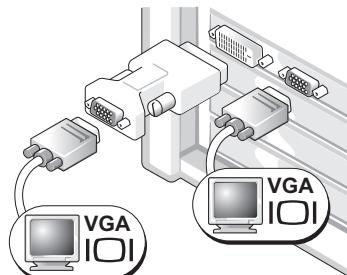


コンピュータに 2 台の VGA モニターを接続するには、VGA アダプタを 1 個使います。

---

### DVI コネクタが 2 個付いたデュアルモニター対応カード


---

DVI コネクタ 2 個

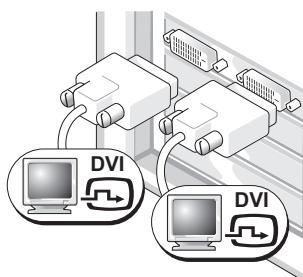


コンピュータに 1 台または 2 台の DVI モニターを接続するには、それぞれ DVI コネクタを使います。

DVI コネクタ 2 個と VGA アダプタ 1 個

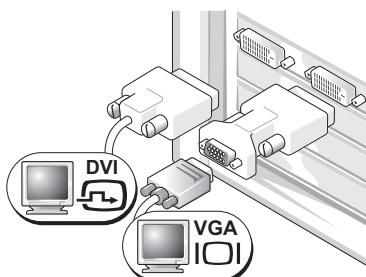

コンピュータの DVI コネクタの 1 個に VGA アダプタを取り付けて VGA モニターを接続します。

DVI コネクタ 2 個と VGA アダプタ 2 個

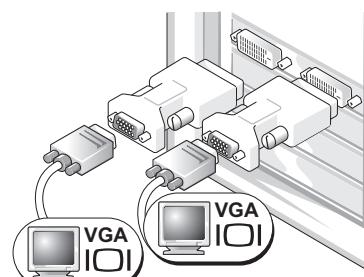


コンピュータの 2 個の DVI コネクタに 2 個の VGA アダプタを取り付けて、2 台の VGA モニターを接続します。

4

スピーカーを接続します。




**メモ**：コンピュータにサウンドカードが装着されている場合は、サウンドカードにスピーカーを接続してください。

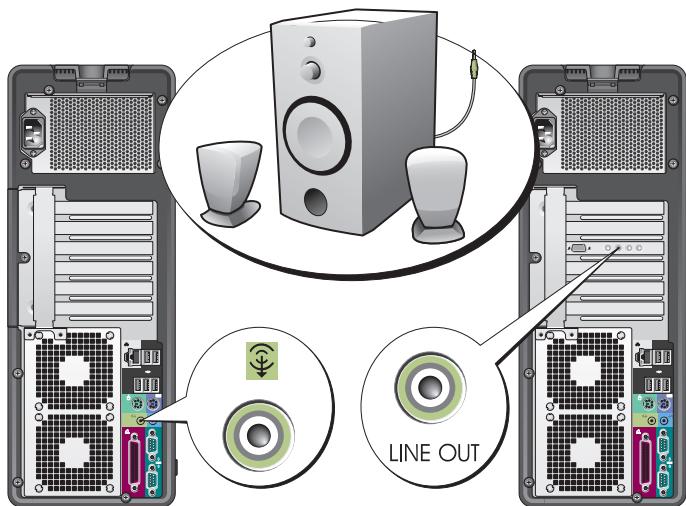

5

電源コードを接続して、コンピュータとモニターの電源を入れます。

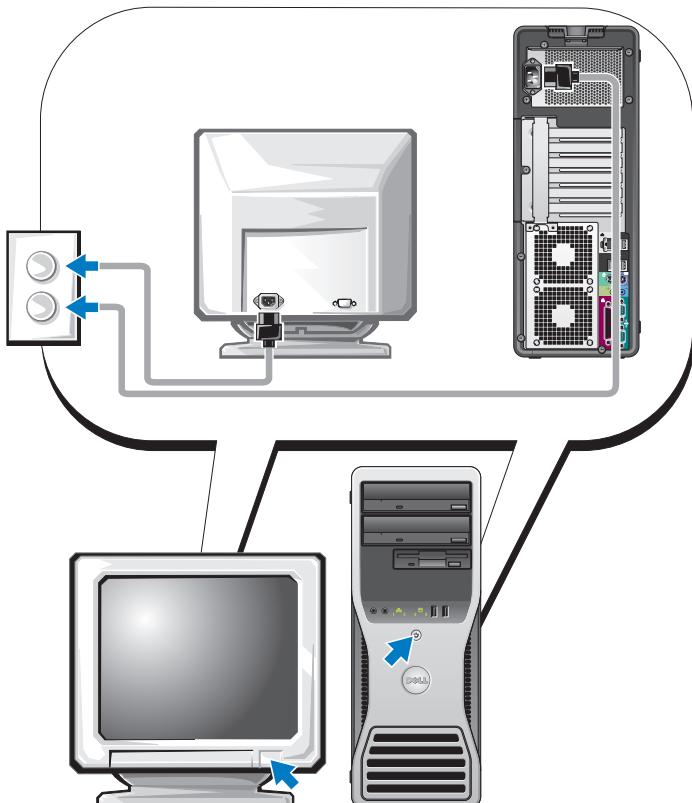

## 6

周辺機器を取り付け、追加ソフトウェアがあればインストールします。

コンピュータに同梱されていないデバイスやソフトウェアについては、取り付け / インストールを行う前に、それぞれのマニュアルを読むか製品の販売元に問い合わせて、コンピュータやオペレーティングシステムとの互換性を確認してください。

これでタワー型コンピュータのセットアップは完了です。

## コンピュータのセットアップ（デスクトップ型）


**⚠ 警告：**『製品情報ガイド』の「安全にお使いいただくために」の注意事項に従い、本項の手順を開始してください。

コンピュータを適切にセットアップするには、すべての手順を完了する必要があります。

## 1

キーボードとマウスを接続します。

**➡ 注意：** モデムケーブルを誤ってネットワークアダプタに接続しないでください。モデムの通信回路で発生する電圧はネットワークアダプタを損傷する原因となります。

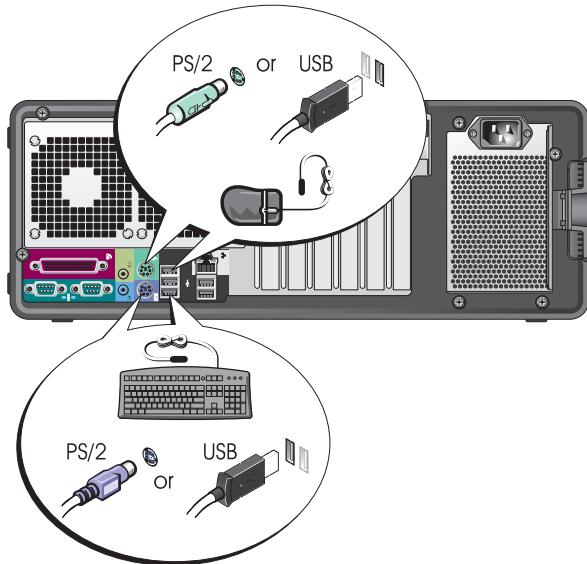


2

モデムまたはネットワー  
クケーブルを接続します。



**メモ :** コンピュータに  
ネットワークカードが装  
着されている場合は、ネッ  
トワークケーブルはカー  
ドに接続してください。

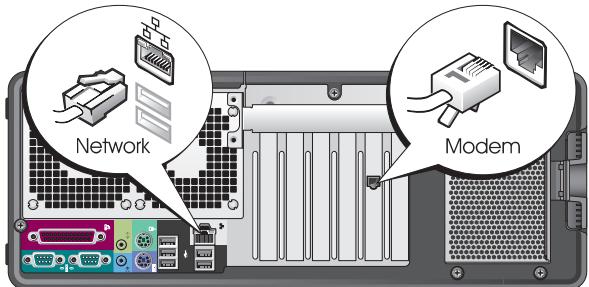


3

モニターを接続します。

モニターの接続方法はお使いのグラ  
フィックカードによって異なります。



**メモ :** お使いのモニターによ  
っては、コンピュータへの接続に付属  
のモニターケーブルまたはアダプ  
タが必要になることがあります。

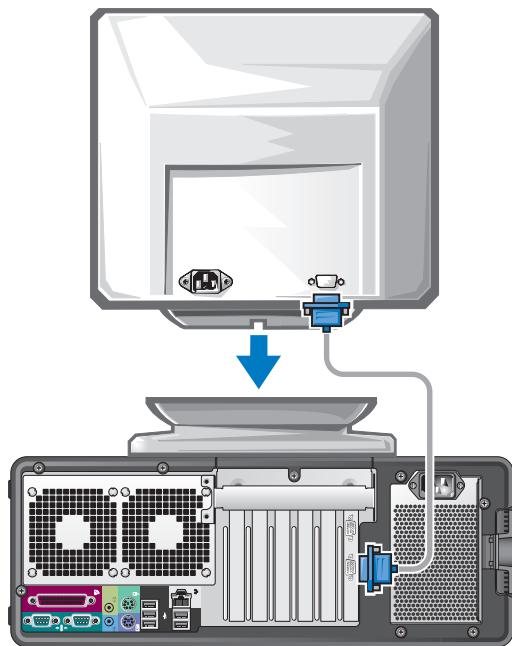


---

## シングルコネクタ付きシングルモニターおよびデュアルモニター対応カード


---

VGA アダプタ

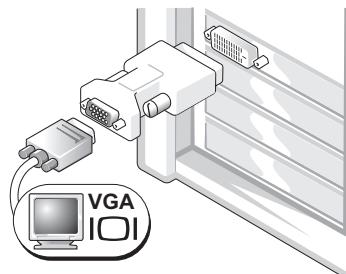


シングルモニターグラフィックカードを装着したコンピュータに1台のVGAモニターを接続するには、VGAアダプタを使います。

デュアル VGA Y ケーブルアダプタ

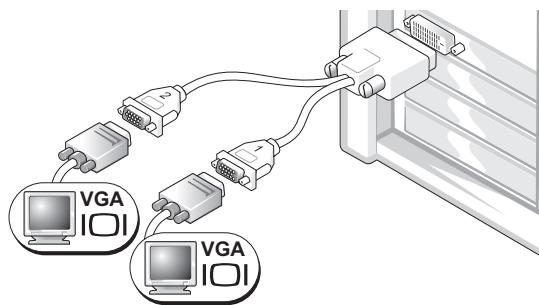

シングルコネクタ付きのグラフィックカードを装着したコンピュータに、1台または2台のVGAモニターを接続するには、適切なYケーブルアダプタを使います。

デュアル DVI Y ケーブルアダプタ

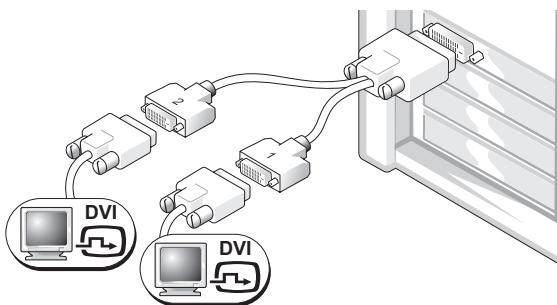

シングルコネクタ付きのグラフィックカードを装着したコンピュータに、1台または2台のDVIモニターを接続するには、適切なYケーブルアダプタを使います。


デュアルモニターケーブルは色分けされています。青いコネクタはプライマリモニター用で、黒いコネクタはセカンドモニター用です。デュアルモニターサポートを有効にするには、コンピュータの起動前にモニターを両方とも接続しておく必要があります。

---


### DVI コネクタ 1 個と VGA コネクタ 1 個が付いたデュアルモニター対応カード

---

DVI コネクタ 1 個と VGA コネクタ 1 個

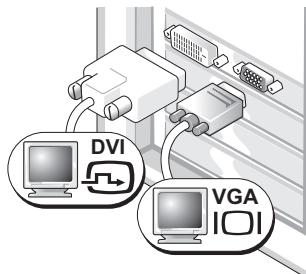

VGA コネクタ 2 個と VGA アダプタ 1 個

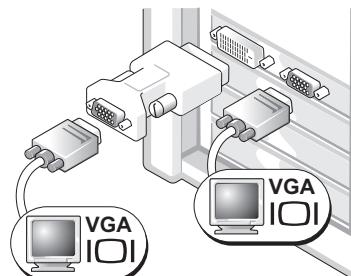

コンピュータに 1 台または 2 台のモニターを接続するには、それぞれ対応する適切なコネクタを使います。


コンピュータに 2 台の VGA モニターを接続するには、VGA アダプタを 1 個使います。

---


### DVI コネクタが 2 個付いたデュアルモニター対応カード

---


DVI コネクタ 2 個

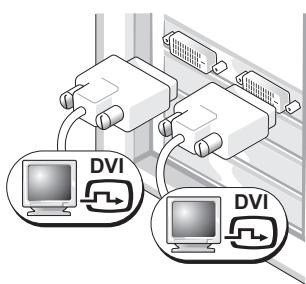

DVI コネクタ 2 個と  
VGA アダプタ 1 個

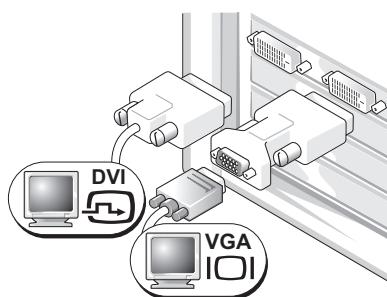

DVI コネクタ 2 個と  
VGA アダプタ 2 個

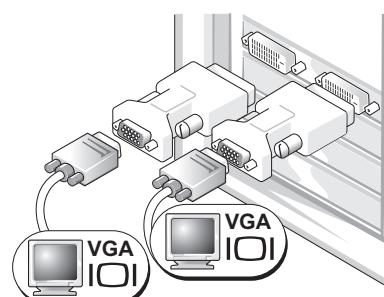

コンピュータに 1 台または 2 台の DVI モニターを接続するには、それぞれ DVI コネクタを使います。


コンピュータの DVI コネクタの 1 個に VGA アダプタを取り付け VGA モニターを接続します。

コンピュータの 2 個の DVI コネクタに 2 個の VGA アダプタを取り付けて、2 台の VGA モニターを接続します。

---

4


スピーカーを接続します。

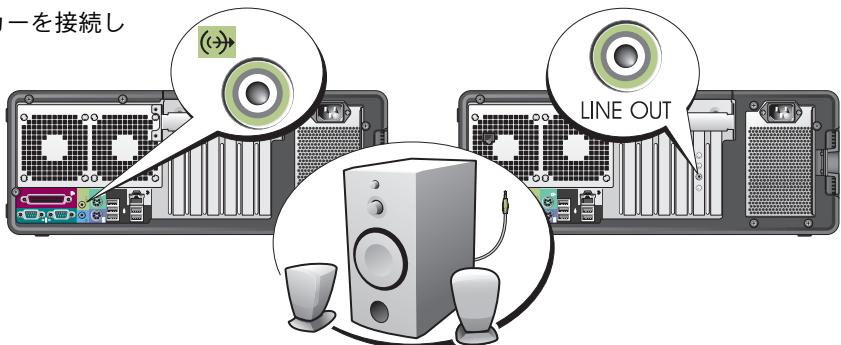

**メモ:** コンピュータにサウンドカードが装着されている場合は、サウンドカードにスピーカーを接続してください。

5

電源コードを接続して、コンピュータとモニターの電源を入れます。

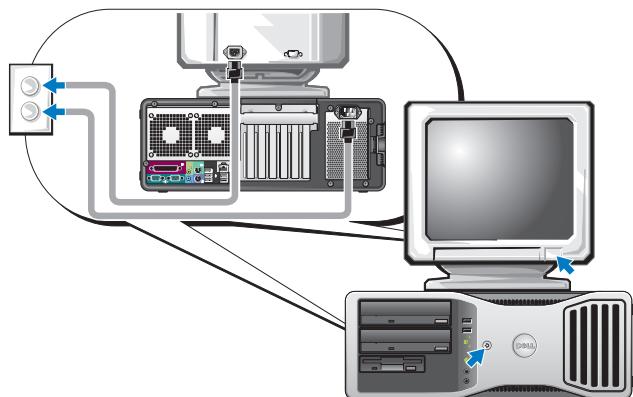

6


周辺機器を取り付け、追加ソフトウェアがあればインストールします。

コンピュータに同梱されていないデバイスやソフトウェアについては、取り付け / インストールを行う前に、それぞれのマニュアルを読むか製品の販売元に問い合わせて、コンピュータやオペレーティングシステムとの互換性を確認してください。

これでデスクトップ型コンピュータのセットアップは完了です。

# コンピュータについて


## コンピュータの正面（タワー型）

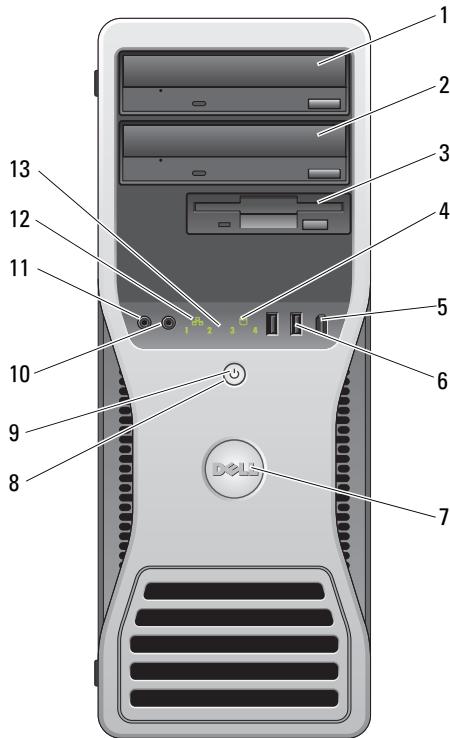

1	5.25 インチドライブベイ（上）	5.25 インチドライブベイ CD/DVD ドライブを格納します。
2	5.25 インチドライブベイ（下）	このベイはオプションの CD/DVD ドライブ用に使用できます。
3	FlexBay	このベイはオプションの 3 台目のハードドライブ (SATA または SAS)、フロッピードライブ、またはメディアカードリーダー用に使用できます。
4	ハードドライブ動作ライト	ハードドライブライトは、コンピュータがハードドライブからデータを読み書きしている際に点灯します。このライトは、CD プレーヤーなどのデバイスが動作しているときにも点灯します。
5	IEEE 1394 コネクタ（オプション）	オプションの IEEE 1394 コネクタは、デジタルビデオカメラや外部ストレージデバイスなどの高速データデバイスに使用します。


6	USB 2.0 コネクタ (2)	フラッシュメモリキー、カメラ、起動可能な USB デバイスなど、時々接続するデバイスには、正面の USB コネクタを使用します (USB デバイスの起動の詳細については、『ユーザーズガイド』の「セットアップユーティリティ」を参照してください)。 プリンタやキーボードなど通常接続したままのデバイスには、背面の USB コネクタを使用することをお勧めします。
7	Dell™ 回転バッジ	タワー型をデスクトップ型に転換するために Dell バッジを回転させるには、正面パネルを取り外して裏返し、バッジの裏側にあるプラスチック製のハンドルを回します。
8	電源ボタン	このボタンを押して、コンピュータに電源を入れます。 <b>注意：</b> データの損失を防ぐため、電源ボタンを使ってコンピュータの電源を切らないでください。電源ボタンを押さずに、オペレーティングシステムのシャットダウンを実行してください。 <b>メモ：</b> 電源ボタンを押して、システムを省電力状態からウェイクアップしたり、省電力状態にすることもできます。詳細については、『ユーザーズガイド』の「電源の管理」を参照してください。
9	電源ライト	電源ライトは、点滅と点灯ことで異なる状態を示します。 <ul style="list-style-type: none"><li>• 点灯しない — コンピュータの電源が切れています。</li><li>• 緑色の点灯 — コンピュータは通常の動作状態です。</li><li>• 緑色の点滅 — コンピュータは省電力状態です。</li><li>• 黄色の点滅または点灯 — 『ユーザーズガイド』の「電源の問題」を参照してください。</li></ul> 省電力状態から復帰するには、電源ボタンを押すか、デバイスマネージャーウィンドウで復帰デバイスに設定されている場合は、キーボードかマウスを使います。休止状態および省電力状態からの復帰の詳細については、『ユーザーズガイド』を参照してください。
10	ヘッドフォンコネクタ	ヘッドフォンコネクタを使用してヘッドフォンを接続します。
11	マイクコネクタ	マイクコネクタにパーソナルコンピュータ用マイクを接続し、音声や音楽をサウンドまたはテレフォニープログラムに入力します。
12	ネットワーククリンクライ	10 Mbps、100 Mbps、または 1000 Mbps (または 1 Gbps) のネットワークとコンピュータが正しく接続されれば、ネットワーククリンクライが点灯します。
13	診断ライト (4)	診断ライトは、診断コードを基にコンピュータの問題を解決するのに役立ちます。詳細については、「診断ライト」(131 ページ) を参照してください。

## コンピュータの背面（タワー型）

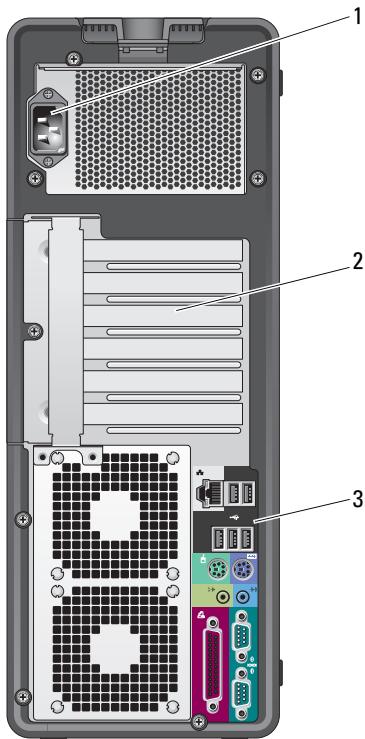

- 
- |             |   |
|-------------|---|
| 1 電源コネクタ    | 電源ケーブルを差し込みます。  |
| 2 カードスロット   | 装着する PCI、PCI-X または PCI Express カードのコネクタを差し込みます。<br><b>メモ：</b> 中央の4個のスロットはフルレンジスカードをサポートし（PCI-X スロット×1、PCI Express x8 スロット×1（x4 配線）、PCI Express x16 スロット×1、PCI スロット×1）、上部と下部のスロットはハーフレンジスカードをサポートします（PCI-X スロット×1、PCI Express x8 スロット×1（x4 配線））。 |
| 3 背面パネルコネクタ | シリアル、USB、およびその他のデバイスのプラグを対応するコネクタに差し込みます。   |
-

## 背面パネルコネクタ

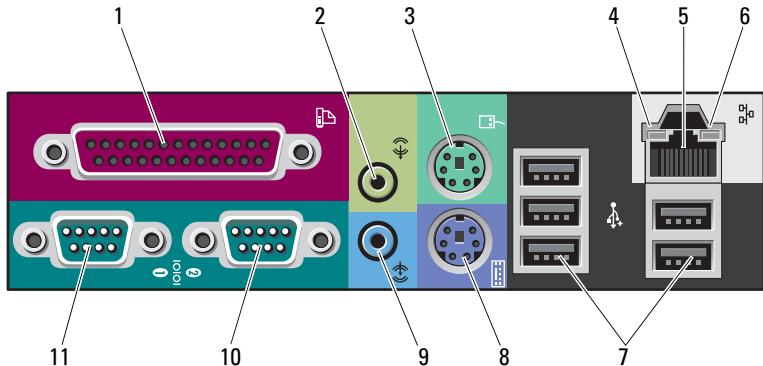

1 パラレルコネクタ プリンタなどのパラレルデバイスをパラレルコネクタに接続します。USB プリンタをお使いの場合、USB コネクタに差し込みます。

**メモ :** 同じアドレスに設定されたパラレルコネクタを持つカードをコンピュータが検出した場合、内蔵パラレルコネクタは自動的に無効になります。詳細については、『ユーザーズガイド』を参照してください。

2 ライン出力ヘッドフォンコネクタ 緑色のライン出力コネクタにヘッドフォンやほとんどのアンプ内蔵型スピーカーを接続します。  
サウンドカードが搭載されたコンピュータの場合は、カードのコネクタを使用します。


3 PS/2 マウスコネクタ 標準マウスをお使いの場合は、緑色のマウスコネクタに差し込みます。コンピュータおよび取り付けられているすべてのデバイスの電源を切ってから、マウスをコンピュータに接続します。USB マウスをお使いの場合は、USB コネクタに差し込みます。

お使いのコンピュータで Microsoft® Windows® XP オペレーティングシステムを実行している場合、必要なマウスドライバはハードドライブにインストール済みです。

4 リンク保全ライト • 緑色 — 10 Mbps のネットワークとコンピュータが正しく接続されていることを示します。  
• 橙色 — 100 Mbps のネットワークとコンピュータが正しく接続されていることを示します。  
• 黄色 — 1000 Mbps (1 Gbps) のネットワークとコンピュータが正しく接続されていることを示します。  
• 消灯 — ネットワークとの物理的な接続が検知されていません。

5	ネットワークアダプタ コネクタ	コンピュータをネットワークやブロードバンドデバイスに接続するには、ネットワークケーブルの一方の端をネットワークジャックやブロードバンドデバイスに接続します。ネットワークケーブルのもう一方の端をコンピュータのネットワークアダプタコネクタに接続します。カチッという音がすれば、ネットワークケーブルはしっかりと接続されています。 <b>メモ：</b> ネットワークコネクタにモデムケーブルを接続しないでください。 追加のネットワークコネクタカードが搭載されたコンピュータで、イントラネットとエクストラネットを別々にするなど、複数のネットワーク接続を設定する場合は、カードのコネクタとコンピュータ背面のコネクタを使用します。 ネットワークには、カテゴリ 5 の配線とコネクタを使用することをお勧めします。カテゴリ 3 の配線を使用する必要がある場合、信頼性のあるオペレーションを保証するために、ネットワーク速度を 10 Mbps に設定してください。
6	ネットワーク動作 ライト	黄色のライトは、コンピュータがネットワークデータを送信、または受信している際に点滅します。ネットワークトラフィックが多い場合、このライトが「点灯」の状態に見えることがあります。
7	USB 2.0 コネクタ (5)	フラッシュメモリキー、カメラ、または起動可能な USB デバイスなど、時々接続するデバイスには、正面 USB コネクタを使用することをお勧めします。 プリンタやキーボードなど、通常接続したままのデバイスには背面 USB コネクタを使用します。
8	PS/2 キーボードコ ネクタ	標準のキーボードをお使いの場合は、紫色のキーボードコネクタにキーボードケーブルを差し込みます。USB キーボードをお使いの場合は、USB コネクタに差し込みます。
9	ライン入力コネクタ	青色のライン入力コネクタにカセットプレーヤー、CDプレーヤー、または VCR (ビデオカセットレコーダー) などの録音 / 再生デバイスを接続します。 サウンドカードが搭載されたコンピュータの場合は、カードのコネクタを使用します。
10	シリアルコネクタ	ハンドヘルドデバイスなどのシリアルデバイスをシリアルポートに接続します。必要に応じて、このポートのアドレスはセットアップユーティリティで変更できます。詳細については、『ユーザーズガイド』を参照してください。
11	シリアルコネクタ	ハンドヘルドデバイスなどのシリアルデバイスをシリアルポートに接続します。必要に応じて、このポートのアドレスはセットアップユーティリティで変更できます。詳細については、『ユーザーズガイド』を参照してください。

## コンピュータの正面（デスクトップ型）

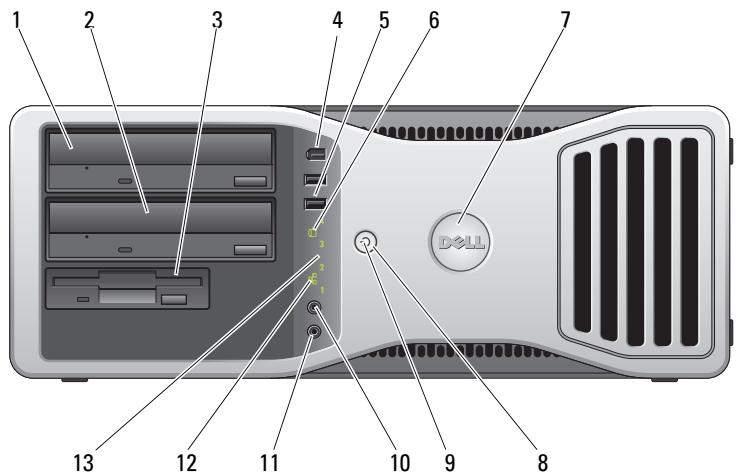


1	5.25 インチドライブベイ（上）	CD/DVD ドライブを格納します。
2	5.25 インチドライブベイ（下）	このベイはオプションの CD/DVD ドライブまたは SATA ハードドライブ用に使用できます。
3	FlexBay	このベイはフロッピードライブまたはメディアカードリーダー用に使用できます。
4	IEEE 1394 コネクタ（オプション）	オプションの IEEE 1394 コネクタは、デジタルビデオカメラや外部ストレージデバイスなどの高速データデバイスに使用します。
5	USB 2.0 コネクタ（2）	フラッシュメモリキー、カメラ、起動可能な USB デバイスなど、時々接続するデバイスには、正面の USB コネクタを使用します（USB デバイスの起動の詳細については、『ユーザーズガイド』の「セットアップユーティティ」を参照してください）。 プリンタやキーボードなど通常接続したままのデバイスには、背面の USB コネクタを使用することをお勧めします。
6	ハードドライブ動作ライト	ハードドライブライトは、コンピュータがハードドライブからデータを読み書きしている際に点灯します。このライトは、CD プレーヤーなどのデバイスが動作しているときにも点灯します。
7	Dell™ 回転バッジ	タワー型をデスクトップ型に転換するために Dell バッジを回転させるには、正面パネルを取り外して裏返し、バッジの裏側にあるプラスチック製のハンドルを回します。

---

8 電源ボタン	<p>このボタンを押して、コンピュータに電源を入れます。</p> <p><b>注意：</b>データの損失を防ぐため、電源ボタンを使ってコンピュータの電源を切らないでください。電源ボタンを押さずに、オペレーティングシステムのシャットダウンを実行してください。</p> <p><b>メモ：</b>電源ボタンを押して、システムを省電力状態からウェイクアップしたり、省電力状態にすることもできます。詳細については、『ユーザーズガイド』を参照してください。</p>
9 電源ライト	<p>電源ライトは、点滅と点灯とで異なる状態を示します。</p> <ul style="list-style-type: none"><li>点灯しない — コンピュータの電源が切れています。</li><li>緑色の点灯 — コンピュータは通常の動作状態です。</li><li>緑色の点滅 — コンピュータは省電力状態です。</li><li>黄色の点滅または点灯 — 『ユーザーズガイド』の「電源の問題」を参照してください。</li></ul> <p>省電力状態から復帰するには、電源ボタンを押すか、デバイスマネージャーウィンドウで復帰デバイスに設定されている場合は、キーボードかマウスを使います。休止状態および省電力状態からの復帰の詳細については、『ユーザーズガイド』を参照してください。</p> <p>コンピュータのトラブルシューティングに役立つライトコードの説明は、「診断ライト」（131 ページ）を参照してください。</p>
10 ヘッドフォンコネクタ	ヘッドフォンコネクタを使用してヘッドフォンを接続します。
11 マイクコネクタ	マイクコネクタにパーソナルコンピュータ用マイクを接続し、音声や音楽をサウンドまたはテレフォニープログラムに入力します。
12 ネットワークリンクライト	10 Mbps、100 Mbps、または 1000 Mbps（または 1 Gbps）のネットワークとコンピュータが正しく接続されていれば、ネットワークリンクライトが点灯します。
13 診断ライト（4）	診断ライトは、診断コードを基にコンピュータの問題を解決するのに役立ちます。詳細については、「診断ライト」（131 ページ）を参照してください。


---

## コンピュータの背面（デスクトップ型）

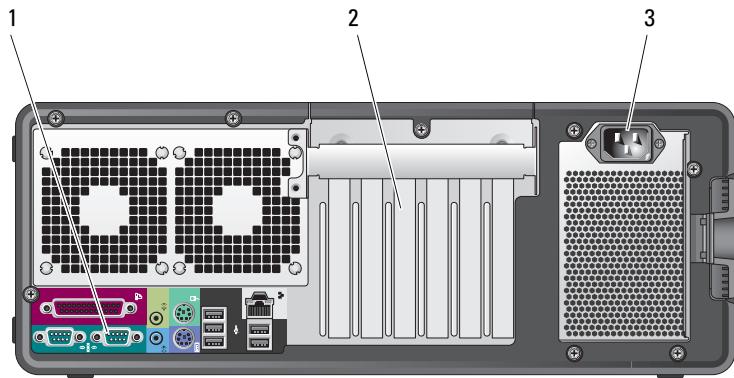

- 
- |             |   |
|-------------|---|
| 1 背面パネルコネクタ | シリアル、USB、およびその他のデバイスのプラグを対応するコネクタに差し込みます。   |
| 2 カードスロット   | 装着する PCI、PCI-X または PCI Express カードのコネクタを差し込みます。<br><b>メモ：</b> 一番左側のスロットと右側の 2 個のスロットは、ハーフレンジスのカードをサポートします（PCI Express x8 スロット × 1 (x4 配線) および PCI-X スロット × 2）。中央の 3 個のスロットはフルレンジスのカードをサポートします（PCI Express x16 スロット × 1、PCI Express x8 スロット × 1 (x4 配線) および PCI スロット × 1）。 |
| 3 電源コネクタ    | 電源ケーブルを差し込みます。  |
-

## 内部

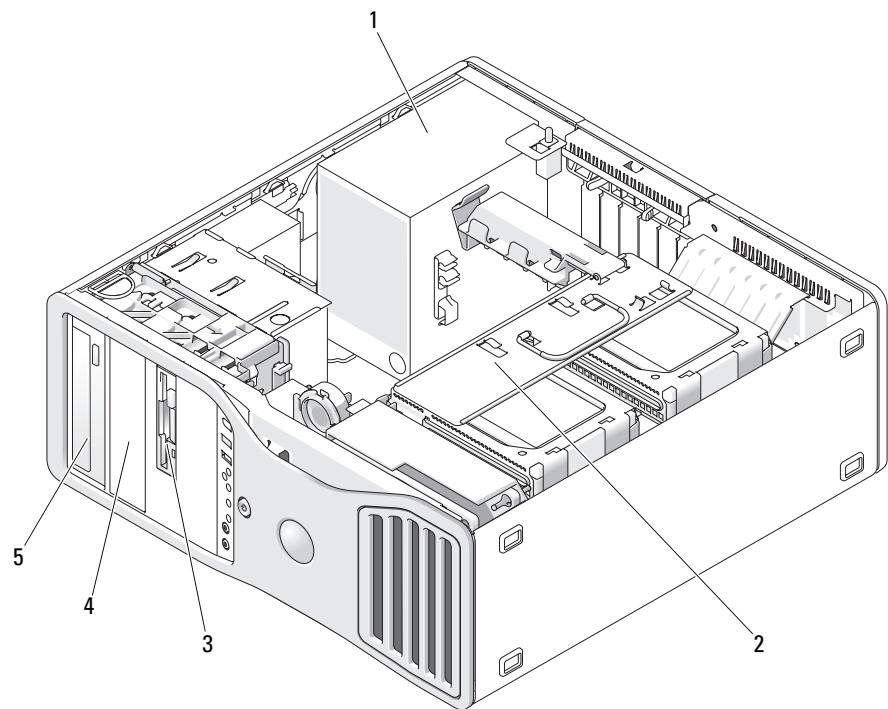

1 電源装置


4 5.25 インチドライブベイ (下)

2 回転式ハードドライブベイ

5 5.25 インチドライブベイ (上)

3 FlexBay

## コンピュータの内部—ハードドライブベイを外側に回転させた状態

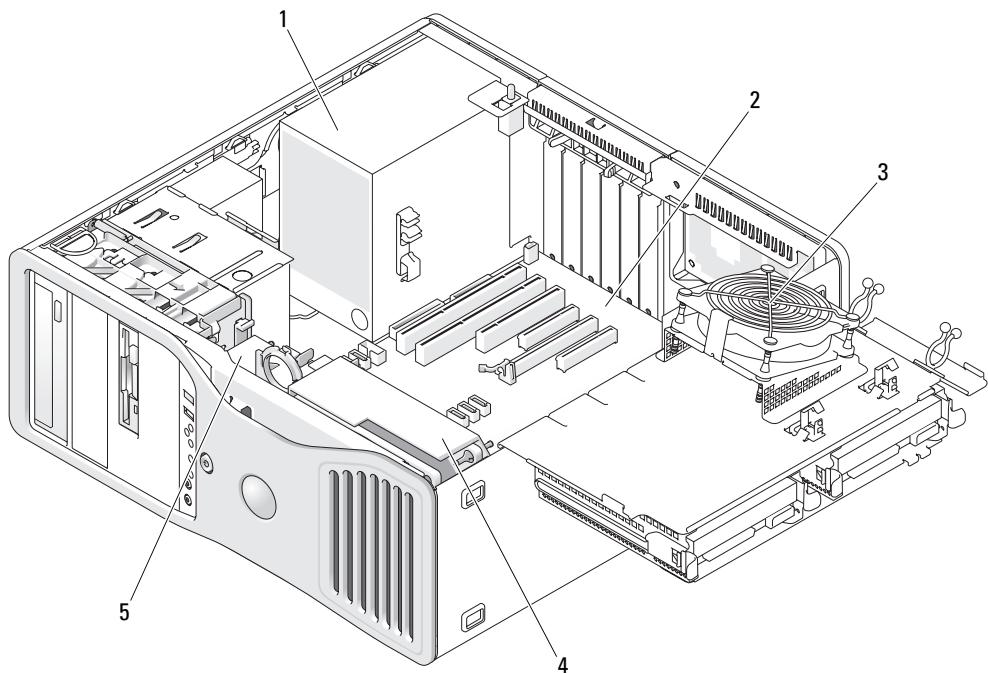

1 電源装置


4 前面ファン

2 システム基板

5 カードファン

3 メモリファン

## システム基板のコンポーネント

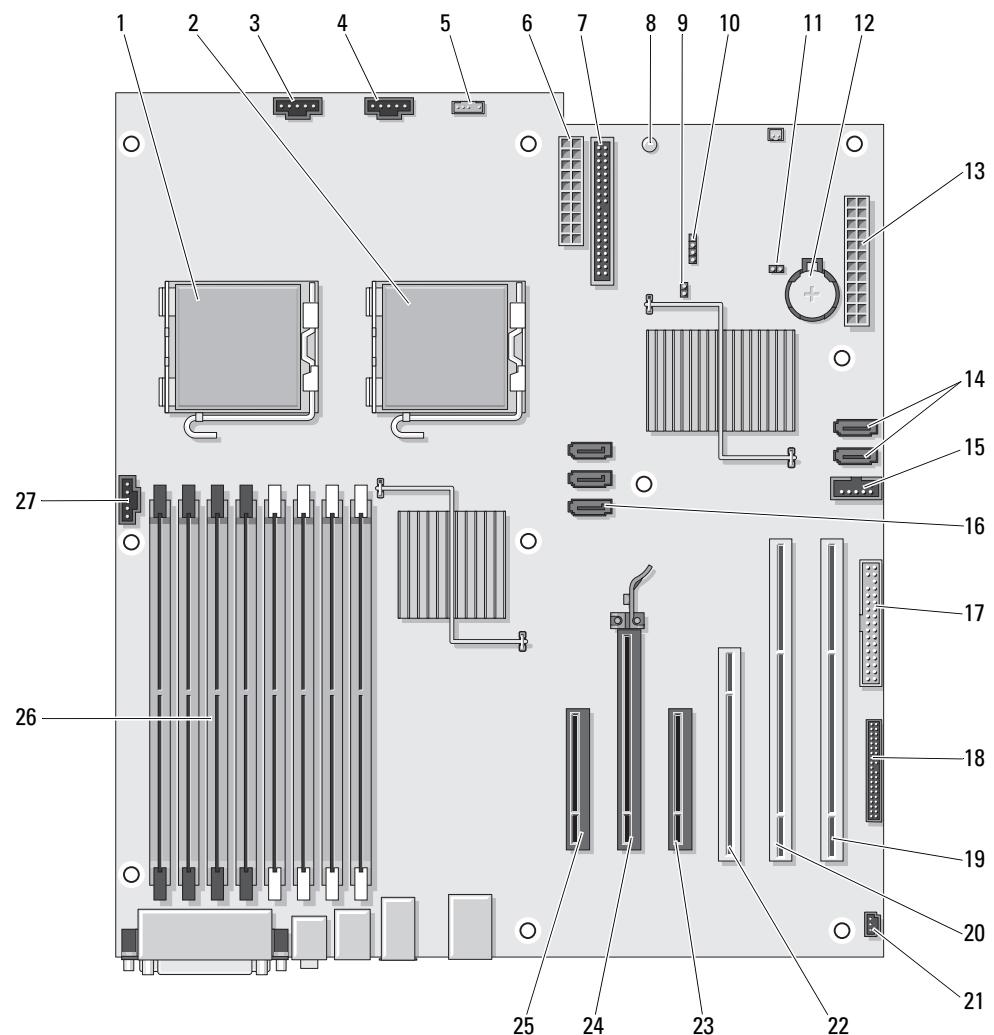

1	プライマリプロセッサコネクタ (CPU_0)	15	FlexBay コネクタ (USB)
2	セカンドプロセッサコネクタ (CPU_1)	16	SATA コネクタ (SATA_2、SATA_1、SATA_0)
3	前面ファンコネクタ (FAN_FRONT)	17	フロッピードライブ (DSKT)
4	カードケージファン (FAN_CCAG)	18	正面パネルコネクタ (FRONTPANEL)
5	内蔵スピーカーコネクタ (INT_SPKR)	19	PCI-X カードスロット (SLOT6_PCIX)
6	電源コネクタ (POWER2)	20	PCI-X カードスロット (SLOT5_PCIX)
7	IDE ドライブコネクタ (IDE)	21	シャーシイントルージョンヘッダー (INTRUDER)
8	スタンバイ電源ライト (AUX_PWR)	22	PCI カードスロット (SLOT4_PCI)
9	パスワードジャンパ (PSWD)	23	PCI-Express x8 カードスロット、x4 配線 (SLOT3_PCIE)
10	補助のハードドライブ LED コネクタ (AUX_LED)	24	PCI-Express x16 カードスロット (SLOT2_PCIE)
11	RTC リセットジャンパ (RTCRST)	25	PCI-Express x8 カードスロット、x4 配線 (SLOT1_PCIE)
12	バッテリーソケット (BATTERY)	26	メモリモジュールコネクタ (DIMM_1-8)
13	主電源コネクタ (POWER1)	27	メモリファンコネクタ (FAN_MEM)
14	SATA コネクタ (SATA_4、SATA_3)		

## ケーブルの色

デバイス	色
SATA ハードドライブ	青色のケーブル
フロッピードライブ	黒色のプルタブ
CD/DVD ドライブ	橙色のプルタブ
正面パネル	黄色のプルタブ

## ユーザーズガイドを見つけるには

『ユーザーズガイド』には、コンピュータに関する次のような詳細情報が記されています。

- 仕様
- コンピュータの向きをデスクトップからタワーに変更する方法
- 装備されているすべてのコネクタの位置を示すコンピュータの正面と背面の図
- システム基板とコネクタを含む詳細なコンピュータの内部を示す図
- コンピュータのクリーニング手順

- ・ パスワードやセットアップユーティリティオプションを使用した Legacy Select Technology コントロールなどのソフトウェア機能についての情報
- ・ Microsoft Windows XP オペレーティングシステムの使用に関する情報
- ・ メモリ、カード、ドライブ、プロセッサ、バッテリーを含む、部品の取り付けと取り外しの手順
- ・ さまざまなコンピュータ問題のトラブルシューティング情報
- ・ Dell 診断プログラムの使用およびドライバの再インストール手順
- ・ デルへのお問い合わせ方法

『ユーザーズガイド』へは、お使いのコンピュータのハードドライブ、またはデルサポートサイト [support.jp.dell.com](http://support.jp.dell.com) からアクセスできます。

## コンピュータカバーの取り外し

 **警告：**『製品情報ガイド』の「安全にお使いいただくために」の注意事項に従い、本項の手順を開始してください。

 **警告：**感電防止のため、カバーを開く前に、必ずコンピュータの電源プラグをコンセントから抜いてください。

 **注意：**コンピュータ内の部品の静電気による損傷を防ぐため、コンピュータの電子部品に触れる前に、身体から静電気を逃がしてください。コンピュータシャーシの塗装されていない金属面に触ることにより、静電気を逃がすことができます。

1 『ユーザーズガイド』の「作業を開始する前に」の手順に従います。

 **注意：**コンピュータの動作中にコンピュータカバーを開くと、警告なしにシステムがシャットダウンし、開いているプログラムのデータが失われることがあります。カバーを取り外した状態では、コンピュータの冷却システムが正常に機能しません。

2 セキュリティケーブルが取り付けられている場合は、セキュリティケーブルスロットから取り外します。


 **注意：**カバーを開いて作業できるように、高さ 30 cm 以上の十分なスペースが作業台上にあることを確認してください。

 **注意：**コンピュータまたはコンピュータが載っている表面を傷つけないように、保護された水平な表面で作業するようにしてください。

3 カバーの面が上になるように、コンピュータを平らな場所に置きます。

4 カバーリリースラッチを後方へ引きます。

**メモ:** 下図のコンピュータは、タワーコンピュータとして構成されています。コンピュータの向きについては、『ユーザーズガイド』の「Changing Between Tower and Desktop Modes」（タワーモードとデスクトップモードの間の転換）を参照してください。

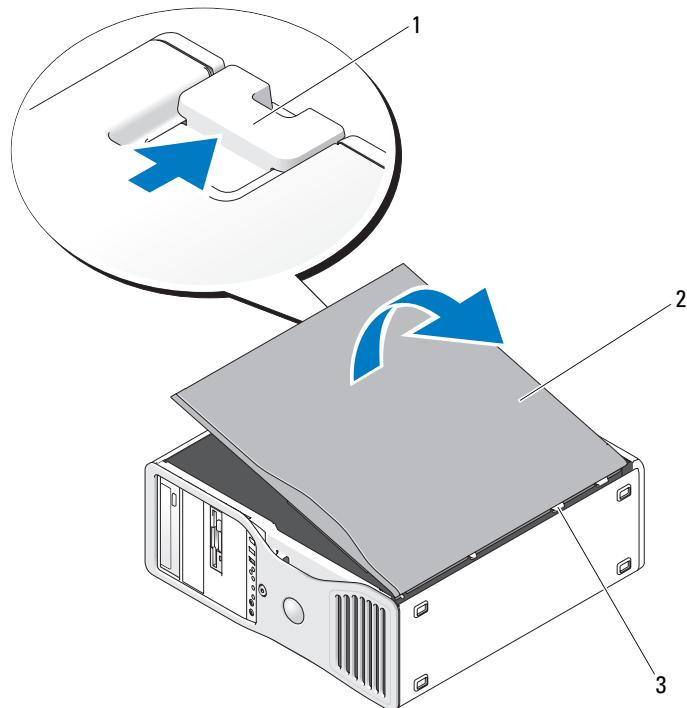

1 カバーラッチリリース 2 コンピュータカバー 3 カバーヒンジ

5 コンピュータの端にある 3 つのヒンジタブの位置を確認します。

6 コンピュータカバーの側面をつかみ、ヒンジをてこの支点にしてカバーを上に回転します。

7 ヒンジタブからカバーを外し、安全な場所に保管します。

**注意:** コンピュータカバーが取り付けられていない状態では、コンピュータの冷却システムが正常に機能しません。コンピュータカバーを取り付けるまではコンピュータを起動しないでください。

# コンピュータのメンテナンス

次の指針に従ってコンピュータのメンテナンスを行ってください。

- データ消失や破損を防止するため、ハードドライブのライトが点灯しているときは、コンピュータの電源を切らないでください。
- ウイルス対策ソフトウェアを使用して定期的にウイルススキャンを行ってください。
- 定期的に不要なファイルの削除やドライブのデフラグをおこなって、ハードドライブの空き容量を管理してください。
- 定期的にファイルをバックアップしてください。
- モニターの画面、マウス、キーボードは定期的に清掃してください（詳細については『ユーザーズガイド』を参照）。

# 問題の解決

## トラブルシューティングのヒント

コンピュータのトラブルシューティングについては、次のチェック項目を参考にしてください。

- 問題が発生し始める前に部品の取り付け / 取り外しを行った場合は、その手順を再度確認して、取り付け / 取り外しが正しく行われたか確認します。
- 周辺機器が機能しない場合は、その機器が適切に接続されているか確認します。
- エラーメッセージが画面に表示される場合は、そのメッセージを正確に書き留めておきます。エラーメッセージは、テクニカルサポート担当者が問題を分析し、解決するのに役立ちます。
- エラーメッセージがプログラム上で発生する場合は、プログラムのマニュアルを参照してください。
- トラブルシューティングの対処方法で、『ユーザーズガイド』の参照が推奨されている場合、（必要なら別のコンピュータから）**support.jp.dell.com** にアクセスして、『ユーザーズガイド』を参照することができます。

## ソフトウェアとハードウェアの非互換性の解決

オペレーティングシステムのセットアップ中にデバイスが検知されないか、検知されたが正しく設定されていない場合は、ハードウェアに関するトラブルシューティングを使って非互換性を解決できます。

ハードウェアに関するトラブルシューティングを使って非互換性を解決するには、次の手順を実行します。

- スタート ボタンをクリックして、ヘルプとサポート をクリックします。
- 検索 領域で、ハードウェアに関するトラブルシューティング と入力し、矢印をクリックして検索 を開始します。
- 検索結果 一覧で、ハードウェアに関するトラブルシューティング をクリックします。
- ハードウェアに関するトラブルシューティング 一覧で、コンピュータにあるハードウェアの競合を解決する必要があります をクリックして、次へ をクリックします。

## Microsoft® Windows® XP システムの復元の使い方

ハードウェア、ソフトウェア、またはその他のシステム設定を変更したために、コンピュータが正常に動作しなくなってしまった場合は、Microsoft Windows XP オペレーティングシステムのシステムの復元を使用して、コンピュータを以前の動作状態に復元することができます（データファイルへの影響はありません）。システムの復元の使い方については、Windows ヘルプとサポートセンターを参照してください（Windows ヘルプとサポートセンターへのアクセス方法については、「情報の検索」（97 ページ）を参照）。

- **注意：**データファイルのバックアップを定期的に作成してください。システムの復元は、データファイルの変更を監視したり、データファイルを復元することはできません。

### 復元ポイントの作成

- 1 スタート ボタンをクリックして、ヘルプとサポート をクリックします。
- 2 システムの復元 をクリックします。
- 3 画面の指示に従います。

### コンピュータを以前の動作状態に復元する方法

- **注意：**コンピュータを以前の動作状態に復元する前に、開いているファイルをすべて保存してから閉じ、実行中のプログラムをすべて終了します。システムの復元が完了するまで、いかなるファイルまたはプログラムも変更したり、開いたり、削除しないでください。

- 1 スタート ボタンをクリックし、すべてのプログラム → アクセサリ → システム ツール → システムの復元 の順にクリックします。
  - 2 コンピュータを以前の状態に復元するが選択されていることを確認して、次へ をクリックします。
  - 3 コンピュータを以前の状態に復元する時点の日付をクリックします。  
復元ポイントの選択 画面に、復元ポイントが選べるカレンダーが表示されます。復元ポイントが利用できる日付は太字で表示されます。
  - 4 復元ポイントを選んで、次へ をクリックします。  
日付に復元ポイントが 1 つしか表示されない場合、その復元ポイントが自動的に選ばれます。複数の復元ポイントが利用できる場合は、希望する復元ポイントをクリックします。
  - 5 次へ をクリックします。  
システムの復元がデータの収集を完了した後、復元は完了しました 画面が表示され、コンピュータは再起動します。
  - 6 コンピュータが再起動したら、OK をクリックします。
- 復元ポイントを変更するには、別の復元ポイントを使って手順を繰り返すか、または復元を取り消すことができます。

## 以前のシステムの復元の取り消し

▶ **注意：** 最後のシステムの復元を元に戻す前に、開いているファイルをすべて保存してから閉じ、実行中のプログラムをすべて終了します。システムの復元が完了するまで、いかなるファイルまたはプログラムも変更したり、開いたり、削除しないでください。

- 1 スタート ボタンをクリックし、すべてのプログラム → アクセサリ → システム ツール → システムの復元 の順にクリックします。
- 2 以前の復元を取り消す をクリックして、次へ をクリックします。
- 3 次へ をクリックします。  
システムの復元 画面が表示されて、コンピュータが再起動します。
- 4 コンピュータが再起動したら、OK をクリックします。

## システムの復元の有効化

空き容量が 200 MB 未満のハードディスクに Windows XP を再インストールした場合、システムの復元は自動的に無効に設定されています。システムの復元が有効になっているかどうかを確認するには、次の手順を実行します。

- 1 スタート ボタンをクリックして、コントロールパネル をクリックします。
- 2 パフォーマンスとメンテナンス をクリックします。
- 3 システム をクリックします。
- 4 システムの復元 タブをクリックします。
- 5 すべてのドライブでシステムの復元を無効にする のチェックマークが外されていることを確認します。

## 前回正常起動時の構成機能の使い方

- 1 コンピュータを再起動し、オペレーティングシステムの選択 というメッセージが表示されたら **<F8>** を押します。
- 2 前回起動時の構成 を選択し、**<Enter>** を押して、**<I>** を押します。プロンプトが表示されたら オペレーティングシステムを選択します。

## 追加のデバイスまたはソフトウェアのコンフリクトを解消するその他のオプション

▶ **注意：** 以下のプロセスを実行すると、ハードドライブのすべての情報が消去されます。

- オペレーティングシステムのインストールガイドと『オペレーティングシステム CD』を使って、オペレーティングシステムを再インストールします。  
オペレーティングシステムの再インストール中に、既存のパーティションの削除を選択し、ハードドライブを再フォーマットすることができます。
- 『Drivers and Utilities CD』を使用して、（チップセットドライバを最初に）すべてのドライバを再インストールします。

## Dell Diagnostics (診断) プログラム

**!** **警告 :** 『製品情報ガイド』の「安全にお使いいただくために」の注意事項に従い、本項の手順を開始してください。

### Dell Diagnostics (診断) プログラムを使用する場合

コンピュータに問題が発生した場合は、デルテクニカルサポートにお問い合わせになる前に、「問題の解決」(125 ページ) のチェック事項を実行してから、Dell Diagnostics (診断) プログラムを実行してください。

作業を始める前に、これらの手順を印刷しておくことをお勧めします。

**☞ 注意 :** Dell Diagnostics (診断) プログラムは Dell™ コンピュータでのみ機能します。このプログラムを他のコンピュータで使用すると、コンピュータが誤って反応したり、エラーメッセージが表示されたりします。

Dell 診断プログラムでは、次のことができます。

- 1つまたはすべてのデバイスのクイックチェックまたは全体テストの実行
- テストの実行回数の選択
- テスト結果の画面への表示、印刷、ファイルへの保存
- エラーが検出された場合のテストの中止、または特定の数のエラーが発生した場合のテストの終了
- テストおよび実行方法を説明するオンラインのヘルプ 画面へのアクセス
- テストが正常に完了したかどうかを知らせるステータスマッセージの表示
- 問題が検出された場合のエラーメッセージの表示

### ハードドライブからの Dell Diagnostics (診断) プログラムの起動

- 1 コンピュータの電源を入れます (または再起動します)。
- 2 DELL™ ロゴが表示されたら、すぐに <F12> を押します。



**メモ :** 診断ユーティリティパーティションが見つからないことを知らせるメッセージが表示された場合は、『ユーザーズガイド』の「『Drivers and Utilities CD』からの Dell Diagnostics (診断) プログラムの起動」を参照してください。

キーを押すタイミングが遅れて、オペレーティングシステムのロゴが表示されてしまったら、Microsoft Windows デスクトップが表示されるまでそのまま待機します。デスクトップが表示されたら、コンピュータをシャットダウンして、操作をやりなおしてください。コンピュータのシャットダウン方法の詳細については、『ユーザーズガイド』を参照してください。

- 3 起動デバイスの一覧が表示されたら、**Boot to Utility Partition** (ユーティリティパーティションから起動) をハイライト表示して、<Enter> を押します。
- 4 Dell Diagnostics (診断) プログラムの **Main Menu** (メインメニュー) が表示されたら、実行するテストを選択します。これらのテストの詳細については、『ユーザーズガイド』を参照してください。

## 『Drivers and Utilities CD』からの Dell Diagnostics（診断）プログラムの起動

- 1 『Drivers and Utilities CD』をセットします。
- 2 コンピュータをシャットダウンし、再起動します。
- DELL ロゴが表示されたら、すぐに <F12> を押します。

キーを押すタイミングが合わず、Windows ロゴが表示されてしまったら、Windows デスクトップが表示されるまで待ちます。デスクトップが表示されたら、コンピュータをシャットダウンして、操作をやりなおしてください。

 **メモ :** 次の手順では、起動順序を 1 回だけ変更します。次回の起動時には、コンピュータはセットアップユーティリティで指定したデバイスから起動します。

- 3 起動デバイス一覧が表示されたら、**Onboard or USB CD-ROM Drive**（内蔵または USB CD-ROM ドライブ）をハイライト表示して、<Enter> を押します。
- 4 表示されたメニューから **Boot from CD-ROM**（CD-ROM から起動）オプションを選び、<Enter> を押します。
- 5 1 と入力して メニューを起動し、<Enter> を押して続行します。
- 6 番号の付いた一覧から **Run the 32 Bit Dell Diagnostics**（32 ビットの Dell 診断を実行）を選びます。複数のバージョンが表示されている場合、お使いのコンピュータに適切なバージョンを選びます。
- 7 Dell Diagnostics（診断）プログラムの **Main Menu**（メインメニュー）が表示されたら、実行するテストを選択します。

## テストを始める前に

 **警告 :** 『製品情報ガイド』の「安全にお使いいただくために」の注意事項に従い、本項の手順を開始してください。

- プリンタが接続されている場合はプリンタの電源を入れます。
- セットアップユーティリティを起動して、コンピュータの設定情報を確認し、コネクタなどのコンピュータのすべてのコンポーネントやデバイスを有効にします。

## ビープコード

お使いのコンピュータの起動時に、モニターにエラーメッセージまたは問題を表示できない場合、ビープ音が連続して鳴ることがあります。この連続したビープ音はビープコードと呼ばれ、問題を特定します。ビープコードには、ビープ音がまず 1 回鳴り、次に連続して 3 回鳴ってから、1 回鳴るものがあります（コード 1-3-1）。このビープコードは、コンピュータにメモリの問題が発生していることを示します。

起動時にコンピュータがビープ音を発する場合、次の手順を実行します。

- 1 『ユーザーズガイド』の「診断チェックリスト」にビープコードを書き込みます。
- 2 より重大な原因を調べるには、Dell Diagnostics（診断）プログラムを実行します。
- 3 テクニカルサポートを受けるには、デルにお問い合わせください。

コード	原因
1-1-2	マイクロプロセッサレジスタ障害
1-1-3	NVRAM 読み書き障害
1-1-4	ROM BIOS チェックサムエラー
1-2-1	プログラム可能インターバルタイマー障害
1-2-2	DMA 初期化工ラー
1-2-3	DMA ページレジスタ読み / 書きエラー
1-3	Video Memory テスト障害
1-3-1 から 2-4-4	メモリの認識 / 使用上のエラー
1-3-2	メモリの問題
3-1-1	スレーブ DMA レジスタ障害
3-1-2	マスター DMA レジスタ障害
3-1-3	マスター割り込みマスクレジスタ障害
3-1-4	スレーブ割り込みマスクレジスタ障害
3-2-2	割り込みベクトルロードエラー
3-2-4	Keyboard Controller テスト障害
3-3-1	NVRAM 電力損失
3-3-2	無効な NVRAM 構成
3-3-4	Video Memory テスト障害
3-4-1	画面の初期化工ラー
3-4-2	画面リトレース障害
3-4-3	ビデオ ROM の検索障害
4-2-1	タイマーチックなし
4-2-2	シャットダウン障害
4-2-3	ゲート A20 障害
4-2-4	プロテクトモードで予期しない割り込み発生
4-3-1	アドレス 0FFFFh 以上のメモリ障害
4-3-3	タイマーチップカウンタ 2 の障害
4-3-4	内部時計が停止
4-4-1	シリアルまたはパラレルポートテスト障害
4-4-2	シャドウメモリへのコード解凍不能
4-4-3	数値演算コプロセッサテスト障害
4-4-4	キャッシュテスト障害

## エラーメッセージ

 **メモ:** メッセージがリストにない場合は、メッセージが表示されたときに実行していたオペレーティングシステムまたはプログラムのマニュアルを参照してください。

起動中にエラーが発生した場合は、問題の内容を示すメッセージがモニターに表示されることがあります。問題の解決のアドバイスについては、『ユーザーズガイド』の「エラーメッセージ」を参照してください。

## 診断ライト

 **警告:** 『製品情報ガイド』の「安全にお使いいただくために」の注意事項に従い、本項の手順を開始してください。

問題のトラブルシューティングを容易にするため、正面に「1」、「2」、「3」、および「4」とラベルのついた4つのライトがあります。これらのライトは、消灯または緑色です。コンピュータの起動プロセスが正常に開始すると、これらのライトが点滅します。コンピュータが誤動作している場合は、ライトと電源ボタンのパターンによっても問題を識別できます。これらのライトは休止状態も示します。

### POST前の診断用ライト

診断ライト	電源ライト	問題の説明	推奨される処置
   	オフ	コンピュータに電源が供給されていません。	コンピュータを電源コンセントに接続します。正面パネルの電源ライトが点灯していることを確認します。電源ライトがオフの場合は、コンピュータが動作しているコンセントに接続されていることを確認してから、電源ボタンを押します。 それでも問題が解決しない場合は、デルに連絡してテクニカルサポートを受けてください。
   	オフ	コンピュータは電源コンセントに接続されており、通常のオフの状態です。	電源ボタンを押してコンピュータの電源をオンにします。 コンピュータの電源が入らない場合、正面パネルの電源ライトが点灯していることを確認します。電源ライトがオフの場合は、コンピュータが動作しているコンセントに接続されていることを確認してから、電源ボタンを押します。 それでも問題が解決しない場合は、デルに連絡してテクニカルサポートを受けてください。

診断ライト	電源ライト	問題の説明	推奨される処置
①②③④	緑色が点滅	コンピュータは省電力状態または「スリープ」モードになっています。	適切な手順に従って、コンピュータを「ウェイクアップ」します。詳細については、『ユーザーズガイド』の「アドバンス機能」を参照してください。  問題が解決せず、USB マウスまたはキーボードを使用してコンピュータをウェイクアップしようとしている場合は、マウスまたはキーボードを PS/2 マウスまたはキーボードに取り替えて、コンピュータをウェイクアップしてください。
①②③④	緑色が点滅	コンピュータは省電力状態または「スリープ」モードになっています。	適切な手順に従って、コンピュータを「ウェイクアップ」します。詳細については、『ユーザーズガイド』の「アドバンス機能」を参照してください。  問題が解決せず、USB マウスまたはキーボードを使用してコンピュータをウェイクアップしようとしている場合は、マウスまたはキーボードを PS/2 マウスまたはキーボードに取り替えて、コンピュータをウェイクアップしてください。
①②③④ (点滅)	黄色が点灯	BIOS が実行されていません。	プロセッサが正しく取り付けられていることを確認し、コンピュータを再起動します。『ユーザーズガイド』の「プロセッサ」を参照してください。  それでも問題が解決しない場合は、デルに連絡してテクニカルサポートを受けてください。
①②③④ (点滅)	黄色に点滅	電源装置または電源ケーブルに問題が発生した可能性があります。	『ユーザーズガイド』の「電源の問題」の手順を実行します。  それでも問題が解決しない場合は、デルに連絡してテクニカルサポートを受けてください。
①②③④ (点滅)	黄色が点灯	システム基板に問題が発生した可能性があります。	デルに連絡してテクニカルサポートを受けてください。
①②③④ (点滅)	黄色が点灯	仕様の異なるプロセッサが取り付けられています。	『ユーザーズガイド』の「プロセッサの問題」の手順を実行します。

診断ライト	電源ライト	問題の説明	推奨される処置
	黄色が点灯 (点滅)	グラフィックライザーカードまたはメモリライザーカードなどのプラグインコンポーネントに障害発生の可能性があります。	必要な電源ケーブルがメモリとグラフィックのライザーカードに接続されていることを確認します。 『ユーザーズガイド』の「電源の問題」の手順を実行します。
	黄色が点灯 (点滅)	電源装置に障害が発生した可能性があります。	両方の電源装置ケーブルがマザーボードに接続されていることを確認します。

## POST 実行中の診断用ライトコード

電源ライトは、POST 実行中に診断ライトコードとして緑色に点灯します。

ライトパターン	問題の説明	推奨される処置
	プロセッサに障害が発生した可能性があります。	プロセッサを取り付けなおし、コンピュータ再起動します。
	拡張カードに問題が発生した可能性があります。	<p>1 (グラフィックカード以外の) カードを 1 つ取り外して、コンピュータを再起動します。</p> <p>2 問題が解決しない場合は、取り外したカードを取り付け、別のカードを取り外して、コンピュータを再起動します。</p> <p>3 それぞれのカードについて、この手順を繰り返します。コンピュータが正常に起動する場合は、コンピュータから取り外した最後のカードのリソースコンフリクトのトラブルシューティングを行います（「ソフトウェアとハードウェアの非互換性の解決」（125 ページ）を参照）。</p> <p>4 問題が解決しない場合は、デルにお問い合わせください。</p>
	グラフィックカードに障害が発生している可能性があります。	<p>1 コンピュータにグラフィックカードがある場合、カードを取り外して、取り付けなおし、コンピュータを再起動します。</p> <p>2 問題が解決しない場合は、動作確認済みの別のグラフィックカードを取り付け、コンピュータを再起動します。</p> <p>3 それでも問題が解決しない場合、またはグラフィック機能がオンボードの場合、デルにお問い合わせください。</p>

ライトパターン	問題の説明	推奨される処置
① ② ③ ④	フロッピードライブまたはハードドライブに障害が発生している可能性があります。	すべての電源ケーブルおよびデータケーブルを接続しなおし、コンピュータを再起動します。
① ② ③ ④	USB に問題が発生した可能性があります。	すべての USB デバイスを取り付けなおし、ケーブル接続を確認して、コンピュータを再起動します。
① ② ③ ④	メモリモジュールが検出されません。	<p>1 メモリモジュールを装着しなおし、コンピュータがメモリと正常に通信していることを確認します。</p> <p>2 コンピュータを再起動します。</p> <p>3 問題が解決しない場合は、すべてのメモリモジュールを取り外し、メモリモジュールコネクタ DIMM_1 にメモリを 1 つ取り付けます。</p> <p>4 コンピュータを再起動します。</p> <p>メモリがペアになっていないので、システムがパフォーマンスもエラー訂正機能も低下した状態で動作することを示すメッセージが表示されます。</p> <p>5 &lt;F1&gt; を押してオペレーティングシステムを起動します。</p> <p>6 Dell Diagnostics（診断）プログラムを実行します。 詳細については、『ユーザーズガイド』を参照してください。</p> <p>7 テストしたメモリモジュールに問題がなければ、コンピュータをシャットダウンし、そのメモリモジュールを取り外し、残りのメモリモジュールについて、起動時または診断プログラムのテスト時にメモリエラーが発生するまで、この手順を繰り返します。</p> <p>最初にテストしたメモリモジュールに問題があった場合でも、残りのメモリモジュールに問題がないか確認するため、すべてのメモリモジュールに対し、同じ手順を繰り返します。</p> <p>8 問題のあるメモリモジュールが判明したら、デルに連絡して交換を依頼してください。</p>

ライトパターン	問題の説明	推奨される処置
①②③④	メモリモジュールが検出されません。	<ul style="list-style-type: none"> <li>取り付けているメモリモジュールが 1 つの場合、そのモジュールを取り付けなおしてコンピュータを再起動します。</li> <li>取り付けているメモリモジュールが 2 つ以上の場合、モジュールを取り外し、モジュールの 1 つを取り付けなおして、コンピュータを再起動します。コンピュータが正常に起動する場合は、別のモジュールを取り付けなおします。障害のあるモジュールが見つかるまで、またはエラーなしですべてのモジュールを取り付けなおすまで続けます。</li> <li>同じ種類の正常に動作しているメモリがある場合、そのメモリをコンピュータに取り付けます。</li> <li>問題が解決しない場合は、デルにお問い合わせください。</li> </ul>
①②③④	システム基板に問題が発生しました。	デルに連絡してテクニカルサポートを受けてください。
①②③④	メモリモジュールは検出されました BUT メモリ構成または互換性エラーが存在します。	<ul style="list-style-type: none"> <li>特別なメモリモジュールやメモリコネクタ装着の要件がないか確認します。</li> <li>取り付けたメモリモジュールにシステムとの互換性があることを確認します。</li> <li>メモリモジュールを取り付けなおして、コンピュータを再起動します。</li> <li>問題が解決しない場合は、デルにお問い合わせください。</li> </ul>
①②③④	ルーチンのシステム動作がビデオ初期化よりも先に行われています。	モニターに表示されるメッセージを待ちます。
①②③④	拡張カードに問題が発生した可能性があります。	<ol style="list-style-type: none"> <li>(グラフィックカード以外の) カードを 1 つ取り外して、コンピュータを再起動します。</li> <li>問題が解決しない場合は、取り外したカードを取り付け、別のカードを取り外して、コンピュータを再起動します。</li> <li>それぞれのカードについて、この手順を繰り返します。コンピュータが正常に起動する場合は、コンピュータから取り外した最後のカードのリソースコンフリクトのトラブルシューティングを行います (「ソフトウェアとハードウェアの非互換性の解決」(125 ページ) を参照)。</li> <li>問題が解決しない場合は、デルにお問い合わせください。</li> </ol>

ライトパターン	問題の説明	推奨される処置
①②③④	ルーチンのシステム動作がビデオ初期化よりも先に行われています。	モニターに表示されるメッセージを待ちます。
①②③④	POST 後、コンピュータは通常の動作状態にあります。 <b>メモ：</b> 診断ライトが短時間ちらつきます。オペレーティングシステムが正常に起動すると消灯します。	なし。

## よくある質問

質問	解決方法	その他の情報
モニター 2 台を使用してコンピュータをセットアップするには？	デュアルモニターセットアップに対応するグラフィックカードがコンピュータに装備されている場合は、同梱の Y-ケーブルを使います。Y ケーブルには、一端に 1 個のコネクタが付いており（このコネクタを背面パネルに接続）、もう一端に 2 個のコネクタが付いています（これらのコネクタにモニターケーブルを接続）。	コンピュータにデュアルモニターを接続する方法については、「コンピュータのセットアップ（タワー型）」（101 ページ）または、「コンピュータのセットアップ（デスクトップ型）」（106 ページ）を参照してください。
モニターケーブルがコンピュータ背面のコネクタにはまらない場合に、モニターを接続するには？	グラフィックカードには DVI コネクタが付いていて、お使いのモニターには VGA コネクタが付いている場合は、アダプタを使用する必要があります。アダプタは同梱されています。	コンピュータにモニターを接続する方法については、「コンピュータのセットアップ（タワー型）」（101 ページ）または、「コンピュータのセットアップ（デスクトップ型）」（106 ページ）を参照してください。詳細については、デルにお問い合わせください。デルへのお問い合わせ方法については、『ユーザーズガイド』を参照してください。
スピーカーを接続するには？	サウンドカードを取り付けている場合は、スピーカーをサウンドカードのコネクタに接続します。「コンピュータのセットアップ（タワー型）」（101 ページ）、または「コンピュータのセットアップ（デスクトップ型）」（106 ページ）を参照してください。	詳細については、スピーカーに同梱のマニュアルを参照してください。

質問	解決方法	その他の情報
USB または IEEE 1394 デバイスに対応した正しいコネクタを見つけるには？	<p>お使いのタワーコンピュータには、8 個の USB コネクタ（正面に 2 個、内部に 1 個、背面に 5 個）と、オプションの正面 IEEE 1394 コネクタ 1 個が付いています。</p> <p>お使いのデスクトップコンピュータには、8 個の USB コネクタ（正面に 2 個、内部に 1 個、背面に 5 個）と、オプションの正面 IEEE 1394 コネクタ 1 個が付いています。</p> <p>このコネクタは、IEEE 1394 カードを購入された場合にのみ利用できます。カードを購入する場合は、 Dell にお問い合わせください。IEEE 1394 カードの詳細については、『ユーザーズガイド』を参照してください。</p>	コンピュータの正面および背面図は、「コンピュータについて」（111 ページ）を参照してください。『ユーザーズガイド』を見つけるには、「情報の検索」（97 ページ）を参照してください。
コンピュータのハードウェア情報や技術仕様を参照するには？	『ユーザーズガイド』には、コンピュータとハードウェアについての詳細が記載された仕様表があります。『ユーザーズガイド』を見つけるには、「情報の検索」（97 ページ）を参照してください。	デルサポートサイト <a href="http://support.jp.dell.com">support.jp.dell.com</a> にアクセスすると、サポートメニューを使って、最新技術についてのホワイトペーパーなどを参照することができます。
コンピュータのマニュアルを見つけるには？	<p>次のマニュアルをご利用いただけます。</p> <ul style="list-style-type: none"> <li>・『ユーザーズガイド』</li> <li>・『製品情報ガイド』</li> <li>・『システム情報ラベル』</li> </ul> <p>これらの文書を見つけるには、「情報の検索」（97 ページ）を参照してください。</p>	マニュアルをなくした場合は、デルサポートサイト <a href="http://support.jp.dell.com">support.jp.dell.com</a> でご覧いただけます。



# 索引

## C

### CD

オペレーティングシステム, 100

## D

Dell Diagnostics (診断)  
プログラム, 128

Dell Premier サポートウェブ  
サイト, 98

## I

IRQ コンフリクト, 125

## M

Microsoft Windows ラベル, 98

## R

### ResourceCD

Dell Diagnostics (診断)  
プログラム, 128

## U

### USB

コネクタ, 112, 115, 116

## W

### Windows XP

再インストール, 100  
システムの復元, 126  
ヘルプとサポートセンター, 99

## あ

安全にお使いいただくため, 98

## え

エラーメッセージ  
診断ライト, 131  
ビープコード, 129  
エンドユーザーライセンス  
契約, 98

## お

オペレーティングシステム  
CD, 100  
再インストール, 100  
オペレーティングシステム  
CD, 100

## か

カード  
スロット, 113, 118  
快適な使い方, 98

## き

キーボード  
コネクタ, 115

## こ

コネクタ  
USB, 112, 115, 116  
キーボード, 115  
サウンド, 114, 115  
シリアル, 115  
電源, 113, 118  
ネットワークアダプタ, 115  
パラレル, 114  
ヘッドフォン, 112, 117  
マウス, 114  
ライン出力, 114  
ライン入力, 115  
コンフリクト  
ソフトウェアおよびハード  
ウェアの非互換性, 125  
コンピュータ  
以前の状態の復元, 126  
ビープコード, 129

## さ

サービスタグ , 98  
サウンドコネクタ  
  ライン出力 , 114  
  ライン入力 , 115  
サポートサイト , 99

## し

システムの復元 , 126  
診断プログラム , 128  
  ビープコード , 129  
  ライト , 112, 117, 131  
診断ライト , 131

## せ

製品情報ガイド , 98

## そ

ソフトウェア  
  コンフリクト , 125

## て

電源  
  コネクタ , 113, 118  
  ボタン , 112, 117  
  ライト , 112, 117  
デル  
  サポートサイト , 99

## と

トラブルシューティング , 128  
  以前の状態の復元 , 126  
  診断ライト , 131  
  ヘルプとサポートセンター , 99

## に

認可機関の情報 , 98

## ね

ネットワーク  
  コネクタ , 115

## は

ハードウェア  
  Dell Diagnostics (診断)  
    プログラム , 128  
  コンフリクト , 125  
  ビープコード , 129  
  ハードウェアに関するトラブルシューティング , 125  
  ハードドライブ  
    動作ライト , 111, 112, 116, 117

## ひ

ビープコード , 129

## へ

ヘッドフォン  
  コネクタ , 112, 117  
ヘルプとサポートセンター , 99  
ヘルプファイル  
  Windows ヘルプとサポートセンター , 99

## ほ

保証に関する情報 , 98

## ま

マウス  
  コネクタ , 114  
マニュアル  
  安全について , 98  
  エンドユーザー ライセンス契約 , 98  
  オンライン , 99  
  快適な使い方 , 98  
  規制 , 98  
  クイックリファレンス , 97  
  製品情報ガイド , 98  
  保証 , 98  
  ユーザーズガイド , 98

## も

### 問題

- Dell Diagnostics (診断)
  - プログラム, 128
  - 以前の状態の復元, 126
  - コンフリクト, 125
  - 診断ライト, 131
  - ビープコード, 129

## μ

### ユーザーズガイド, 98

## ら

### ライト

- コンピュータの背面, 131
- 診断, 112, 117, 131
- 電源, 112, 117
- ネットワーク, 114, 115
- ネットワーク動作, 115
- ハードドライブ動作, 111,
  - 112, 116, 117
- リンク保全, 114

### ラベル

- Microsoft Windows, 98
- サービスタグ, 98

